

**Quality Assurance Project Plan
Former Fort Ord, California, Volume I
Appendix D, Revision 9
Landfill Gas Monitoring at Operable Unit 2**



Prepared for:

U.S. Department of the Army
Fort Ord BRAC
4463 Gigling Road, Room 101
Seaside, CA 93955-7302

USACE Contract No. W9123819C0027

Task No. 5

Prepared by:

Ahtna Global, LLC
9699 Blue Larkspur Lane, Suite 201
Monterey, CA 93940-6581

Report Date: **September 2024**

Report Version: **Draft**

Table of Contents

Table of Contents.....	i
Acronyms and Abbreviations.....	iv
1.0 Introduction.....	1
2.0 Project Management.....	2
2.1 Worksheet #1 & 2: Title and Approval Page.....	2
2.2 Worksheet #3 & 5: Project Organization and QAPP Distribution.....	5
2.3 Worksheet #4, 7 & 8: Personnel Qualifications and Sign-off Sheet.....	6
2.4 Worksheet #6: Communication Pathways.....	9
2.5 Worksheet #9: Project Planning Session Summary.....	12
3.0 Project Quality Objectives.....	13
3.1 Worksheet #10: Conceptual Site Model.....	13
3.1.1 Background and History.....	13
3.1.2 Sources of Known or Suspected Hazardous Waste.....	15
3.1.3 Known Contaminants.....	15
3.1.4 Fate and Transport Considerations.....	15
3.1.5 Potential Receptors and Exposure Pathways.....	15
3.1.6 Land Use Considerations.....	16
3.1.7 Physiography and Topography.....	16
3.1.8 Geology and Hydrogeology.....	16
3.2 Worksheet #11: Project/Data Quality Objectives.....	17
3.2.1 DQO #1: TTU Source Testing.....	17
3.2.2 DQO #2: Operational Influent LFG Testing.....	21
3.2.3 DQO #3: Compliance Perimeter Probes.....	23
3.2.4 DQO #4: Monitoring Probes and Vents.....	26
3.3 Worksheet #12: Measurement Performance Criteria.....	29
3.3.1 Analytical Group/Method: Fixed Gases/ASTM D1945.....	29
3.3.2 Analytical Group/Method: Sulfur Gases/ASTM D5504.....	29
3.3.3 Analytical Group/Method: Volatile Organic Compounds (VOC)/TO-15.....	30
3.4 Worksheet #13: Secondary Data Uses and Limitations.....	32
3.5 Worksheet #14 & 16: Project Tasks and Schedule.....	34
3.6 Worksheet #15: Laboratory-Specific Detection/Quantitation Limits ^{1,2}	35
3.6.1 Analytical Group/Method: Fixed Gases/ASTM D1945.....	35
3.6.2 Analytical Group/Method: Sulfur Gases/ASTM D5504.....	36
3.6.3 Analytical Group/Method: VOC/TO-15 – DQO #1: TTU Source Testing and DQO #2: Operational Influent LFG Testing (see Worksheet #11).....	37

3.6.4	Analytical Group/Method: VOC/TO-15 – DQO #3: Compliance Perimeter Probes (see Worksheet #11)	39
3.6.5	Mobile Laboratory Analytical Group/Methods – DQO #1: TTU Source Testing (see Worksheet #11).....	41
4.0	Sample Design.....	42
4.1	Worksheet #17: Sampling Design and Rationale	42
4.2	Worksheet #18: Sampling Locations and Methods	43
4.2.1	Operable Unit 2 Landfills	43
4.2.2	Thermal Treatment Unit/Extraction Points.....	48
5.0	Sampling Requirements.....	50
5.1	Worksheet #19 & 30: Sample Containers, Preservation, and Hold Times.....	50
5.2	Worksheet #20: Field Quality Control Summary	52
5.3	Worksheet #21: Field SOPs	53
5.4	Worksheet #22: Field Equipment Calibration, Maintenance, Testing, and Inspection	54
6.0	Analytical Requirements.....	56
6.1	Worksheet #23: Analytical SOPs	56
6.2	Worksheet #24: Analytical Instrument Calibration	57
6.3	Worksheet #25: Analytical Instrument and Equipment Maintenance, Testing, and Inspection	59
6.4	Worksheet #26 & 27: Sample Handling, Custody, and Disposal.....	61
6.5	Worksheet #28: Analytical Quality Control and Corrective Action.....	62
6.5.1	Analytical Group/Method/SOP: Fixed Gases/ASTM D1945/SOP #54	62
6.5.2	Analytical Group/Method/SOP: Sulfur Gases/ASTM D5504/A.5504.04	63
6.5.3	Analytical Group/Method/SOP: VOCs/TO-15/SOP #6.....	63
7.0	Data Management and Data Review	65
7.1	Worksheet #29: Project Documents and Records	65
7.2	Worksheet #31, 32 & 33: Assessments and Corrective Action.....	66
7.3	Worksheet #34: Data Verification and Validation Inputs	70
7.4	Worksheet #35: Data Verification Procedures	72
7.5	Worksheet #36: Data Validation Procedures.....	73
7.6	Worksheet #37: Data Usability Assessment	75
8.0	References	80

Figures

- 1 Location Map
- 2 Landfill Gas Monitoring Locations
- 3 Landfill Gas Extraction and Treatment System

Attachments

- A Standard Operating Procedures
- B Analytical Laboratory Information
- C Field Documentation Forms
- D Three Phase Quality Control Process and Documentation
- E Electronic Data Deliverable File Specifications

Acronyms and Abbreviations

°F	degrees Fahrenheit
µg/m ³	micrograms per cubic meter
%	percent
%D	percent difference
%R	percent recovery
%v	percent [by] volume
ADR	Automated Data Review
AEI	Ahtna Environmental, Inc.
Ahtna	Ahtna Global, LLC
Air District	Monterey Bay Air Resources District
AMSL	above mean sea level
ARAR	applicable or relevant and appropriate requirement
Army	U.S. Department of the Army
ASTM	ASTM International
bgs	below ground surface
BRAC	Base Realignment and Closure
Btu	British thermal unit(s)
Btu/hr	Btu per hour
CAMU	Corrective Action Management Unit
CAS	Chemical Abstracts Service
CCR	California Code of Regulations
CCV	continuing calibration verification
CERCLA	Comprehensive Environmental Response, Compensation, and Liability Act
CQM	Construction Quality Management
CPR	cardiopulmonary resuscitation
CO	carbon monoxide
CO ₂	carbon dioxide
COC	chemical of concern
CCRWQCB	Central Coast Regional Water Quality Control Board
DoD	Department of Defense
DQI	data quality indicator
DQO	data quality objective
DTSC	California Department of Toxic Substances Control
EDD	electronic data deliverable
ELAP	Environmental Laboratory Accreditation Program
EP	extraction point
EPA	U.S. Environmental Protection Agency

Acronyms and Abbreviations (Continued)

ESD	Explanation of Significant Differences
Eurofins	Eurofins Air Toxics, Inc.
EW	extraction well
FODIS	Fort Ord Data Integration System
FTL	Field Team Lead
GAC	granular activated carbon
GC	gas chromatograph
GCMS	gas chromatograph(y)/mass spectroscop(e/y)
H&S	health and safety
HAZWOPER	Hazardous Waste Operations and Emergency Response
HHRA	human health risk assessment
HMP	Habitat Management Plan
ICAL	initial calibration
ICV	initial calibration verification
lb/MMBtu	pounds per million British thermal units
LCS	laboratory control sample
LDC	Laboratory Data Consultants
LFG	landfill gas
LOD	limit of detection
LOQ	limit of quantitation
MEC	munitions and explosives of concern
N ₂	nitrogen
NA	not applicable
NELAP	National Environmental Laboratory Accreditation Program
NMOC	non-methane organic compounds
NO	nitrogen oxide
NO _x	nitrogen oxides
O&M	operations and maintenance
O ₂	oxygen
OU2	Operable Unit 2
PARCCS	precision, accuracy, representativeness, comparability, completeness, and sensitivity
PCE	tetrachloroethene
PDL	project decision limit
PE	registered Professional Engineer
PM	Project Manager
ppbv	parts per billion by volume

Acronyms and Abbreviations (Continued)

ppmv	parts per million by volume
QA	quality assurance
QAPP	Quality Assurance Project Plan
QC	quality control
QSM	Quality Systems Manual
RI	Remedial Investigation
ROD	Record of Decision
RPD	relative percent difference
RRT	relative retention time
RSD	relative standard deviation
RSL	regional screening level
SARA	Superfund Amendment and Reauthorization Act
scfm	standard cubic feet per minute
SGP	soil gas probe
SL	screening level
SO ₂	sulfur dioxide
SOP	standard operating procedure
SSHO	Site Safety and Health Officer
THC	total hydrocarbons
TTU	thermal treatment unit
USACE	U.S. Army Corps of Engineers
VD	passive vent in Area D
VE	passive vent in Area E
VF	passive vent in Area F
VOC	volatile organic compound

1.0 Introduction

Ahtna Global, LLC (Ahtna) updated this Quality Assurance Project Plan (QAPP) under U.S. Army Corps of Engineers (USACE) Contract Number W9123819C0027 for response actions to be performed at the former Fort Ord (Figure 1) in accordance with the Comprehensive Environmental Response, Compensation, and Liability Act (CERCLA or “Superfund”) to address historical releases of chemicals of concern (COCs) at the former Fort Ord.¹ The QAPP was revised to:

- Add Atmospheric Analysis and Consulting as an additional laboratory for the analysis of sulfur compounds, and include applicable laboratory-specific Standard Operating Procedures (SOPs)
- Update SOPs in Attachment A;
- Update project personnel; and
- Update Detection Limits, Limits of Detection, and Limits of Quantification for U.S. Environmental Protection Agency (EPA) Method TO-15, ASTM International (ASTM) D1945, and ASTM D5504.

This QAPP is the governing guidance document for LFG and treatment system sampling and analyses associated with the Operable Unit 2 (OU2) Landfills. This QAPP details quality assurance (QA) and quality control (QC) procedures for sampling and analytical activities performed for the LFG extraction and treatment system, and the LFG monitoring program. The QAPP ensures the data generated follow the data quality indicators (DQIs) of precision, accuracy, representativeness, comparability, completeness, and sensitivity (PARCCS parameters), and are of sufficient quality to support project decisions.

The operation and maintenance (O&M) activities are in accordance with the *Record of Decision, Operable Unit 2, Fort Ord Landfills, Fort Ord, California* (OU2 Landfills ROD; Army, 1994) and the *Operations and Maintenance Plan Revision 4, Operable Unit 2 Landfills, Former Fort Ord, California* (O&M Plan; Ahtna, 2023b). This document is intended for use by field operators, supervisors, and data processors and managers responsible for implementing and coordinating field activities for the project.

¹ This document is Appendix D to the *Quality Assurance Project Plan, Superfund Response Actions, Former Fort Ord, California, Volume I*. Volume I is also the governing document for sampling and analysis of groundwater (Appendix A), soil (Appendix B), and soil gas (Appendix C). Volume II of the QAPP pertains to the former Fort Ord military munitions response program.

2.0 Project Management

2.1 Worksheet #1 & 2: Title and Approval Page

Site Name/Project Name:	Operable Unit 2 (OU2)
Site Location:	Former Fort Ord, California
Document Title:	Quality Assurance Project Plan, Former Fort Ord, California, Volume I, Appendix D, Draft Revision 9, Landfill Gas Monitoring at Operable Unit 2
Lead Organization:	U.S. Army Corps of Engineers
Preparer's Name, Organization, and Contact Info:	Eric Schmidt, Ahtna 9699 Blue Larkspur Lane, Suite 203, Monterey, CA 93940 (831) 287-5254, eschmidt@ahтна.net
Preparation Date:	9/2/2024
Revision Number:	9

Project Role	Name Organization	Signature	Date
Investigative Organization's Program Manager	Derek S. Lieberman Ahtna		
Investigative Organization's Project Chemist	Eric Schmidt Ahtna		
Investigative Organization's QC Manager	Bruce Wilcer Ahtna		
Lead Organization's Technical Lead	Erin Corr USACE		
Lead Organization's Project Chemist	Kyle Bayliff USACE		

Plans and reports from previous investigations relevant to this project:

Site Name/Project Name: Former Fort Ord/Superfund Response Actions

Site Location: Monterey County, California

Site Number/Code: Not Applicable (N/A)

Operable Units: OU2

Contractor Name: Ahtna Global, LLC

Contract Number: W9123819C0027

Contract Title: Former Fort Ord Basewide Groundwater and Soil Vapor Treatment and Monitoring, Former Fort Ord, California

Work Assignment Number: N/A

Guidance used to prepare QAPP: Uniform Federal Policy for Quality Assurance Project Plans, Optimized UFP-QAPP Worksheets, March 2012, Revision 1
Department of Defense (DoD) Quality Systems Manual (QSM) for Environmental Laboratories, Version 5.4, October 2021
DoD General Data Validation Guidelines, Environmental Data Quality Workgroup, Revision 1, September 2019
Data Validation Guidelines Module 1: Data Validation Procedure for Organic Analysis by GC/MS, May 2020
Data Validation Guidelines Module 1, 2, and 4 Revised Blank Qualification Table, May 2021

Regulatory Program: Comprehensive Environmental Response Compensation and Liability Act (CERCLA) as amended by Superfund Amendment and Reauthorization Act (SARA)

Approval Entities: U.S. Environmental Protection Agency (EPA), California Department of Toxic Substance Control (DTSC), and Regional Water Quality Control Board, Central Coast Region (CCRWQCB)

Data Users: U.S. Department of the Army (Army), USACE, EPA (and its consultant TechLaw, Inc.), DTSC, CCRWQCB, Army/USACE contractors, citizen groups, and members of the public


Organizational partners (stakeholders) and connection with lead organization: USACE, Army (lead agency/owner), EPA (lead oversight agency), DTSC (support agency), and CCRWQCB (support agency)

The QAPP is (select one): Generic: _____ Project Specific: _____

Title	Company	Date
OU2 Landfills ROD	Army	07/15/1994
Explanation of Significant Differences (ESD), OU2, Fort Ord Landfill	Army	08/03/1995
ESD, No Further Action for Munitions and Explosives of Concern, Landfill Gas Control, Reuse of Treated Groundwater, Designation of Corrective Action Management Unit (CAMU) Requirements as Applicable or Relevant and Appropriate Requirements (ARARs), OU2, Fort Ord Landfills	Army	10/04/2006
O&M Plan, OU2 Landfills, Revision 2	Shaw Environmental, Inc.	09/04/2008
QAPP, Volume I, Appendix D, Final Revision 1, OU2 Landfills	Ahtna Environmental, Inc. (AEI)	09/04/2016
QAPP, Volume I, Appendix D, Final Revision 2, OU2 Landfills	AEI	09/11/2017
QAPP, Volume I, Appendix D, Final Revision 3, OU2 Landfills	AEI	05/31/2019
QAPP, Volume I, Appendix D, Final Revision 4, OU2 Landfills	AEI	04/29/2020
QAPP, Volume I, Appendix D, Final Revision 5, OU2 Landfills	Ahtna	04/26/2021
QAPP, Volume I, Appendix D, Final Revision 6, OU2 Landfills	Ahtna	03/16/2022
QAPP, Volume I, Appendix D, Final Revision 7, OU2 Landfills	Ahtna	05/25/2023
QAPP, Volume I, Appendix D, Final Revision 8, OU2 Landfills	Ahtna	05/14/2024
O&M Plan Revision 4, OU2 Landfills	Ahtna	12/29/2023

2.2 Worksheet #3 & 5: Project Organization and QAPP Distribution

Reporting relationships between organizations involved in the project, including the lead organization, contractors, and subcontractor organizations are identified below:

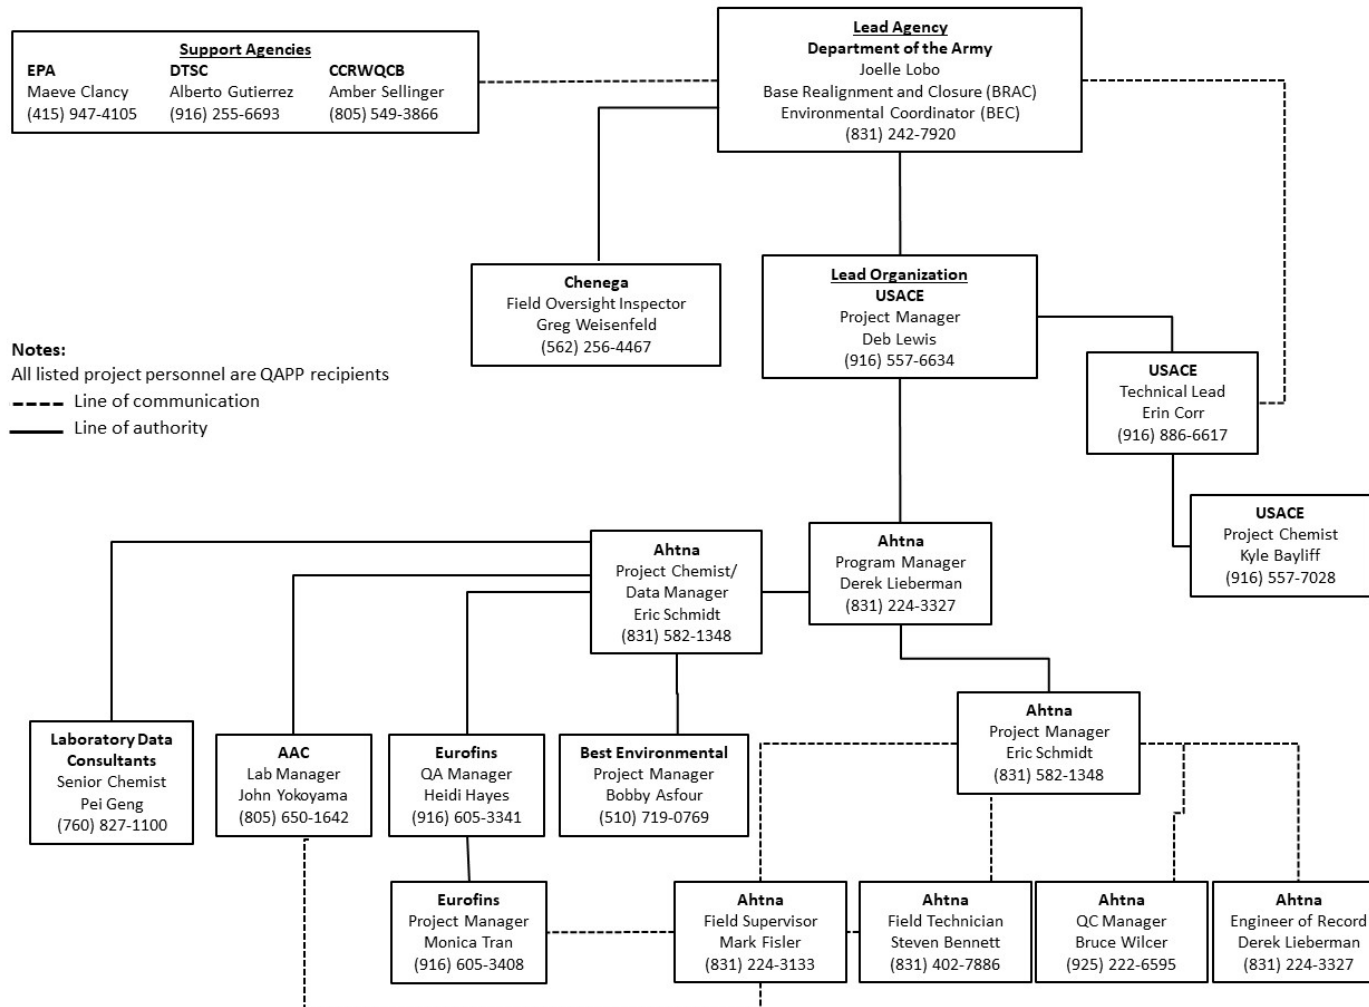

2.3 Worksheet #4, 7 & 8: Personnel Qualifications and Sign-off Sheet

Ahtna

Name	Project Title/Role	Education/ Experience	Specialized Training/ Certifications ¹	Signature ²	Date
Derek Lieberman	Program Manager/ Engineer of Record	Resume on file	First aid, CPR, MEC, PE, H&S, HAZWOPER		
Eric Schmidt	Project Chemist/Project Manager/Data Manager	Resume on file	First aid, CPR, MEC, HAZWOPER, CQM		
Mark Fisler	Field Supervisor	Resume on file	First aid, CPR, MEC, HAZWOPER, CQM		
Bruce Wilcer	QC Manager	Resume on file	HAZWOPER, CQM		
Steven Bennett	Field Technician	Resume on file	First aid, CPR, MEC, HAZWOPER		

Notes:

¹ Specialized Training/Certifications Key:

CPR: cardiopulmonary resuscitation

CQM: Construction Quality Management.

H&S: health and safety training including, but not limited to: hazard communication, fire extinguisher use, defensive driving, behavior-based safety, confined spaces.

HAZWOPER: 40-hour and current 8-hour annual refresher Hazardous Waste Operations and Emergency Response

MEC: munitions and explosives of concern recognition and safety training

PE: registered Professional Engineer

² Signatures indicate personnel have read and agree to implement this QAPP as written.

Laboratory: Eurofins Air Toxics, Inc. (Eurofins)

Name	Project Title/Role	Education/Experience	Specialized Training/Certifications	Signature ¹	Date
Brian Whittaker	Project Manager	Resume on file	Not applicable		
Heidi Hayes	QA Manager	Resume on file	Not applicable		

Laboratory: Atmospheric Analysis-Consulting Lab. (AAC)

Name	Project Title/Role	Education/Experience	Specialized Training/Certifications	Signature ¹	Date
John Yokogawa	Lab Manager	Resume on file	Not applicable		

Notes:

¹ Signatures indicate personnel have read and agree to implement this QAPP as written.

Mobile Laboratory: Best Environmental

Name	Project Title/ Role	Education/Experience	Specialized Training/Certifications	Signature ¹	Date
Bobby Asfour	Project Manager	Resume on file	Not applicable		

Notes:

¹ Signatures indicate personnel have read and agree to implement this QAPP as written.

Worksheet #4, 7 & 8: Personnel Qualifications and Sign-Off Sheet (Continued)

Organization: Laboratory Data Consultants (Ahtna Subcontractor)

Project Personnel	Title	Telephone	Signature
Pei Geng	Senior Chemist	(760) 827-1100	

2.4 Worksheet #6: Communication Pathways

Communication Driver	Organization	Name and Position	Contact Information	Procedure (timing, pathways, documentation, etc.)
Regulatory agency interface	Army	Joelle Lobo, BEC	(831) 242-7920 joelle.l.lobo.civ@army.mil	Materials and information regarding the project will be forwarded by email to the regulatory agencies through the Army BEC for review at scheduled Base Realignment and Closure (BRAC) Cleanup Team meetings.
Army BRAC Office interface	USACE	Erin Corr, Technical Lead	(916) 886-6617 Erin.N.Corr@usace.army.mil	Materials and information regarding the project will be forwarded by email to the Army BRAC Office through USACE Technical Lead for review at scheduled Army Internal Progress Meetings.
Lead Organization Project Manager interface	Ahtna	Eric Schmidt, Project Manager	(831) 582-1348 eschmidt@ahtna.net	Materials and information regarding the project will be forwarded by email to USACE by the Ahtna Project Manager for review at weekly status meetings.
Field progress reports	Ahtna	Mark Fidler, Field Supervisor	(831) 224-3133 mfidler@ahtna.net	Ahtna Field Supervisor will report fieldwork progress by email to Ahtna Project Manager daily.
Stop work due to safety issues	Ahtna	Holly Dillon, Site Safety and Health Officer	(831) 324-3299 hdillon@ahtna.net	All onsite Personnel have authority and responsibility to stop work on the site if an imminent hazard is observed. The Site Safety and Health Officer will be consulted by phone immediately for further recommendations.
QAPP changes prior to fieldwork	Ahtna	Eric Schmidt, Project Manager	(831) 582-1348 eschmidt@ahtna.net	Significant changes to the QAPP must approved by the Ahtna Project Manager, USACE Technical Lead, and USACE Project Chemist, and submitted to the regulatory agencies for review and comment via email (where the subject of the email is "QAPP Change") prior to implementation.

Communication Driver	Organization	Name and Position	Contact Information	Procedure (timing, pathways, documentation, etc.)
QAPP changes during project execution ¹	Ahtna	Eric Schmidt, Project Manager	(831) 582-1348 eschmidt@ahtna.net	Field changes to the QAPP must be approved by the Ahtna Project Manager, USACE Technical Lead, and USACE Project Chemist by phone or email (where the subject of the email is "Field Change Request") prior to implementation.
Field corrective actions ¹	Ahtna	Mark Fisler, Field Supervisor	(831) 224-3133 mfisler@ahtna.net	Ahtna Field Supervisor will determine the need for corrective action and will report field issues to Ahtna Project Manager daily. Ahtna Project Manager will notify the Ahtna QC Manager of issues within one business day and will respond to the request for corrective action within 24 hours.
Sample receipt variances	SGS	Heidi Hayes, QA Officer	(916)-605-3341 Heidi.Hayes@et.eurofinsus.com	Discrepancies or non-compliance are documented immediately on the Sample Receipt Confirmation Form, which is automatically emailed to the Eurofins Project Manager, who will immediately contact the Ahtna Project Chemist for resolution.
Laboratory QC variances	Ahtna	Eric Schmidt, Project Chemist	(831) 582-1348 eschmidt@ahtna.net	Ahtna Project Chemist will report laboratory QC issues to USACE Technical Lead and USACE Project Manager by email within two business days of the occurrence.
Analytical corrective actions ¹	Ahtna	Eric Schmidt, Project Chemist	(831) 582-1348 eschmidt@ahtna.net	Ahtna Project Chemist will determine the need for corrective action and will report nonconformance and QC issues to the Ahtna Project Manager and USACE Project Chemist by email within two business days of the occurrence.
Data verification issues	Ahtna	Eric Schmidt, Project Chemist	(831) 582-1348 eschmidt@ahtna.net	Ahtna Project Chemist will report incomplete records issues to USACE Technical Lead and USACE Project Manager by email within five business days of completing data verification (Worksheet #35).

Communication Driver	Organization	Name and Position	Contact Information	Procedure (timing, pathways, documentation, etc.)
Data validation issues	Ahtna	Eric Schmidt, Project Chemist	(831) 582-1348 eschmidt@ahtna.net	Ahtna Project Chemist will report non-compliance with procedures to USACE Technical Lead and USACE Project Manager by email within five business days of receiving data validation reports.
Data usability issues	Ahtna	Eric Schmidt, Project Chemist	(831) 582-1348 eschmidt@ahtna.net	Ahtna Project Chemist will report data quality issues that could impact data usability to USACE Technical Lead/USACE Project Chemist within five business days of completing the usability assessment (Worksheet #37).
Data review corrective actions	Ahtna	Eric Schmidt, Project Chemist	(831) 582-1348 eschmidt@ahtna.net	Ahtna Project Chemist will determine the need for corrective action and will provide recommendations to the Ahtna Project Manager and USACE Technical Lead by email within five business days of completing the data review.
Release of analytical data	Ahtna	Eric Schmidt, Project Chemist	(831) 582-1348 eschmidt@ahtna.net	Analytical data will not be released until review or validation is completed, as appropriate. The Ahtna Project Chemist will approve the release of data to the Ahtna Project Manager.
Data import and export	Ahtna	Teri Farrell-Bage, Database Manager	(925) 915-6255 tbage@ahtna.net	The Ahtna Database Manager coordinates with the Ahtna Field Supervisor and SGS Project Manager to obtain data for electronic upload/manual entry into the data management system, QC review of the entered data, and preparation of the required tables and plots of the data. Coordinates with the Ahtna Project Chemist for QC purposes and forwards deliverables to the Project Manager.

Notes:

¹ In the event significant QAPP changes occur during project execution or significant corrective action is required for field or laboratory activities, information concerning the QAPP change or corrective action will be provided to the regulatory agencies by the Army within 14 days of the event or the next scheduled meeting of the BRAC Cleanup Team, whichever is sooner.

2.5 Worksheet #9: Project Planning Session Summary

Date of Planning Session #1: June 10, 2024

Purpose: Determine whether revisions are appropriate per data quality objectives (DQOs) identified in QAPP Worksheet #11.

Participants:

Name	Title/Role	Affiliation	Telephone	email
Derek Lieberman	Program Manager	Ahtna	831-224-3327	dlieberman@ahtna.net
Eric Schmidt	Project Chemist/Project Manager	Ahtna	831-582-1348	eschmidt@ahtna.net

Planning Session Summary:

- Reviewed contract requirements and QAPP schedule.
- Determined data review is necessary to evaluate changes in LFG monitoring frequency and target analyte lists per DQOs.

Action Items:

Action	Responsible Party	Due Date	Completion Date
Data review to determine whether changes in sampling frequency and target analyte lists are required for QAPP revision.	Eric Schmidt, Ahtna	June 12, 2024	June 14, 2024
Review QAPP for inconsistencies or errors and correct as needed.	Eric Schmidt, Ahtna	June 12, 2024	June 14, 2024
Update QAPP per results of data review and personnel changes.	Eric Schmidt, Ahtna	June 12, 2024	June 14, 2024

3.0 Project Quality Objectives

3.1 Worksheet #10: Conceptual Site Model

3.1.1 Background and History

The former Fort Ord is located in northwestern Monterey County, California, approximately 80 miles south of San Francisco. The OU2 Landfills formerly included six landfill areas (one area north and five areas south of Imjin Parkway) covering approximately 150 acres, including the immediate surrounding area (Figure 1). The former Area A Landfill, north of Imjin Parkway, was approximately 33 acres separated from the Areas B through F Landfills to the south of Imjin Parkway (Figure 2). The Areas B through F Landfills encompass approximately 120 acres of undeveloped land. The six landfill areas were used for residential and on-base waste disposal. The former Area A was used from 1956 to 1966. Areas B through F were operated from 1960 until 1987, when interim closure of the facility began, which effectively terminated waste disposal activities at the OU2 Landfills (Ahtna, 2023b).

The remedial action at the former Area A was conducted from 1996 to 1998 in accordance with the requirements of the OU2 Landfills ROD (Army, 1994) and the *Explanation of Significant Differences, Consolidation of Remediation Waste in a Corrective Action Management Unit (CAMU), Operable Unit 2 Landfill* (CAMU ESD; Army, 1997a). Approximately 585,000 cubic yards of refuse were excavated during the remediation. This material was placed and compacted as part of the general fill in Areas B, C, D, and F of the OU2 Landfills (IT Corporation, 2001). Closure of all landfill areas is being completed as a remedial action at the OU2 Landfills in accordance with the OU2 Landfills ROD (Army, 1994).

The selected remedial action presented in the OU2 Landfills ROD includes placing an engineered cover system over buried refuse at the OU2 Landfills. The *Record of Decision, Basewide Remedial Investigation Sites, Fort Ord, California* (RI Sites ROD; Army, 1997b) in conjunction with the CAMU ESD (Army, 1997a) and the *Explanation of Significant Differences, No Further Action for Munitions and Explosives of Concern, Landfill Gas Control, Reuse of Treated Groundwater, Designation of Corrective Action Management Unit (CAMU) Requirements as Applicable or Relevant and Appropriate Requirements (ARARs), Operable Unit 2, Fort Ord Landfills, Former Fort Ord, California* (Army, 2006) designate CAMU regulations as ARARs for the existing boundaries of Areas B through F. Such designation generally allows remediation waste to be placed at the OU2 Landfills and used as a foundation layer without triggering certain disposal regulations. Soil remedies for the RI Sites at the Former Fort Ord used the CAMU for placement of excavated soil and/or debris, which are managed, incorporated within the landfill foundation layer, and capped as part of the landfill.

The remedial actions for the debris and soil at the OU2 Landfills include a cover system, collection and removal of LFG (if necessary), institutional controls, and a groundwater extraction and treatment system for volatile organic compounds (VOCs). The Army completed construction of an engineered cover over Areas B through F from 1997 to 2002 (Shaw, 2005a) and began operating the groundwater extraction and treatment system in 1995. In 2001, the Army installed a pilot extraction and treatment system to mitigate LFG migration along the eastern perimeter of Area F where a residential area is located closest to the landfill (Shaw, 2005b). The system began operation on June 4, 2001 and included a series of LFG extraction wells (EWs), LFG treatment with granular activated carbon (GAC) to remove VOCs, and potassium permanganate to remove vinyl chloride. Two 8-inch diameter perforated collector pipes, approximately 800 feet in total length, were installed in the foundation layer at Area E during

construction in 2002 for possible future methane extraction. The collector pipes are collectively referred to as extraction point (EP) EP-36.

Based on the results of the pilot study, the extraction and treatment system was expanded by adding vertical extraction wells (EW) along the perimeter and within the interior of Area F, and replacing the existing treatment system with a thermal treatment unit (TTU), which started operation in April 2006. The TTU, unlike the GAC/potassium permanganate treatment system, removes and treats both VOCs and methane by combustion in an enclosed flare operating in excess of 1,400 degrees Fahrenheit (°F).

In 2008, an EW was installed in Area D to augment the methane output from the Area F extraction system. A conduit from EP-36 to the TTU also was installed as part of the LFG treatment system expansion (Shaw, 2008b). In April 2009, EP-36 was brought online to augment the methane output from the Area F extraction system. As part of Field Work Variance TII-138 to the O&M Plan (Shaw, 2009), testing was performed on Area F passive vent (VF) VF-4 to determine if it was a viable source of methane that could be used for operation of the TTU. Results of this test determined that a significant increase in methane removal could be achieved through the addition of VF-4 into the extraction network. In June 2009, VF-4 was brought online to augment the methane output from the Area F extraction system.

In February 2011, two additional Area D passive vents (VD) and two additional VFs (VD-2, VD-3, VF-3, and VF-5) were converted to EPs to augment the methane output. These additions were documented in Field Work Variance TII-154 to the O&M Plan (Shaw, 2011).

System monitoring includes all EPs and the combined collection points at the TTU. The remedy is being performed under the Comprehensive Environmental Response, Compensation, and Liability Act of 1980 (CERCLA; 42 USC 9601 et seq.), as amended by the Superfund Amendment and Reauthorization Act of 1986 (SARA); therefore, the Monterey Bay Air Resources District (Air District) does not have jurisdiction over these remedial actions and a permit for the TTU and exhaust stack is not required. However, the Air District's substantive requirements are being implemented.

Due to the need for remediation at the Site 39 Inland Ranges, and the availability of additional remediation waste capacity at Area E, the Army proposed to place contaminated soil from the Site 39 Inland Ranges within the existing footprint of Area E as a vertical expansion. The Army prepared the *Record of Decision Amendment, Site 39 Inland Ranges, Former Fort Ord, California* (Army, 2009) to present the soil cleanup levels and the volume of soil to be addressed under the selected remedial action for the Site 39 Inland Ranges originally identified in the RI Sites ROD (Army, 1997b). Additional capacity at the OU2 Landfills was available by placing remediation waste within the existing Area E footprint on top of the existing engineered cover system. Construction of the vertical expansion involved placing additional remediation waste above the existing geomembrane and installing a new engineered cover consisting of a foundation layer, geomembrane, and vegetative layer over the remediation waste. The vertical expansion allows for placement of approximately 200,000 cubic yards of remediation waste in at least two phases. When the vertical expansion is complete, the additional remediation waste will be sealed above and below by a geomembrane. Phase 1 was completed in 2013 with approximately 150,000 cubic yards placed in the vertical expansion at Area E. Additional remediation of Site 39 and placement of soil in the Area E vertical expansion may be necessary for the future.

The technical assessment of the remedies for OU2 completed for the 5th Five-Year Review for the Fort Ord Superfund Site identified no issues for the OU2 Landfills. The OU2 Landfills remedy was deemed to be protective of human health and the environment and the ongoing remedial activities continue to adequately address exposure pathways that could result in unacceptable risks (Army, 2022).

3.1.2 Sources of Known or Suspected Hazardous Waste

No detailed records were kept on the amount or types of wastes disposed of at the OU2 Landfills; however, household and commercial refuse, ash from incinerated infectious wastes, dried sewage sludge, demolition material, and small amounts of chemical waste (such as paint, waste oil, pesticides, electrical equipment, ink and epoxy adhesives) are believed to have been disposed of in the OU2 Landfills (Dames & Moore, 1993).

3.1.3 Known Contaminants

Known contaminants at the OU2 Landfills are methane and VOCs in LFG. For methane, the primary release mechanism is emanation from decomposing organic waste. For VOCs, the primary release mechanisms are emanation from waste (within LFG) and infiltration/percolation to groundwater. Compounds of interest in LFG are the eleven VOCs identified as chemicals of concern (COCs) for groundwater in the OU2 Landfills ROD (1,1-dichloroethane; 1,2-dichloroethane; 1,2-dichloropropane; benzene; carbon tetrachloride; chloroform; cis-1,2-dichloroethene; methylene chloride; tetrachloroethene; trichloroethene; and vinyl chloride).

3.1.4 Fate and Transport Considerations

VOCs remaining in waste disposed at the OU2 Landfills and VOCs detected in LFG have the potential to travel through soil pore space to exposure points via a number of mechanisms:

- Advection: mass transport due to bulk flow of water in which contaminants are dissolved.
- Dispersion: transport due to the groundwater flow whether or not a compound is dissolved.
- Diffusion: spreading of contaminants due to molecular diffusion in response to concentration gradients.
- Volatilization: loss of chemical vapor to the atmosphere.

VOCs naturally undergo biochemical degradation processes in soil, soil gas, and groundwater; however, the rate of such degradation is limited by oxygen (O₂) and nutrient sources depending upon the type of degradation that is occurring (aerobic vs. anaerobic). Additionally, degradation of compounds is dependent on the biochemical pathways available.

3.1.5 Potential Receptors and Exposure Pathways

A residential area is located adjacent to OU2 Landfills Area F, with the closest residence located approximately 368 feet from the OU2 Landfills perimeter. There is a potential for residents to be exposed to VOCs from inhalation of vapors in ambient air, which may enter buildings through open windows or ventilation systems. To evaluate risks associated with this scenario, the Army performed ambient air monitoring in 2000, 2001, 2002, and 2003 to determine LFG dispersion in ambient air on the east side of Area F. The 2000, 2001, and 2002 data were used to complete a screening-level human health risk assessment (HHRA) and the HHRA was then updated with the 2003 data. The updated HHRA indicated that risks and hazards estimated for the downwind receptor and background areas were

roughly equivalent at the time the HHRA was conducted, and the risk and hazard drivers were similar in both data sets. It was concluded in the HHRA that there is no increased risk of developing cancer or other noncancer health effects from exposure to VOCs in ambient air downwind of the OU2 Landfills over the background risk of developing cancer or other noncancer health effects within the entire Fort Ord area (Shaw, 2005c). The HHRA also noted that the LFG collection and treatment system installed at Area F prevents LFG from migrating off-site in the direction of the residential area. Since the onset of TTU operations, the methane concentrations in perimeter monitoring probes have remained below 5 percent (%) per the requirements of [Title 27 California Code of Regulations \(27CCR\) Section 20921\(a\)\(2\)](#) (AEI, 2017, 2018, 2019a and Ahtna, 2021a, 2021b, 2022, 2023a).

3.1.6 Land Use Considerations

The OU2 Landfills encompass approximately 120 acres of land that is undeveloped other than use as a landfill and the presence of the OU2 groundwater treatment plant. A residential housing area for California State University Monterey Bay is located adjacent to OU2 Landfills Area F, with the closest residence located approximately 368 feet from the OU2 Landfills perimeter.

Other land immediately adjacent to the OU2 Landfills was transferred from the Army to the Fort Ord Reuse Authority in 2004 and 2006 and remains undeveloped. These parcels of land are identified in the *Installation-Wide Habitat Management Plan for Former Fort Ord, California* (HMP; USACE, 1997) as containing habitat occupied or potentially occupied by several sensitive wildlife and plant species, some of which are listed or proposed for listing as threatened or endangered under the federal Endangered Species Act. Accordingly, this land is categorized as “Development with Reserve Areas or Development with Restrictions” in the HMP. While the land may be developed, there are specific restrictions to protect biological resources as identified in the HMP and the quitclaim deeds associated with the land.

The quitclaim deeds for land within 1,000 feet of the OU2 Landfills also include a notification stating landowners should refer to [27CCR Section 21190](#), which identifies protective measures for structures built on or within 1,000 feet of a landfill.

3.1.7 Physiography and Topography

Elevations at Fort Ord range from approximately sea level at the beach to 900 feet above mean sea level (AMSL) at Wildcat Ridge. At the OU2 Landfills, elevations range from approximately 160 feet AMSL at the west end of Area B to 255 feet AMSL at the top of the Area E ridgeline. Runoff is minimal due to the high rate of surface water infiltration into the permeable dune sand; consequently, well-developed natural drainages are absent throughout much of this area. However, erosion has primarily been observed where roads were cut into slopes. In these areas, small gullies are present, but generally end shortly after the topography flattens out. Closed drainage depressions typical of dune topography are common.

3.1.8 Geology and Hydrogeology

The predominant lithology is loose, well-sorted (poorly graded) fine to medium Pleistocene-age dune sands that cover most of the northern and western portions of the former Fort Ord. Paleosols, representing former ground surfaces (silty sands), exist within these sands. These paleosols indicate one or more cycles of dune deposition have occurred with intervening periods of soil development.

Remedial investigation at the OU2 Landfills indicated that the landfill materials were buried in relatively uniform sand dune deposits in shallow trenches approximately 30 feet wide, 10 to 15 feet apart, and extending from ground surface to 10 to 30 feet below ground surface (bgs). Soil samples collected below the OU2 Landfills do not contain chemicals associated with the Landfills; however, chemicals associated with landfilled materials have been detected in soil vapor samples obtained from soil overlying the Landfills and in the groundwater collected from beneath the Landfills. The chemicals are believed to have migrated away from the landfilled materials as vapors or as solutes in leachate (Army, 1995).

Groundwater in the uppermost A-Aquifer in the area of the OU2 Landfills generally flows northwest toward the Monterey Bay; however, groundwater east of the OU2 Landfills generally flows northeast toward the Salinas River due to a groundwater divide located east of Area F. Due to extensive local and regional pumping of water from the Upper and Lower 180-Foot Aquifers for agricultural and domestic use, the natural westward flow of groundwater is reversed to the east toward the Salinas Valley. The Upper 180-Foot Aquifer is separated from the A-Aquifer by a relatively impermeable clay layer known as the Salinas Valley Aquitard; however, near the Monterey Bay, these two aquifers are connected because the aquitard pinches out in this area. Therefore, COCs in the A-Aquifer have the potential to migrate into the Upper 180-Foot Aquifer (Army, 1995).

3.2 Worksheet #11: Project/Data Quality Objectives

Data quality objectives (DQOs) are qualitative and quantitative statements that outline the decision-making process and specify the data required to support corrective actions. DQOs specify the level of uncertainty that will be accepted in results derived from data. The DQO process used for developing data quality criteria and performance specifications for decision-making is consistent with the *Guidance on Systematic Planning Using the Data Quality Objectives Process, EPA QA/G-4* (EPA, 2006). The DQO process consists of the following seven steps:

- Step 1: State the problem
- Step 2: Identify the goals of the study
- Step 3: Identify information inputs
- Step 4: Define the boundaries of the study
- Step 5: Develop the analytic approach
- Step 6: Specify performance or acceptance criteria
- Step 7: Develop the plan for obtaining data

There are DQOs for the four types of testing at the OU2 Landfills: (1) TTU source testing, (2) TTU operational influent LFG testing, (3) LFG monitoring at the Landfills compliance perimeter probes, and (4) LFG monitoring at the Landfills monitoring probes and vents.

3.2.1 DQO #1: TTU Source Testing

Problem Statement. Even though the Air District does not have jurisdiction over the TTU and the exhaust stack, the Army will perform annual source testing of the TTU to determine whether it operates efficiently and meets local regulatory standards that are based on permits issued for similar facilities for the type of TTU at the OU2 Landfills.

Study goals. The goals of the study are to determine whether the TTU operates efficiently under current operating conditions and meets local regulatory standards. The system may require adjustments to increase its efficiency and/or to achieve the target operating conditions.

Information inputs. To meet the goals of the study, the following inputs will be required:

Stack Emissions (Effluent)

Gas stream volumetric flow rate
Nitrogen oxides (NO_x), CO, O₂, carbon dioxide (CO₂)
NMOCs/THC
SO₂ (calculated)
Methane
VOCs listed in Worksheet #15 (Section 3.6.3)
Flare temperature

Influent LFG

Heating value (calculated based on hydrocarbon content; caloric content of gas)
O₂, CO₂, nitrogen (N₂)
Methane
VOCs listed in Worksheet #15 (Section 3.6.3)
NMOCs
Reduced sulfur compounds
LFG flow rate

Based on permits issued for similar facilities, the optimum operating conditions for the type of TTU at the OU2 Landfills are:

- Minimum destruction efficiency of total hydrocarbons (THC) shall be 98% by weight, or reduction of the outlet non-methane organic compounds (NMOC) concentration to less than 20 parts per million by volume (ppmv), dry basis as hexane, at 3% O₂.
- Minimum destruction efficiency of methane shall be 99% by weight.
- Combustion temperature shall be maintained at a minimum of 1,400 °F within 30 minutes of any startup; minimum combustion residence time shall be 0.6 seconds.
- Instrumentation shall record combustion temperature continuously during operation.
- Nitrogen oxide (NO) emissions shall not exceed 0.06 pounds per million British thermal units (lb/MMBtu).
- Carbon monoxide (CO) emissions shall not exceed 0.18 lb/MMBtu.
- THC emissions shall not exceed 0.03 lb/MMBtu.
- Sulfur dioxide (SO₂) emissions shall not exceed 0.2% by volume (%v; 2,000 ppmv).
- Inlet sulfur content shall not exceed 50 grains hydrogen sulfide per 100 cubic feet of gas.
- Instrumentation shall continuously record the amount of LFG flow to the flare during operation.
- No air contaminant which is as dark as or darker than Ringelmann 1 or equivalent (20% opacity) shall be discharged for more than an aggregate 3 minutes in any hour.²

² The Ringelmann scale is a scale for measuring the apparent density or opacity of smoke.

- No emission shall constitute a public nuisance.

Influent LFG and exhaust emission concentrations and flow rates (measured under maximum available throughput loads) will be used to calculate the mass emission rates of LFG constituents and the mass emission factors for secondary pollutants that result from the combustion process.

A certified mobile laboratory provided and staffed by Best Environmental will be on site to measure the above parameters (with the exception of VOCs, fixed gases, and reduced sulfur compounds, which will be analyzed in a certified fixed laboratory). Best Environmental is certified by the State of California Air Resources Board to conduct compliance testing pursuant to California Code of Regulations, Title 17, Section 91207. Section 6.0 provides details of the analytical methods to be employed. The LFG flow rate and flare temperature will be measured using a calibrated flow meter and thermocouple on site.

Sample data from stack emissions and influent LFG testing, in combination with gas flow rates and other parameters, will be used to perform calculations to determine whether the TTU achieves the optimum operating conditions.

Study boundaries. Emission samples will be collected from two sampling ports on the TTU stack. The sampling ports are in the same horizontal cross-section of the stack but are 90 degrees apart. Influent LFG samples will be collected from a sampling port located before the TTU.

Analytic approach. TTU stack emissions and the influent LFG concentrations for specific gases are measured to determine the TTU's efficiency, its ability to achieve optimum operating conditions, and its ability to meet regulatory standards.

- If mathematical calculations and direct measurement data obtained from stack emissions and influent LFG testing demonstrate that it meets the target operating conditions, then the TTU will be considered to be operating efficiently.
- If mathematical calculations and direct measurement data obtained from stack emissions and operational influent LFG testing do not demonstrate that it meets the target operating conditions, then the TTU may require adjustments to increase its efficiency and meet target operating conditions.
- If stack emission data show that the system does not achieve regulatory standards, then the TTU may require optimization or upgrading to achieve the regulatory standards.
- If stack emission data show that the system meets regulatory standards, then the TTU will not require further optimization.
- If a VOC has not been detected in any of the samples associated with the LFG extraction system (TTU influent, extraction legs, stack) for five consecutive annual monitoring events, the VOC will be removed from the TO-15 target analyte list (Worksheet #15) for operational extraction system sampling only.
- The eleven VOCs identified as COCs for groundwater in the OU2 Landfills ROD will remain on the TO-15 target analyte list, regardless of whether they have been non-detect for five consecutive annual monitoring events.
- If the list of VOCs identified as COCs for groundwater is revised in a subsequent OU2 decision document, then the most current list of COCs for groundwater will remain on the TO-15 target analyte list.

- To confirm compliance with regulatory standards, the full TO-15 list of VOCs will be reported once every five years for samples associated with the TTU system.³ If a VOC that was previously removed from the TO-15 target analyte list for DQO #1 is detected, this VOC will be added to the TO-15 target analyte list for DQO #1 (Worksheet #15).
- These criteria are applied retroactively as part of a previous QAPP revision to include VOC analytical data collected since TTU operations began in April 2006 (AEI, 2016a).

Performance or acceptance criteria. Decisions could be affected adversely by errors in field measurements and/or fixed laboratory measurements. By adhering to standard procedures and approved methods to obtain the most reliable data, decision errors will be minimized and should not be a factor in making decisions.

Plan for obtaining data. The TTU should be operated and maintained properly to achieve continuous optimum performance and efficiency per the requirements of the O&M Plan (Ahtna, 2023b). The field test methods, parameters, numbers of tests, durations of tests for stack emission testing, and information inputs for effluent LFG are:

Sample Parameter	Test Method	Number of Runs/Samples	Test Duration	Information Input Source
Flow Rate	EPA Method 19	3	40 minutes	Mobile Laboratory
O ₂ , CO ₂	EPA Method 3A	3	40 minutes	Mobile Laboratory
Methane/NMOC/THC	EPA Method 25A	3	40 minutes	Mobile Laboratory
CO	EPA Method 10	3	40 minutes	Mobile Laboratory
NO _x	EPA Method 7E	3	40 minutes	Mobile Laboratory
VOCs	EPA Method TO-15	1	NA	Fixed Laboratory

Access to the stack will be through a shared sample line provided by the source testing contractor. For all sample parameters except VOCs, a heated and filtered stainless steel probe will be used to extract the gas sample from the stack. A heated, 3/8-inch Teflon[®] line will transport the sample from the point of extraction to the non-contact gas conditioning chiller system. The gas conditioning system and all analytical equipment will be provided by the source testing contractor in a self-contained mobile test laboratory. The moisture will be condensed and removed from the gas stream, while the pollutants pass through to the analytical equipment. The analyzer will be located in a temperature-controlled area to minimize thermal effects on the calibration of the instrument used in taking the measurements. For VOCs, the sample is collected at the sample port on the stack, using a vacuum pump and Tedlar[™] bag, and shipped to the fixed laboratory (Eurofins) for analysis.

The laboratory test methods, parameters, numbers of tests, and information inputs for influent LFG are as follows:

³ The full TO-15 list of VOCs was last reported in the 2019 Annual Report (Ahtna, 2020) and will next be reported in the 2024 Annual Report. The full TO-15 list of certified compounds is provided in Attachment B, Analytical Laboratory Information.

Sample Parameter	Test Method	Number of Samples	Information Input Source
Heating Value (calculated), O ₂ , CO ₂ , NMOC	ASTM D1945	1	Fixed Laboratory
VOCs	EPA Method TO-15	1	Fixed Laboratory
Total Reduced Sulfurs	ASTM D5504	1	Fixed Laboratory
LFG rate	Field measurement	Continuous	Flow meter
Flare temperature	Field measurement	Continuous	Thermocouple

Source testing will be performed annually to demonstrate that the TTU is operating within the substantive requirements of Air District emission limits.

3.2.2 DQO #2: Operational Influent LFG Testing

Problem Statement. The composition and concentration of the operational influent gas stream need to be known to operate the TTU efficiently and to establish a schedule of treatment and extraction operations. The composition and characteristics from operational EWs need to be monitored to maintain compliance with 5%v standard for methane at the property boundary. VOC mass extraction rates may need to be adjusted to maximize removal.

Study goals. The principal study goals are to determine the operational influent LFG composition and characteristics so that methane concentrations can be maintained below the lower explosive limit of 5%v, and to determine the composition and characteristics of operational EWs and other wells and probes to prevent adverse acute and chronic exposure to toxic and/or carcinogenic compounds.

Information inputs. The following inputs are required (using a portable LFG analyzer) to determine trends in composition and characteristics present in the TTU operational influent LFG and the EWs:

Influent LFG

Methane

CO₂

O₂

Balance gas (a combination of the remainder of gases, but the majority is N₂)

Temperature

Flow

Vacuum

Additional inputs include:

- Analysis by EPA Method TO-15 at a fixed-base laboratory for the list of VOCs provided in Worksheet #15 (Section 3.6.3).
- Optimal operating parameters of the TTU per the O&M Plan (Ahtna, 2023b).
- 27CCR Section 20921(a)(2).

Study boundaries. The boundaries of the study are the frequency and the locations of monitoring points for the TTU and the compliance perimeter probes and EWs on the Eastern side of Area F, where the OU2 Landfills are closest to a residential housing area.

Analytic approach. The composition of gases from the operational EWs and perimeter probes will be monitored.

- If the concentration of methane is below 40%v, and the flow rate is below 30 standard cubic feet per minute (scfm), or if methane is below 30%v and the flow rate is below 50 scfm as measured in the influent LFG, then the system parameters will be adjusted (e.g., EW flow rates may be adjusted, the TTU may be shut down and operated intermittently, or supplemental fuel may be added to operate the TTU continuously).
- If the concentration of methane is greater than 50%v, and the flow rate is 180 scfm or greater, or if the concentration of methane is greater than 30%v, and the flow rate is 300 scfm or greater, resulting in maximum influent conditions greater than 5 million Btu per hour (Btu/hr), then the system may be adjusted or shut down.
- If the methane concentrations exhibit a downward trend, possibly due to short-term over-extraction of the available LFG, then the TTU may be operated intermittently or shut down, or fuel may be added to avoid permanently damaging the methane-generating potential of the waste and substantially reducing the long-term availability of fuel for self-sustaining TTU operations.
- If methane concentrations in the compliance perimeter monitoring probes associated with the eastern perimeter leg are greater than the regulatory compliance concentration of 5%v, then the eastern perimeter leg will be operated more frequently to maintain compliance.
- If methane concentrations in the eastern perimeter probes are below 5%v, then this leg may be shut down.
- If methane concentrations in the northern or southern perimeter leg are less than 10%v, then the leg(s) may be shut down.
- If methane concentrations in individual interior EWs at Area F are below 40%v, then the individual wells may be shut down.
- If methane concentrations in individual interior EWs at Area D are below 30%v, then the individual wells may be shut down.
- If methane concentrations in the interior legs of Area D or Area F are below 50%v, then operation of the TTU will be intermittent rather than continuous.
- If EW temperatures are greater than 120 °F, then the individual well(s) or the leg will be shut down.
- If a VOC has not been detected in any of the samples collected from the LFG extraction system for five consecutive annual monitoring events, the VOC will be removed from the TO-15 target analyte list (Worksheet #15) for LFG extraction system sampling only.
- The eleven VOCs identified as COCs for groundwater in the OU2 Landfills ROD will remain on the TO-15 target analyte list, regardless of whether they have been non-detect for five consecutive annual monitoring events.
- If the list of VOCs identified as COCs for groundwater is revised in a subsequent OU2 decision document, then the most current list of COCs for groundwater will remain on the TO-15 target analyte list.

- The full TO-15 list of VOCs will be reported once every five years for samples associated with the operational LFG extraction legs.⁴ If a VOC that was previously removed from the TO-15 target analyte list for DQO #2 is detected, this VOC will be added to the TO-15 target analyte list for DQO #2 (Worksheet #15).
- These criteria will be applied retroactively as part of a previous QAPP revision to include VOC analytical data collected since TTU operations began in April 2006 (AEI, 2016a).

Performance or acceptance criteria. Decisions could be affected adversely by errors in field measurements and/or fixed laboratory measurements. By adhering to standard procedures and approved methods to obtain the most reliable data, decision errors will be minimized and should not be a factor in making decisions.

Plan for obtaining data. The TTU should be operated and maintained properly to achieve continuous optimum performance and efficiency. As required, field measurements will be performed using a portable LFG analyzer.

Sample Parameter	Location	Test Method	Frequency
Methane, O ₂ , CO ₂ , balance gas, temperature, flow rate, vacuum	Interior Extraction Legs, and points (wells and vents) in operation	Portable LFG analyzer	Biweekly or when system is in operation
	Influent	Portable LFG analyzer	Biweekly or when system is in operation
VOCs	Influent	EPA Method TO-15	Annual (during source testing)
VOCs	Interior Extraction Legs	EPA Method TO-15	Annual

3.2.3 DQO #3: Compliance Perimeter Probes

Problem statement. To provide for the protection of public health and safety and the environment, methane concentrations will not exceed 5%v at the landfill perimeter and trace gases will be controlled to prevent adverse acute and chronic exposure to toxic and/or carcinogenic compounds.⁵ Methane and VOCs are measured to determine whether concentrations are in compliance with the regulatory requirements or whether corrective actions need to be implemented.

Goals of the study. The primary decision is whether the concentrations of methane in the compliance perimeter probes meet the regulatory requirement. The secondary decision is whether the trace gas concentrations are at a level where they need to be controlled. The alternative actions that could result from these decisions are:

⁴ The full TO-15 list of VOCs was last reported in the 2019 Annual Report (Ahtna, 2020) and will next be reported in the 2024 Annual Report. The full TO-15 list of certified compounds is provided in Attachment B, Analytical Laboratory Information.

⁵ For the purposes of this QAPP, “trace gases” means VOCs.

- Methane concentrations along the perimeter of the landfill do not exceed regulatory requirements, and no corrective actions are required, or methane concentrations along the perimeter of the landfill exceed the regulatory requirements and corrective actions need to be implemented.
- Methane concentrations along the eastern perimeter of Area F (where residential housing is located closest to the OU2 Landfills) are below 5%v and LFG migration is being controlled by operations of the TTU, or methane concentrations along the eastern perimeter of Area F are above 5%v and LFG migration is not being controlled by operations of the TTU and the operational schedule of the TTU needs to be modified.
- Trace gases need to be controlled to prevent adverse acute and chronic exposure to toxic and/or carcinogenic compounds, or trace gases do not need to be controlled.

Identify information inputs. To resolve the decision statement, methane and VOC concentrations will be measured at the compliance perimeter probes.

Twenty-one compliance perimeter probes will be sampled annually for VOCs. Samples will be analyzed using EPA Method TO-15 for the list of VOCs provided in Worksheet #15 (Section 3.6.4). Results will be compared to historical ranges.

Compliance perimeter probes will be monitored quarterly for methane. A portable LFG analyzer will be used in the field to measure Methane, O₂, CO₂, and balance gas. Results for methane will be compared to the 5%v regulatory requirement.

Additional inputs include:

- 27CCR Section 20921(a)(2).
- The current DTSC residential air screening level (DTSC-SL) for vinyl chloride.
- The highest historical concentration of vinyl chloride observed in the probe.
- The current DTSC-SL for tetrachloroethene (PCE).
- The highest historical concentration of PCE observed in the probe.
- The current EPA Residential Ambient Air Regional Screening Level (EPA-RSL).
- The highest historical concentration of chloroform observed in the probe.

Study boundaries. To determine the concentrations of methane and trace gases compliance perimeter probes installed along the perimeter of the OU2 Landfills will be monitored.

Analytic approach. The parameters of interest are the concentrations of the methane and trace gases at the OU2 Landfills perimeter. Compliance perimeter probes (Figure 2) will be monitored quarterly for methane and annually for VOCs.

The following decision rules apply to methane in the compliance perimeter probes:

- If the concentration of methane is less than 5%v, then there is no LFG migration and the OU2 Landfills are in compliance with the regulatory requirements.
- If the concentration of methane is greater than 5%v, then there is a potential for LFG migration, and corrective actions need to be implemented.

- If methane concentrations along the eastern perimeter of Area F (where residential housing is located closest to the OU2 Landfills) are less than 5%v, then LFG migration is being controlled by operations of the TTU.
- If methane concentrations along the eastern perimeter of Area F (where residential housing is located closest to the OU2 Landfills) are greater than 5%v, then LFG migration is not being controlled by operations of the TTU and the operational schedule of the TTU needs to be modified.

The following decision rules relate to VOCs and are based on comparison of current analytical data with historical data since startup of the pilot LFG extraction and treatment system:

- For compliance perimeter probes with previously measured detections greater than 1,000 times the DTSC-SL for vinyl chloride (1,000 times the DTSC-SL equals 9.5 micrograms per cubic meter ($\mu\text{g}/\text{m}^3$) or 3.7 parts per billion by volume (ppbv) based on the current DTSC-SL (DTSC, 2022)): if the concentration of vinyl chloride exceeds the previous maximum recorded value, then the probe will be sampled quarterly until two successive measurements show declining or constant concentrations.
- For compliance perimeter probes with previously measured detections greater than 1,000 times the current DTSC-SL for PCE (1,000 times the DTSC-SL equals 460 $\mu\text{g}/\text{m}^3$ or 67.8 ppbv based on the current DTSC-SL (DTSC, 2022)): if the concentration of PCE exceeds the previous maximum recorded value, then the probe will be sampled quarterly until two successive measurements show declining or constant concentrations.
- For compliance perimeter probes with previous measured detections greater than 100 times the EPA-RSL for chloroform (100 times the EPA-RSL equals 12 $\mu\text{g}/\text{m}^3$ or 2.5 ppbv based on the current EPA-RSL (EPA, 2021)): if the concentration of chloroform exceeds the previous maximum recorded value, then the probe will be sampled quarterly until two successive measurements show declining or constant concentrations.
- For compliance perimeter probes with no previous measured detections greater than 1,000 times the most current DTSC-SL for vinyl chloride or PCE in gas: if the concentration remains less than 1,000 times the DTSC-SL, then no action is required.
- For compliance perimeter probes with no previous measured detections greater than 100 times the most current EPA-RSL for chloroform in gas: if the concentration remains less than 100 times the EPA-RSL, then no action is required.
- For compliance perimeter probes with no previous measured detections greater than 1,000 times the most current DTSC-SL for vinyl chloride or PCE in gas: if the concentration exceeds 1,000 times the DTSC-SL, then the probe will be sampled quarterly until two successive measurements show declining or constant concentrations.
- For compliance perimeter probes with no previous measured detections greater than 100 times the most current EPA-RSL for chloroform in gas: if the concentration exceeds 100 times the EPA-RSL, then the probe will be sampled quarterly until two successive measurements show declining or constant concentrations.
- If a VOC has not been detected in any of the samples collected from compliance perimeter probes for five consecutive annual monitoring events, then the VOC will be removed from the TO-15 target analyte list (Worksheet #15) for compliance perimeter probes only.

- The eleven VOCs identified as COCs for groundwater in the OU2 Landfills ROD will remain on the TO-15 target analyte list, regardless of whether they have been non-detect for five consecutive annual monitoring events.
- If the list of VOCs identified as COCs for groundwater is revised in a subsequent OU2 decision document, then the most current list of COCs for groundwater will remain on the TO-15 target analyte list.
- To confirm compliance with regulatory standards, the full TO-15 list of VOCs will be reported once every five years for samples collected from compliance perimeter probes.⁶ If a VOC that was previously removed from the TO-15 target analyte list for DQO #3 is detected, this VOC will be added to the TO-15 target analyte list for DQO #3 (Worksheet #15).
- These criteria will be applied retroactively as part of a previous QAPP revision to include VOC analytical data collected since TTU operations began in April 2006 (AEI, 2016a).

Performance or acceptance criteria. Decisions could be affected adversely by errors in field measurements and/or fixed laboratory measurements. By adhering to standard procedures and approved methods to obtain the most reliable data, decision errors will be minimized and should not be a factor in making decisions.

Plan for obtaining data. The compliance perimeter probes were installed at approximately 1,000 feet apart at the perimeter of the OU2 Landfills.

3.2.4 DQO #4: Monitoring Probes and Vents

Problem statement. To provide for the protection of public health and safety and the environment, methane concentrations will not exceed 5%v at the landfill perimeter and trace gases will be controlled to prevent adverse acute and chronic exposure to toxic and/or carcinogenic compounds. Methane must be measured at monitoring probes and vents to provide additional data to ensure compliance with the regulatory requirements and to determine whether corrective actions need to be implemented.

Goals of the study. The primary decision is whether methane concentrations are exhibiting upward trends in the monitoring probes or landfill vents. The alternative actions that could result from these decisions are:

- Methane concentrations in the compliance perimeter probes adjacent to monitoring locations may be negatively impacted by increasing methane concentrations monitored in perimeter monitoring probes and landfill vents and corrective actions need to be implemented.
- Methane concentrations along the eastern perimeter of Area F (where residential housing is located closest to the OU2 Landfills) are below 5%v and LFG migration is being controlled by operations of the TTU, or methane concentrations along the eastern perimeter of Area F are above 5%v and LFG migration is not being controlled by operations of the TTU and the operational schedule of the TTU needs to be modified.

Identify information inputs. To resolve the problem statement, methane concentrations will be measured at the perimeter monitoring probes and landfill vents.

⁶ The full TO-15 list of VOCs was last reported in the 2019 Annual Report (Ahtna, 2020) and will next be reported in the 2024 Annual Report.

Following the guidelines of previous revisions of this QAPP, nine monitoring probes will be sampled quarterly for methane. These probes have continued to exhibit concentrations of methane greater than 1%v, and per the analytic approach decision rules will continue to be sampled quarterly. One monitoring probe will be sampled annually for methane. This probe has exhibited concentrations of methane less than 1%v for over 20 consecutive quarterly monitoring events and only requires annual monitoring. If the probe continues to exhibit concentrations less than 1%v for five consecutive annual monitoring events, then it will be removed from the monitoring program. The 12 passive vents installed along the center ridgeline of each landfill area will continue to be monitored quarterly.

Methane concentrations in all passive vents are consistently above 5%v; however, there is no regulatory standard for methane concentration in passive vents, nor are there any regulatory actions for methane concentrations exceeding 5%v in passive vents in solid waste landfills. Vents are not intended to be representative sampling locations for LFG conditions in the waste, and monitoring results are used as only a non-quantitative indicator of trends in LFG accumulation in the foundation cover soils. A portable LFG analyzer will be used in the field to measure methane, O₂, CO₂, and balance gas.

Additional investigations, such as the installation of permanent or temporary probes, may be conducted to measure methane. Additional investigations may be prepared and implemented as an amendment to this QAPP or as a separate plan.

Study boundaries. To determine any upward methane trends, monitoring probes and vents at OU2 Landfills will be monitored. Per the analytic approach, the temporal boundaries are:

- Five years (20 consecutive quarterly events or five annual events) to change the monitoring frequency of perimeter probes.
- Two months of TTU nonoperation to change the monitoring frequency of Area F perimeter probes.

Analytic approach. The parameters of interest are the concentrations of the methane at the OU2 Landfills.

The following decision rules apply to methane in the perimeter probes:

- If the concentration of methane is greater than 5%v and an upward trend in concentration is observed, then there is a potential for LFG migration and corrective actions need to be implemented.
- If methane concentrations along the eastern perimeter of Area F, where residential housing is located closest to the OU2 Landfills, are less than 5%v, then LFG migration is being controlled by operations of the TTU.
- If methane concentrations along the eastern perimeter of Area F, where residential housing is located closest to the OU2 Landfills, are greater than 5%v, then LFG migration is not being controlled by operations of the TTU and the operational schedule of the TTU needs to be modified.

The following decision rules apply to the monitoring frequency of the perimeter probes:

- Probes designated as Additional LFG Monitoring Probes (Figure 2) will be monitored quarterly for methane except:

- If methane concentrations in the probe are less than 1%v for 20 consecutive quarterly monitoring events, then the probe will be moved to an annual monitoring schedule.
- If methane concentrations in the probe are less than 1%v for five consecutive annual monitoring events, then the probe will be removed from the monitoring program.

These decision rules will be applied retroactively as part of a previous QAPP revision to include methane concentration data collected since TTU operations began in April 2006 (AEI, 2016a).

If the TTU is unintentionally nonoperational for technical reasons or other unforeseen circumstances for more than 2 months, additional LFG monitoring probes in Area F that are on an annual monitoring schedule will be monitored for methane concentrations in the next quarterly monitoring event. Additional probes may be added to the monitoring program depending upon the results from the additional annual probes. These data will be used to determine TTU operational parameters when the TTU is online again.

The following decision rules apply to methane in the utility trench probes:

- If the concentration of methane is less than 5%v, then there is no potential for LFG migration via the utility trench and the OU2 Landfills are in compliance with the regulatory requirements.
- If the concentration of methane is greater than 5%v, then there is a potential for LFG migration via the utility trench and corrective actions need to be implemented.

Performance or acceptance criteria. Decisions could be affected adversely by errors in field measurements. By adhering to standard procedures and approved methods to obtain the most reliable data, decision errors will be minimized and should not be a factor in making decisions.

Plan for obtaining data. The probes along the northern and eastern perimeters of Area F, which are closer to residential areas, are spaced a maximum of 500 feet apart due to the landfill proximity to the housing area. Additional investigations, such as the installation of permanent or temporary perimeter probes or ambient air monitoring, may also be conducted to characterize methane and trace gas concentrations.

3.3 Worksheet #12: Measurement Performance Criteria

The following sections provide measurement performance criteria for the fixed laboratory methods. For measurement performance criteria for the mobile laboratory continuous sampling EPA Methods 3A, 7E, 10 and 25A, refer to the method documentation.

3.3.1 Analytical Group/Method: Fixed Gases/ASTM D1945

Estimated Concentration Level: Low

Matrix: Gas (ppmv)

Data Quality Indicators (DQIs)	QC Sample or Measurement Performance Activity	Measurement Performance Criteria
Precision	Field Duplicates	Relative Percent Difference (RPD) < 30%
Precision	Laboratory Duplicate	RPD < 25%
Accuracy	Laboratory Control Sample	85–115 % Recovery (%R)
Bias/Sensitivity	Method Blanks	No analytes detected > ½ the limit of quantitation (LOQ) or > 1/10 the amount measured in any sample or 1/10 the regulatory limit (if applicable), whichever is greater. Common contaminants must not be detected > LOQ ¹
Completeness	Data Assessment	≥ 90%
Comparability	Data Review: compare results to previous sampling events	Same unit of measure and LOQs are consistent with previously collected data

3.3.2 Analytical Group/Method: Sulfur Gases/ASTM D5504

Estimated Concentration Level: Low

Matrix: Gas (ppbv)

DQIs	QC Sample or Measurement Performance Activity	Measurement Performance Criteria
Precision	Field Duplicates	RPD < 30%
Precision	Laboratory Duplicate	RPD < 25%

DQIs	QC Sample or Measurement Performance Activity	Measurement Performance Criteria
Accuracy	Laboratory Control Sample	70–130 %R
Bias/Sensitivity	Method Blanks	No analytes detected > ½ LOQ or > ⅒ the amount measured in any sample or ⅒ the regulatory limit (if applicable), whichever is greater. Common contaminants must not be detected > LOQ ¹
Completeness	Data Assessment	≥ 90%
Comparability	Data Review: compare results to previous sampling events	Same unit of measure and LOQs meet project decision limits (PDLs) ¹

Notes:

¹ See Worksheet #15 for LOQ values.

3.3.3 Analytical Group/Method: Volatile Organic Compounds (VOC)/TO-15

Estimated Concentration Level: Low

Matrix: Gas (ppbv)

DQIs	QC Sample or Measurement Performance Activity	Measurement Performance Criteria	
Precision	Field Duplicates	RPD < 30%	
Precision	Laboratory Duplicate	RPD < 25%	
Accuracy	Surrogate	1,2-dichloroethane-d4	50–150 %R
		Toluene-d8	50–150 %R
		4-Bromofluorobenzene	50–150 %R
Accuracy	Laboratory Control Sample (LCS) ^{1,2}	Benzene	69–119 %R
		Carbon Tetrachloride	68–132 %R
		Chloroform	68–123 %R
		1,1-Dichloroethane	68–126 %R
		1,2-Dichloroethane	65–128 %R

DQIs	QC Sample or Measurement Performance Activity	Measurement Performance Criteria	
		cis-1,2-Dichloroethene	70–121%R
		1,2-Dichloropropane	69–123%R
		Dichloromethane (Methylene chloride)	62–115 %R
		Tetrachloroethene	66–124 %R
		Trichloroethene	71–123 %R
		Vinyl chloride	64–127 %R
Bias/Sensitivity	Method Blanks	No analytes detected > ½ LOQ or > ⅒ the amount measured in any sample or ⅒ the regulatory limit (if applicable), whichever is greater. Common contaminants must not be detected > LOQ ³	
Completeness	Data Assessment	≥ 90%	
Comparability	Data Review: compare results to previous sampling events	Same unit of measure and LOQs meet PDLs ³	

Notes:

¹ Samples will be spiked for all compounds on the TO-15 project reporting list(s) (presented in Sections 3.6.3 and 3.6.4); however, only the compounds presented will be controlled per the requirements presented in the table. Compounds presented are those listed as COCs for groundwater in Table 1 of the OU2 Landfills ROD (Army, 1994). VOCs in LFG are not identified as COCs in the OU2 Landfills ROD (Army, 1994); however, ARARs identified in the OU2 Landfills ROD require control of trace gases to prevent adverse acute and chronic exposure to toxic and/or carcinogenic compounds; therefore, the comprehensive project report list(s) of TO-15 analytes are reported to ensure the substantive requirements of these ARARs are met.

² The remaining compounds need to meet the requirements of DoD QSM 5.4.

³ See Worksheet #15 for LOQs

3.4 Worksheet #13: Secondary Data Uses and Limitations

Secondary data and information that will be used, including originating sources, are identified below. How the secondary data will be used and the limitations on their uses are specified. Data from these documents will be used as appropriate.

Data Type	Data Source (originating organization, report title and date)	Data Uses Relative to Current Project	Factors Affecting the Reliability of Data and Limitations on Data Use
LFG, Inspection Reports, Figures, Analytical Data	Gilbane Company, Final Annual Report, 2014, Operations and Maintenance, Operable Unit 2 Landfills. July 2015	Trend analysis, design optimization	None
LFG, Inspection Reports, Figures, Analytical Data	AEI, Final Annual Report, 2015, Operations and Maintenance, Operable Unit 2 Landfills. April 2016	Trend analysis, design optimization	None
LFG, Inspection Reports, Figures, Analytical Data	AEI, Final Annual Report, 2016, Operations and Maintenance, Operable Unit 2 Landfills. July 2017	Trend analysis, design optimization	None
LFG, Inspection Reports, Figures, Analytical Data	AEI, Final Annual Report, 2017, Operations and Maintenance, Operable Unit 2 Landfills. May 2018	Trend analysis, design optimization	None
LFG, Inspection Reports, Figures, Analytical Data	AEI, Final Annual Report, 2018, Operations and Maintenance, Operable Unit 2 Landfills. May 2019	Trend analysis, design optimization	None
LFG, Inspection Reports, Figures, Analytical Data	Ahtna, Final Operable Unit 2 Annual Report Volume I, Fourth Quarter 2018 through Third Quarter 2019, Landfill Gas Monitoring and Landfills Operations and Maintenance. February 2021	Trend analysis, design optimization	None

Data Type	Data Source (originating organization, report title and date)	Data Uses Relative to Current Project	Factors Affecting the Reliability of Data and Limitations on Data Use
LFG, Inspection Reports, Figures, Analytical Data	Ahtna, Operable Unit 2 Remedy Monitoring and Operations and Maintenance, Fourth Quarter 2019 through Third Quarter 2020. October 2021	Trend analysis, design optimization	None
LFG, Inspection Reports, Figures, Analytical Data	Ahtna, Operable Unit 2 Remedy Monitoring and Operations and Maintenance Fourth Quarter 2020 through Third Quarter 2021. June 2022	Trend analysis, design optimization	None
LFG, Inspection Reports, Figures, Analytical Data	Ahtna, Operable Unit 2 Remedy Monitoring and Operations and Maintenance Fourth Quarter 2021 through Third Quarter 2022. June 2023	Trend analysis, design optimization	None

3.5 Worksheet #14 & 16: Project Tasks and Schedule

Sixty-nine monitoring probes and two utility trench probes are located around Areas B through F (Figure 2). Figure 2 also shows the locations of the probes designated as compliance probes for quarterly methane monitoring and annual VOC monitoring.

Annual monitoring is conducted to collect samples for VOCs for fixed-base laboratory analysis. Annual monitoring generally occurs in the second quarter. Source testing generally is concurrent with the annual VOC sampling.

Activity	Responsible party	Frequency	Deliverable(s)
TTU Monitoring	Ahtna	Biweekly or during TTU operation	Annual Report
Landfill O&M	Ahtna	After major rain events and as needed	Annual Report
TTU Inspection / maintenance	Ahtna	During operation, Quarterly	Annual Report
Landfill methane monitoring	Ahtna	Quarterly ¹	Annual Report
Landfill Inspections	Monterey County Department of Health	Quarterly	Annual Report
Landfill Inspections	Ahtna ²	Annually	Annual Report
VOC Monitoring	Ahtna	Annually ³	Annual Report

Notes:

¹ The landfill methane monitoring frequency may be decreased to annual or discontinued based on decision rules presented in Worksheet #11, DQO #4.

² The annual landfill inspection will be performed by a California PE.

³ VOC monitoring frequency may be increased to quarterly based on decision rules presented in Worksheet #11, DQO #3.

3.6 Worksheet #15: Laboratory-Specific Detection/Quantitation Limits^{1,2}

3.6.1 Analytical Group/Method: Fixed Gases/ASTM D1945 – DQO #1: TTU Source Testing (see Worksheet #11)

Estimated Concentration Level: Low

Matrix: Gas (ppmv)

Laboratory: Eurofins

Analyte	CAS Number	Laboratory DL	Laboratory LOD	Laboratory LOQ
O ₂	7782-44-7	42	N/A ³	1000
N ₂	7727-37-9	120	N/A ³	1000
CO	630-08-0	13	33	100
Methane	74-82-8	0.24	0.5	1
CO ₂	124-38-90	11	33	100
Ethane	74-84-0	0.43	1.1	10
Ethene	74-85-1	0.44	1.1	10
Acetylene	74-86-2	0.36	1.1	10
Propane	74-98-6	0.45	1.1	10
Isobutane	75-28-5	0.33	1.1	10
Butane	106-97-8	0.46	1.1	10
Neopentane	463-82-1	0.22	1.1	10
Isopentane	78-78-4	0.31	1.1	10
Pentane	109-66-0	0.42	1.1	10
C6+	N/A	0.38	N/A	100
Hydrogen	1333-74-0	11	31	100
NMOC ref. to Methane (MW=16)	N/A		N/A	N/A

Notes:

CAS = Chemical Abstracts Service

DL = detection limit

LOD = limit of detection

LOQ = limit of quantitation

NMOC = non-methane organic compound (quantified using calibration of hexane and heptane)

¹ Project action limits are not listed in Worksheet #15 because there are no action limits for LFG constituents identified in the OU2 Landfills ROD (Army, 1994); however, these analyses are performed to meet the substantive requirements of ARARs identified in the OU2 Landfills ROD.

² The laboratory will report results that are non-detect to the LOQ. Results will be quantified as estimated between the LOD and the LOQ.

³ LOD analysis requires dilution of the lowest concentration standard, but O₂ and N₂ cannot be reported from a diluted analysis.

3.6.2 Analytical Group/Method: Sulfur Gases/ASTM D5504 – DQO #1: TTU Source Testing (see Worksheet #11)

Estimated Concentration Level: Low

Matrix: Gas (ppbv)

Laboratory: Atmospheric Analysis and Consulting

Analyte	CAS Number	DL (ppbv)	LOD (ppbv)	LOQ (ppbv)
Hydrogen Sulfide	7783-06-4	1.53	3.06	10.5
Carbonyl Sulfide / SO ₂	463-58-1 / 7446-09-5	1.53	3.06	10.5
Methyl Mercaptan	74-93-1	1.18	2.36	11.0
Ethyl Mercaptan	75-08-1	1.18	2.36	11.0
Dimethyl Sulfide	75-18-3	1.18	2.36	11.0
Carbon Disulfide	75-15-0	1.53	3.06	10.5
Isopropyl Mercaptan	75-33-2	1.18	2.36	11.0
tert-Butyl Mercaptan	75-66-1	1.18	2.36	11.0
n-Propyl Mercaptan	107-03-9	1.18	2.36	11.0
Methylethylsulfide	624-89-5	1.53	3.06	10.5
sec-Butyl Mercaptan / Thiophene	513-53-1 / 110-02-1	1.18	2.36	11.0
iso-Butyl Mercaptan	513-44-0	1.18	2.36	11.0
Diethyl Sulfide	352-93-2	1.18	2.36	11.0
n-Butyl Mercaptan	109-79-5	1.18	2.36	11.0
Dimethyl Disulfide	624-92-0	1.18	2.36	11.0
2-Methylthiophene	554-14-3	1.53	3.06	10.5
3-Methylthiophene	616-44-4	1.53	3.06	10.5
Tetrahydrothiophene	110-01-0	1.53	3.06	10.5
Bromothiophene	1003-09-4	1.53	3.06	10.5
Thiophenol	108-98-5	1.53	3.06	10.5
Diethyl Disulfide	110-81-6	1.18	2.36	11.0

Notes:

CAS = Chemical Abstracts Service

DL = detection limit

LOD = limit of detection

LOQ = limit of quantitation

3.6.3 Analytical Group/Method: VOC/TO-15 – DQO #1: TTU Source Testing and DQO #2: Operational Influent LFG Testing (see Worksheet #11)

Estimated Concentration Level: Low

Matrix: Gas (ppbv)

Laboratory: Eurofins

Analyte	CAS Number	Laboratory DL	Laboratory LOD	Laboratory LOQ
1,1-Dichloroethane	75-34-3	0.109	0.45	0.5
1,2,4-Trimethylbenzene	95-63-6	0.135	0.45	2
1,2-Dichlorobenzene	95-50-1	0.134	0.45	0.5
1,2-Dichloroethane	107-06-2	0.172	0.45	0.5
1,2-Dichloropropane	78-87-5	0.136	0.45	0.5
1,3,5-Trimethylbenzene	108-67-8	0.134	0.45	2
1,4-Dichlorobenzene	106-46-7	0.168	0.45	0.5
2,2,4-Trimethylpentane	540-84-1	0.196	0.45	0.5
2-Butanone ¹	78-93-3	0.337	1.5	2
2-Propanol	67-63-0	0.69	1.5	2
4-Ethyltoluene	622-96-8	0.193	0.45	0.5
4-Methyl-2-pentanone	108-10-1	1.391	4	5
Acetone ¹	67-64-1	0.118	0.45	0.5
Benzene	71-43-2	0.381	1.5	2
Carbon disulfide	75-15-0	0.16	0.45	0.5
Carbon tetrachloride	56-23-5	0.105	0.45	0.5
Chlorobenzene	108-90-7	0.693	1.5	2
Chloroethane	75-00-3	0.114	0.45	0.5
Chloroform	67-66-3	0.109	0.45	0.5
cis-1,2-Dichloroethene	156-59-2	0.109	0.45	0.5
Cumene	98-82-8	0.184	0.45	0.5
Cyclohexane ¹	110-82-7	2.479	4	5
Ethanol	64-17-5	0.119	0.45	0.5
Ethyl benzene	100-41-4	0.161	0.45	0.5
Freon 11	75-69-4	0.139	0.45	0.5
Freon 114	76-14-2	0.239	0.45	0.5
Freon 12	75-71-8	0.17	0.45	2
Heptane	142-82-5	0.156	0.45	0.5
Hexane	110-54-3	0.072	0.45	1

Analyte	CAS Number	Laboratory DL	Laboratory LOD	Laboratory LOQ
m,p-Xylene	108-38-3	0.365	1.5	2
Methyl tert-butyl ether	1634-04-4	0.419	1.5	5
Methylene chloride ¹	75-09-2	0.12	0.45	0.5
o-Xylene	95-47-6	0.112	0.45	0.5
Propylbenzene	103-65-1	0.129	0.45	0.5
Tetrachloroethene	127-18-4	0.32	0.45	0.5
Tetrahydrofuran	109-99-9	0.125	0.45	1
Toluene	108-88-3	0.15	0.45	0.5
Trichloroethene	79-01-6	0.42	0.45	0.5
Vinyl chloride	75-01-4	0.109	0.45	0.5

Notes:

CAS = Chemical Abstracts Service

DL = detection limit

LOD = limit of detection

LOQ = limit of quantitation

¹ Common laboratory contaminant

VOCs in LFG are not identified as COCs in the OU2 Landfills ROD (Army, 1994); however, Title 14 CCR Chapter 3, Article 8 (since superseded by [27CCR Chapter 3, Article 6 \[Section 20921\]](#)) and [Air District Rule 207](#) and [Rule 1000](#) are identified as ARARs. These ARARs require control of trace gases to prevent adverse acute and chronic exposure to toxic and/or carcinogenic compounds; therefore, the full list of TO-15 analytes is reported once every five years (next in 2024) to ensure the substantive requirements of these ARARs are met. The list presented contains VOCs that have been consistently detected in samples associated with TTU source testing and operational influent testing (AEI, 2017, 2018, 2019 and Ahtna, 2021a, 2021b, 2022, 2023a). Reduction of VOCs from this list (or addition) is per the analytic approach of DQOs #1 and #2. Accordingly, 3-Chloropropene was removed from the list.

3.6.4 Analytical Group/Method: VOC/TO-15 – DQO #3: Compliance Perimeter Probes (see Worksheet #11)

Estimated Concentration Level: Low

Matrix: Gas (ppbv)

Laboratory: Eurofins

Analyte	CAS Number	Screening Level ¹	Laboratory DL	Laboratory LOD	Laboratory LOQ
1,1,1-Trichloroethane	71-55-6	--	0.122	0.45	0.5
1,1-Dichloroethane	75-34-3	--	0.109	0.45	0.5
1,2-Dichloroethane	107-06-2	--	0.172	0.45	0.5
1,2-Dichloropropane	78-87-5	--	0.136	0.45	0.5
2-Butanone ¹	78-93-3	--	0.69	1.5	2
2-Propanol	67-63-0	--	1.391	4	5
Acetone ¹	67-64-1	--	0.381	1.5	2
Benzene	71-43-2	--	0.16	0.45	0.5
Carbon disulfide	75-15-0	--	0.114	0.45	0.5
Carbon tetrachloride	56-23-5	--	0.852	1.5	5
Chloroform	67-66-3	2.5	0.109	0.45	0.5
Chloromethane	74-87-3	--	2.479	4	5
cis-1,2-Dichloroethene	156-59-2	--	0.161	0.45	0.5
Ethanol	64-17-5	--	0.139	0.45	0.5
Freon 11	75-69-4	--	0.239	0.45	0.5
Freon 113	76-13-1	--	0.156	0.45	0.5
Freon 114	76-14-2	--	0.072	0.45	1
Freon 12	75-71-8	--	0.419	1.5	5
Hexane	110-54-3	--	0.125	0.45	1
m,p-Xylene	108-38-3	--	0.15	0.45	0.5
Methylene chloride ²	75-09-2	--	0.42	0.45	0.5
Tetrachloroethene	127-18-4	67.8	0.109	0.45	0.5
Toluene	108-88-3	--	0.172	0.45	0.5
Trichloroethene	79-01-6	--	0.136	0.45	0.5
Vinyl chloride	75-01-4	3.7	0.337	1.5	2

Notes:

CAS = Chemical Abstracts Service

DL = detection limit

LOD = limit of detection

LOQ = limit of quantitation

¹ Section 3.2.3 (DQO #3: Compliance Perimeter Probes) provides details on the established screening levels.

² Common laboratory contaminant

VOCs in LFG are not identified as COCs in the OU2 Landfills ROD (Army, 1994); however, Title 14 CCR Chapter 3, Article 8 (since superseded by [27CCR Chapter 3, Article 6 \[Section 20921\]](#)) and [Air District Rule 207](#) and [Rule 1000](#) are identified as ARARs. These ARARs require control of trace gases to prevent adverse acute and chronic exposure to toxic and/or carcinogenic compounds; therefore, the full list of TO-15 analytes is reported once every 5 years (next in 2024) to ensure the substantive requirements of these ARARs are met. The list presented contains VOCs that have been consistently detected in samples associated with compliance perimeter probe testing. Reduction of VOCs from this list (or addition) is per the analytic approach of DQO #3. Accordingly, 2,2,4-Trimethylpentane, 3-Chloropropene, Cumene, Heptane, and Propylbenzene were removed from the list.

3.6.5 Mobile Laboratory Analytical Group/Methods – DQO #1: TTU Source Testing (see Worksheet #11)

Estimated Concentration Level: not applicable

Matrix: Gas (ppmv)

Laboratory: Best Environmental

Analyte	EPA Method	CAS Number	Laboratory LOQ
CO	10	630-08-0	0.5
NO _x	7E	10024-97-2/10102-44-0	0.5
O ₂	3A	7782-44-7	0.25
CO ₂	3A	124-38-9	0.25
Methane/NMOC/THC	25A	Various	1.0

Notes:

CAS = Chemical Abstracts Service

EPA = U.S. Environmental Protection Agency

LOQ = limit of quantitation

NMOC = non-methane organic compounds

THC = total hydrocarbons

4.0 Sample Design

4.1 Worksheet #17: Sampling Design and Rationale

The O&M Plan (Ahtna, 2023b) provides procedures for monitoring the operation of the TTU, including vents, probes, and EWs. Section 5.0 of the O&M Plan describes the perimeter monitoring system that is used to test the operational influent and effluent LFG.

Passive vents were installed at 19 locations to minimize the potential for gas buildup beneath the geomembrane (Figure 2). Five vents (VD-2, VD-3, VF-3, VF-4, and VF-5) were converted to Eps to provide supplemental methane to the TTU. All other vents, with the exception of VE-7 and VE-8, were capped in 2001 to mitigate a potential fire hazard. VE-7 and VE-8 were placed in the vertical expansion portion of Area E and are left open because this is a sealed area of the landfill. The 14 passive vents are not monitored for compliance but are monitored quarterly for methane using a portable LFG analyzer. The vents that were converted to Eps are monitored during TTU operations.

To monitor LFG migration, 46 monitoring, 21 compliance, and two (2) utility trench probes are located around Areas B through F. Twenty-one compliance probes were installed at a spacing of approximately 1,000 feet around the property boundary as required by 27CCR. The monitoring probes are used to measure Methane, O₂, CO₂, and balance gas (collectively termed LFG) at additional points around the OU2 Landfills at depths ranging from 12 to 32 feet bgs. A LANDTEC GEM™5000 instrument is used to measure these parameters. The utility trench probes are 4 feet deep. Samples collected from the 21 compliance probes are sent to an off-site laboratory annually for VOC analysis by EPA Method TO-15.

Two types of testing are conducted for the TTU: source testing and operational influent LFG testing. The primary objective of the source testing is to determine whether the TTU operates efficiently. A certified mobile laboratory conducts the source test, which includes analysis of the TTU influent and effluent for the parameters listed below.

Parameter	Monitoring and Analytical Protocols
Nox, CO, O ₂ , and CO ₂	EPA Methods 7E, 10, and 3A
Outlet Methane/NMOC/THC and Speciated VOCs	EPA Method 25A and TO-15
Inlet NMOC and Speciated VOCs	ASTM D1945 and EPA Method TO-15
Inlet Total Reduced Sulfurs	ASTM D5504
LFG Higher Heating Value and Outlet Volumetric Flow Rate	ASTM D1945 and EPA Method 19

Operational influent LFG testing is used to establish the schedule of operations for optimum operation of the TTU. Operational influent LFG testing also aids in quantifying the amounts of VOCs that are being removed from the OU2 Landfills.

Figure 3 presents the locations of the EWs/vents, the collection system, and the TTU system. Section 4.2, Worksheet #18 lists the sampling locations and methods.

4.2 Worksheet #18: Sampling Locations and Methods

4.2.1 Operable Unit 2 Landfills

Area	Probe ID	Matrix	Type	Depth (feet)	Analytical Group	Sampling SOP Reference ¹	Frequency ²	Rationale
B	SGP-1B	LFG	Sample Port	12	Fixed Gases ³	1	NA	Monitoring Point DQO#3
B	SGP-2B	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Monitoring Point DQO#4
B	SGP-3B	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
B	SGP-4B	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
B	SGP-5B	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
C	SGP-1C	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
C	SGP-2C	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOC	2	Annually – Fixed Lab	
C	SGP-3C	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
D	SGP-1D	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Monitoring Point DQO#4
D	SGP-1D	LFG	Sample Port	22	Fixed Gases	1	Quarterly	Monitoring Point DQO#4
D	SGP-2D	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
D	SGP-2D	LFG	Sample Port	22	Fixed Gases	1	NA	Monitoring Point DQO#4
D	SGP-3D	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
D	SGP-3D	LFG	Sample Port	22	Fixed Gases	1	NA	Monitoring Point DQO#4
D	SGP-4D	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	

Area	Probe ID	Matrix	Type	Depth (feet)	Analytical Group	Sampling SOP Reference ¹	Frequency ²	Rationale
D	SGP-4D	LFG	Sample Port	22	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
D	SGP-5D	LFG	Sample Port	4	Fixed Gases	1	NA	Monitoring Point DQO#4
D	SGP-6D	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
D	SGP-6D	LFG	Sample Port	22	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
E	SGP-1E	LFG	Sample Port	12	Fixed Gases	2	Quarterly	Monitoring Point DQO#4
E	SGP-2E	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Monitoring Point DQO#4
E	SGP-3E	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Monitoring Point DQO#4
E	SGP-4E	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Monitoring Point DQO#4
E	SGP-5E	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
E	SGP-6E	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
E	SGP-7E	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
E	SGP-8E	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
E	SGP-9E	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
F	SGP-1F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-1F	LFG	Sample Port	22	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-2F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4

Area	Probe ID	Matrix	Type	Depth (feet)	Analytical Group	Sampling SOP Reference ¹	Frequency ²	Rationale
F	SGP-2F	LFG	Sample Port	32	Fixed Gases	1	Quarterly	Monitoring Point DQO#4
F	SGP-3F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-3F	LFG	Sample Port	32	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-4F	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Monitoring Point DQO#4
F	SGP-4F	LFG	Sample Port	32	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-5F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-5F	LFG	Sample Port	32	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-6F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-6F	LFG	Sample Port	32	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-7F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-7F	LFG	Sample Port	32	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-8F	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
F	SGP-8F	LFG	Sample Port	22	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
F	SGP-9F	LFG	Sample Port	22	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-10F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-10F	LFG	Sample Port	22	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-11F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-11F	LFG	Sample Port	32	Fixed Gases	1	Annually	Monitoring Point DQO#4
F	SGP-12F	LFG	Sample Port	32	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-13F	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3

Area	Probe ID	Matrix	Type	Depth (feet)	Analytical Group	Sampling SOP Reference ¹	Frequency ²	Rationale
					VOCs	2	Annually – Fixed Lab	
F	SGP-13F	LFG	Sample Port	32	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
F	SGP-14F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-14F	LFG	Sample Port	32	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-15F	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
F	SGP-15F	LFG	Sample Port	32	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
F	SGP-16F	LFG	Sample Port	4	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-17F	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
F	SGP-17F	LFG	Sample Port	32	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
F	SGP-18F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-18F	LFG	Sample Port	32	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-19F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-19F	LFG	Sample Port	22	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-20F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-20F	LFG	Sample Port	32	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-21F	LFG	Sample Port	12	Fixed Gases	1	NA	Monitoring Point DQO#4
F	SGP-21F	LFG	Sample Port	22	Fixed Gases	1	NA	Monitoring Point DQO#4

Area	Probe ID	Matrix	Type	Depth (feet)	Analytical Group	Sampling SOP Reference ¹	Frequency ²	Rationale
F	SGP-22F	LFG	Sample Port	12	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	
F	SGP-22F	LFG	Sample Port	32	Fixed Gases	1	Quarterly	Compliance DQO#3
					VOCs	2	Annually – Fixed Lab	

Notes:

LFG = landfill gas

NA = not applicable (the probe is no longer monitored per decision criteria presented in Worksheet #11, DQO #3)

SGP = soil gas probe

SOP = standard operating procedure

TTU = thermal treatment unit

¹ SOPs are listed on Worksheet #21.

² The landfill gas probe monitoring frequency is based on decision rules presented in Worksheet #11, DQO #4.

³ Fixed Gases include Methane, CO₂, O₂, and balance gas. Barometric pressure data is collected during probe monitoring, and induced vacuum is measured during system monitoring.

The sampling number system that will be employed is as follows: The three-digit area location is followed by the source location or probe identifier, followed by a sequential sample numbering system of up to four numbers for each location. For example, SGP-15F-depth will be recorded as OU2GMXXXX; where XXXX is the next four-digit sequential number.

4.2.2 Thermal Treatment Unit/Extraction Points

Area	TTU Location	Matrix	Type	Depth (feet)	Analytical Group	Sampling SOP Reference ¹	Frequency	Rationale
D	VD-3	LFG	Sample Port	6	Fixed Gases ²	1	Biweekly	System Optimization DQO#2
D	EW-35	LFG	Sample Port	75	Fixed Gases	1	Biweekly	System Optimization DQO#2
D	VD-2	LFG	Sample Port	6	Fixed Gases	1	Biweekly	System Optimization DQO#2
F	VF-3	LFG	Sample Port	6	Fixed Gases	1	Biweekly	System Optimization DQO#2
F	EW-34	LFG	Sample Port	60	Fixed Gases	1	Biweekly	System Optimization DQO#2
F	VF-4	LFG	Sample Port	6	Fixed Gases	1	Biweekly	System Optimization DQO#2
F	EW-33	LFG	Sample Port	70	Fixed Gases	1	Biweekly	System Optimization DQO#2
F	EW-32	LFG	Sample Port	60	Fixed Gases	1	Biweekly	System Optimization DQO#2
F	VF-5	LFG	Sample Port	6	Fixed Gases	1	Biweekly	System Optimization DQO#2
F	EW-31	LFG	Sample Port	60	Fixed Gases	1	Biweekly	System Optimization DQO#2
F	EW-30	LFG	Sample Port	60	Fixed Gases	1	Biweekly	System Optimization DQO#2
TTU	Area F Header	LFG	Sample Port	NA	Fixed Gases	1	Biweekly	System Optimization DQO#2
TTU	Mixed	LFG	Sample Port	NA	Fixed Gases	1	Biweekly	Source Test Calculation of quantity of VOCs removed DQO#1
					VOCs Fixed Gases Sulfur	2	Annually – Fixed Lab	
TTU	Stack Outlet	LFG	Sample Port	NA	VOCs	1	Annually – Fixed Lab	Source Test DQO#1
TTU	Area D Vents	LFG	Sample Port	NA	Fixed Gases	1	Biweekly	Trend analysis DQO#2

Area	TTU Location	Matrix	Type	Depth (feet)	Analytical Group	Sampling SOP Reference ¹	Frequency	Rationale
					VOCs	2	Annually – Fixed Lab	
TTU	Area F EWs	LFG	Sample Port	NA	VOCs	2	Annually – Fixed Lab	Trend analysis DQO#2
TTU	Area E Header	LFG	Sample Port	NA	Fixed Gases	1	Biweekly	Trend analysis DQO#2
					VOCs	2	Annually – Fixed Lab	
TTU	Area F Extraction Vents	LFG	Sample Port	NA	VOCs	2	Annually – Fixed Lab	Trend analysis DQO#2

Notes:

EW = Extraction Well

LFG = landfill gas

NA = not applicable (the probe is no longer monitored per decision criteria presented in Worksheet #11, DQO #3)

SGP = soil gas probe

SOP = standard operating procedure

TTU = thermal treatment unit

VD = Passive Vent in Area D

VF = Passive Vent in Area F

¹ SOPs are listed on Worksheet #21.

² Fixed Gases include Methane, CO₂, O₂, and balance gas. Barometric pressure data is collected during probe monitoring, and induced vacuum is measured during system monitoring.

The sampling number system that will be employed is as follows: The three-digit area location is followed by the source location or probe identifier, followed by a sequential sample numbering system of up to four numbers for each location. For example, the stack outlet sample at the TTU will be recorded as TTU-FO-XXXX; where XXXX is the next four-digit sequential number.

5.0 Sampling Requirements

5.1 Worksheet #19 & 30: Sample Containers, Preservation, and Hold Times

Laboratory: Eurofins
 180 Blue Ravine Road, Suite B
 Folsom, CA 95630-4719
 Telephone: 916-605-3408
 Point of Contact: Monica Tran
 Email: monica.tran@reports.et.eurofinsus.com
 Sample Delivery Method: Expedited mail service

Analytical Group	Matrix	Analytical Method	Accreditation Expiration ¹	Containers (number, size, and type)	Preservation	Analytical Holding Time	Data Package Turnaround
Fixed Gases	Soil Gas	ASTM D1945	Oregon ELAP: 10-17-24; Certification No: CA30005-020 DoD ELAP: 04-27-26; Certificate Number: ADE-1451	6L-stainless steel SUMMA™ Canister	None	30 days	21 days
VOCs	Soil Gas	TO-15		6L-stainless steel SUMMA™ Canister	None	30 days	21 days

Notes:

DoD = Department of Defense
 ELAP = Environmental Laboratory Accreditation Program
 NELAP = National Environmental Laboratory Accreditation Program

¹ The Oregon ELAP certification satisfies NELAP requirements.

Laboratory: Atmospheric Analysis & Consulting Labs
 2225 Sperry Avenue
 Ventura, CA 93003
 Telephone: 909-396-2000
 Point of Contact: Crystal Moreno
 Email: qadept@aaclab.com
 Sample Delivery Method: Expedited mail service

Analytical Group	Matrix	Analytical Method	Accreditation Expiration	Containers (number, size, and type)	Preservation	Analytical Holding Time	Data Package Turnaround
Sulfur Gases	Soil Gas	ASTM D5504	South Coast Air Quality Management District exp. 11/30/24	Tedlar™ Bag ¹	None	24 hours	21 days

Notes:

¹ Tedlar™ bags used only during the annual source test for this method only.

5.2 Worksheet #20: Field Quality Control Summary

Matrix	Analytical Group	Preparation/Analysis Reference	Approximate Number of Primary Sampling Locations ¹	No. of Field Duplicates	Total Number of Analyses
Soil Gas	Fixed Gases	ASTM D1945	1	1	2
Soil Gas	VOCs	TO-15	28	3	31
Soil Gas	Sulfur Gases	ASTM D5504	1	1	2

Notes:

¹ Samples collected at different depths at the same location are counted as separate sampling locations or stations.

5.3 Worksheet #21: Field SOPs

This worksheet documents specific field procedures that will be implemented for work conducted at the OU2 Landfills. The field SOPs will be readily available to all field personnel responsible for their implementation. The SOPs listed below are included in Attachment A.

SOP Reference Number	Title, Revision, Date	Equipment Type	Modified for Project Work? (Y/N)	Comments
1	GEM™5000 Gas Analyzer and Extraction Monitor, Operation Manual (LANDTEC, 2018)	Portable landfill gas analyzer	No	Includes instrument calibration procedures
2	Guide to Air Sampling Canister and Bags (Eurofins, 2014)	SUMMA™ Canister or Tedlar™ Bag	No	Methods for sampling soil gas
3	Field Sampling Procedure Using Summa Canisters with RAVEqc Quick-Connect (QT) Fittings (Eurofins, 2019)	Quick-Connect (QT) Fittings	No	Methods for sampling soil gas
4	DoD Environmental Field Sampling Handbook, Revision 1.0, April 2013, Chapter 3. "Common Sampling Procedures" (DoD, 2013)	NA	No	Includes sample documentation, packaging, shipping, and chain of custody requirements
FSOP-001	Fieldwork Documentation	NA	No	Fieldwork Documentation
FSOP-002	Sample Management	NA	No	Sample Management
FSOP-802	Investigation Derived Waste Management	NA	No	Investigation Derived Waste Management
ST-1 ¹	Source Test Protocol, Former Fort Ord, Monterey, CA. Thermal Treatment Unit (TTU). April 15, 2024	Mobile laboratory	Yes	

Notes:

¹ SOP ST-1 is for mobile laboratory analysis used during the source test.

NA = not applicable

5.4 Worksheet #22: Field Equipment Calibration, Maintenance, Testing, and Inspection

Field Instrument specifications for source testing are as follows:¹

NO_x/NO Chemiluminescent Analyzer – Ecophysics Model 70E	
Zero drift	Negligible after 30-minute warm-up
Linearity	±1% of full scale
Accuracy	±1% of full scale
Output	0-10 V
Range	0-50, 100 ppmv
O₂ Analyzer, Fuel Type – Teledyne Model 326A	
Accuracy	±1% of scale at constant temperature or ±1% of scale at ±5% of reading, whichever is greater, over the operating temperature range
Output	0-1 V
Range	0-10, 25%
CO Infrared Analyzer – Horiba Model VIA 510	
Zero drift	±1%
Span drift	±1%
Linearity	±1%
Output	0-1 V
Range	0-100 ppmv
THC Flame Ionization Detector Analyzer – TECO Model 51	
Zero drift	±1%
Span drift	±1%
Linearity	±1%
Output	0-10 V
Range	0-50 ppmv

Notes:

¹ See SOP ST-1, Source Test Protocol (Attachment B) for mobile laboratory equipment calibration, maintenance, testing, and inspection procedures.

Field Equipment ¹	Activity	SOP/ Method Reference	Responsible Person	Frequency	Acceptance Criteria	Corrective Action
Gas Analyzer	Calibration	Operations Manual	Field Team Lead (FTL)	Daily during use	Manufacturer's Specifications	Adjust instrument
Infrared O ₂ Analyzer	Calibration	ST-1 ¹ /EPA Method 3A		Daily during use prior to and after completion of analytical batch	2% of span	
	Bias Check				5% of span	
	Response time check				< 2 minutes	
Flame ionization detector	Calibration	ST-1/EPA Method 25A		Daily, prior to and after completion of analytical batch	5% of span	
	Drift Test				3% of span	
Nondispersive infrared sensor CO analyzer	Calibration	ST-1/EPA Method 10		Daily, prior to and after completion of analytical batch	2% of span	
	Calibration error check				3% of span	
	Bias Check				5% of span	
	Response time check				< 2 minutes	
Chemiluminescent Analyzer	Calibration	ST-1/EPA Method 7E			2% of span	
	Bias Check				5% of span	
	Response time check				< 2 minutes	

Notes:

¹ See SOP ST-1, Source Test Protocol (Attachment B) for mobile laboratory equipment calibration, maintenance, testing, and inspection procedures.

6.0 Analytical Requirements

6.1 Worksheet #23: Analytical SOPs

The SOPs referenced below are the laboratory-specific procedures for the tests for which the laboratory is certified under DoD ELAP and NELAP (fixed laboratory) and California Air Resources Board (mobile laboratory). Copies of certifications, including the specifically referenced method, are included in Attachment B.

Data will be evaluated based on the guidance provided in the DoD QSM Version 5.4, published methods, and laboratory SOPs.

SOP Reference Number	Title, Revision Date, and / or Number	Definitive or Screening Data	Matrix/ Analytical Group	Equipment Type	Modified for Project Work? (Y/N)
6	Analysis of Volatile Organic Compounds in SUMMA™ Polished Canisters by Modified EPA Methods TO-14A/TO-15 ¹ 05/24/24, Revision 50	Definitive	VOCs	Mass Spectrometer	No
50	Sample Receiving/Login Procedures 11/22/23, Revision 31	NA	NA	NA	No
54	Analysis of Natural Gases by Modified ASTM D1945 08/12/23, Revision 28	Definitive	Fixed Gases	Gas Chromatograph	No
63	Sample Tracking, Transmittal and Custody Procedures 07/14/23, Revision 25	NA	NA	NA	No
A.5504.07	SOP, Determination of Sulfur Compounds in Natural Gas and Gaseous Fuels by Gas Chromatography and Chemiluminescence 3/15/23, Revision 7 ¹	Definitive	Sulfur Gases	Sulfur Chemiluminescence Detector	No
LAB.107	Sample Receiving, Shipping and Disposal 3/18/2024, Revision 12	NA	NA	NA	No

SOP Reference Number	Title, Revision Date, and / or Number	Definitive or Screening Data	Matrix/ Analytical Group	Equipment Type	Modified for Project Work? (Y/N)
LAB.103	Sample Login Using Labtrack 3/18/2024, Revision 3	NA	NA	NA	No

Notes:

¹ SOP is available upon request.

6.2 Worksheet #24: Analytical Instrument Calibration

Instrument	Calibration Procedure	Calibration Frequency	Acceptance Criteria	Corrective Action	Responsible Person(s)	SOP Reference ¹
Gas Chromatograph (GC)	Initial Calibration (ICAL)	Prior to sample analysis and annually	< 15% Relative Standard Deviation (RSD)	Correct problem, then repeat Initial Calibration.	Laboratory Analyst/Section Manager	54 ASTM D1945
GC	Initial Calibration Verification and Laboratory Control Sample (ICV and LCS)	After each initial calibration and once per analytical batch	85–115% Recovery (%R)	Check the system and reanalyze the standard. Re-prepare the standard if necessary. If the primary standard is found to be in error, re-prepare the primary and calibrate the instrument.	Laboratory Analyst/Section Manager	54 ASTM D1945
GC	Continuing Calibration Verification (CCV)	Daily prior to sample analysis and after every 20 reportable samples	Percent Difference (% D) < 15%	Check the system and reanalyze the standard. Recalibrate the instrument if the criteria cannot be met.	Laboratory Analyst/Section Manager	54 ASTM D1945

Instrument	Calibration Procedure	Calibration Frequency	Acceptance Criteria	Corrective Action	Responsible Person(s)	SOP Reference ¹
GC	ICAL	Prior to sample analysis	A minimum of 3 points $R^2 \geq 0.990$ Max range $\leq 5\%$ for three consecutive trials %R: 95-105% of theoretical value	Rerun curve; prepare new standards and rerun curve.	Laboratory Analyst/Section Manager	A.5504.07 ASTM D5504
GC	CCV	After the curve; before analyzing any samples; and at the end of each sequence	Max range $\leq 5\%$ for three consecutive trials %R: 95-105% of theoretical value	Rerun check; prepare new standard and rerun; flag data.	Laboratory Analyst/Section Manager	A.5504.07 ASTM D5504
Gas Chromatograph/ Mass Spectrometer (GCMS)	Tuning Criteria	Prior to ICAL and prior to each 24-hour period of sample analysis	Specific ion abundance criteria of BFB from method.	Retune instrument and verify.	Laboratory Analyst/Section Manager	6 TO-15
GCMS	Minimum 5-Point ICAL	Prior to sample analysis	Calculated RSD for the RRF of each target analyte in the calibration must be less than 30%	Correct the problem, then repeat ICAL.	Laboratory Analyst/Section Manager	6 TO-15
GCMS	ICV (second source)	After each initial calibration curve, and daily prior to sample analysis	All reported analytes within $\pm 30\%$ of true value	Correct problem. Rerun ICV. If that fails, repeat ICAL.	Laboratory Analyst/Section Manager	6 TO-15

Instrument	Calibration Procedure	Calibration Frequency	Acceptance Criteria	Corrective Action	Responsible Person(s)	SOP Reference ¹
GCMS	CCV	Daily before sample analysis; after every 24 hours of analysis time; and at the end of the analytical batch run	Concentration the same as the mid-point calibration standard (or lower). All reported analytes within $\pm 30\%$ of true value.	Immediately analyze two additional consecutive CCVs. If both pass, samples may be reported without reanalysis. If either fails or if two consecutive CCVs cannot be run, perform corrective action(s) and repeat CCV and all associated samples since the last successful CCV. Alternately, recalibrate if necessary; then reanalyze all associated samples since the last acceptable CCV.	Laboratory Analyst/Section Manager	6 TO-15

Notes:

¹ SOPs are listed on Worksheet #23.

6.3 Worksheet #25: Analytical Instrument and Equipment Maintenance, Testing, and Inspection

Analytical instruments used for this project will be maintained in accordance with the requirements presented in the Eurofins QA Manual and the individual analytical method SOPs. The Eurofins QA Manual also presents the documentation requirements for maintenance activities.

Instrument/Equipment	Maintenance Activity	Testing Activity	Inspection Activity	Frequency	Acceptance Criteria	Corrective Action	Responsible Person(s)	SOP Reference ¹
GCMS	Check for leaks, replace gas line filters, replace column, clean injection port/liner	VOC	Monitor instrument performance via tune and CCV	As needed	Calibration and QC criteria met	Replace connections, clean source, replace gas line filters, replace GC column, clip column, replace injection port liner, clean injection port, replace electron multiplier.	Laboratory Analyst/Section Manager	6
GC-Flame Ionization Detector	Clean injection port and replace liner, clip/replace column	Gases	Monitor instrument performance via Continuing Calibration	Daily	Calibration and QC criteria met	Change column instrument maintenance.	Laboratory Analyst/Section Manager	54

Instrument/ Equipment	Maintenance Activity	Testing Activity	Inspection Activity	Frequency	Acceptance Criteria	Corrective Action	Responsible Person(s)	SOP Reference ¹
Sulfur Chemiluminescence Detector	Inspect the system, clean sample introduction line	Sulfur Gases	Monitor instrument performance via Continuing Calibration	Daily	Calibration and QC criteria met	Evaluate system.	Laboratory Analyst/ Section Manager	A.5504.07

Notes:

¹ Analytical SOPs are listed on Worksheet #23.

6.4 Worksheet #26 & 27: Sample Handling, Custody, and Disposal

Sampling Organization: Ahtna

Laboratories: Eurofins/Atmospheric Analysis and Consulting

Method of sample delivery (shipper/carrier): Overnight Courier

Number of days from reporting until sample disposal: No less than 30 days after final report sent to the client

Activity	Organization and Title or Position of Person Responsible for the Activity	SOP Reference ¹
Sample labeling	Ahtna/Field Technician	Field SOP #3, FSOP-001, FSOP-002
Chain of custody form completion		
Packaging		
Shipping coordination		
Sample receipt, inspection, & log-in	Eurofins Sample Management Supervisor	SOP #50, #63
Sample custody and storage	Atmospheric Analysis and Consulting Sample Management Supervisor	SOP #LAB.103, LAB.107

Notes:

¹ Field SOPs are listed in Worksheet #21 and included in Attachment A.

6.5 Worksheet #28: Analytical Quality Control and Corrective Action

The following tables provide guidance for the evaluation of QC analyses and the implementation of corrective action for situations outside of acceptance limits. The method-specific acceptance criteria are presented in the applicable table in Worksheet #12 and Worksheet #15. For QC and corrective action specific to the field methods used by the mobile laboratory, refer to the method (EPA Methods 3A, 7E, 10, and 25A), which can be found at <https://www.epa.gov/emc/emc-promulgated-test-methods>.

6.5.1 Analytical Group/Method/SOP: Fixed Gases/ASTM D1945/SOP #54

QC Sample	Frequency/Number	Method/SOP QC Acceptance Limits	Corrective Action	Responsible Person(s)	Project Measurement Performance Criteria
Method Blank	1 per extraction batch ¹	Target analytes not detected \geq LOQ and $> \frac{1}{10}$ the amount measured in any sample or $\frac{1}{10}$ the regulatory limit (whichever is greater)	Reanalyze samples; qualify as needed.	Laboratory Analyst/Section Manager	Representativeness
LCS (Lab QC)	1 per batch ¹	Laboratory-specific %R acceptance criteria	Evaluate system; reanalyze.	Laboratory Analyst/Section Manager	Accuracy/Bias
Laboratory Duplicate	1 per batch ¹	Laboratory-specific RPD acceptance criteria	Evaluate system; reanalyze.	Laboratory Analyst/Section Manager	Precision
Relative Retention Time (RRT) Position	Confirmed at method setup and after major maintenance	RT windows established by calculating the standard deviation of the mean absolute retention time over a 72-hour period. 3 x standard deviation must be <0.08 min for analysis to proceed	Correct problem; recalibrate instrument; reanalyze results as necessary.	Laboratory Analyst/Section Manager	Analyte Identification

Notes:

¹The batch criteria is 20 reportable samples.

6.5.2 Analytical Group/Method/SOP: Sulfur Gases/ASTM D5504/A.5504.07

QC Sample	Frequency/ Number	Method/SOP QC Acceptance Limits	Corrective Action	Responsible Person(s)	Measurement Performance Criteria
Method Blank	1 per extraction batch	Target analytes not detected > ½ LOQ	Reanalyze samples; qualify as needed.	Laboratory Analyst/Section Manager	Representativeness
LCS (Lab QC)	1 per batch	Laboratory-specific %R acceptance criteria	Evaluate system; reanalyze.	Laboratory Analyst/Section Manager	Accuracy/Bias
Laboratory Duplicate	1 per batch	Analyte-specific RPD acceptance criteria	Evaluate system; reanalyze.	Laboratory Analyst/Section Manager	Precision

6.5.3 Analytical Group/Method/SOP: VOCs/TO-15/SOP #6

QC Sample	Frequency/ Number	Method/SOP QC Acceptance Limits	Corrective Action	Responsible Person(s)	Measurement Performance Criteria
Method Blank	1 per extraction batch	Target analytes not detected > ½ LOQ	Reanalyze samples; qualify as needed.	Laboratory Analyst/Section Manager	Representativeness
LCS (Lab QC)	1 per batch	See Worksheet #12	Evaluate system; reanalyze.	Laboratory Analyst/Section Manager	Accuracy/Bias
Laboratory Duplicate	1 per batch	Analyte-specific RPD acceptance criteria	Evaluate system; reanalyze.	Laboratory Analyst/Section Manager	Precision
Surrogate	1 per blank, sample, and standard	Surrogate-specific %R acceptance criteria	Evaluate system and samples; reanalyze.	Laboratory Analyst/Section Manager	Accuracy/Bias
Internal Standard Performance	Every sample	Peak area ± 40 % of the peak area in the corresponding CCV; retention time within ±20 seconds of the corresponding CCV	Reanalyze or qualify results as necessary.	Laboratory Analyst/Section Manager	Accuracy/Bias

QC Sample	Frequency/ Number	Method/SOP QC Acceptance Limits	Corrective Action	Responsible Person(s)	Measurement Performance Criteria
RRT Position	Once per initial calibration and at the beginning of the analytical shift	RRT within ± 0.06 RRT units for each analyte and surrogate	Correct problem; recalibrate instrument; reanalyze results as necessary.	Laboratory Analyst/Section Manager	Analyte Identification
Mass Spectrometer Results	All positive results must be confirmed	Spectral match to reference spectrum	Analyst must evaluate results to confirm identification if spectral match does not meet criteria; Section Manager must review analyst's determination.	Laboratory Analyst/Section Manager	Analyte Identification

7.0 Data Management and Data Review

7.1 Worksheet #29: Project Documents and Records

At a minimum, the following documentation will be used for sample collection and field measurement activities. Examples of field forms are presented in Attachment C.

Sample Collection and Field Records			
Record	Generation	Verification	Storage location/archive
Field notes/logbook	Field Team Lead	Project Manager	Project File ¹
Chain of custody forms	Field Team Lead	Project Manager	Project File
Laboratory raw data package	Eurofins	Project Chemist	Project File
PDF copy of analytical data	Eurofins	Project Chemist	Fort Ord Administrative Record
Audit/assessment checklists/reports	Field Team Lead/Project Chemist	Project Manager	Project File
Corrective action reports	Field Team Lead/Project Chemist	Project Manager	Project File
Laboratory sample custody log	Eurofins	Project Chemist	Project File
Laboratory equipment calibration logs	Eurofins	Project Chemist	Project File
Sample preparation logs	Eurofins	Project Chemist	Project File
Run logs	Eurofins	Project Chemist	Project File
Sample disposal records	Eurofins	Project Chemist	Project File
Electronic Validated data/Manual Validated data/Data Validation Reports	Data Validation Subcontractor	Project Chemist	Fort Ord Data Integration System (FODIS) chemistry database
Annual Report	Task Manager	USACE Project Manager	Fort Ord Administrative Record

Notes:

¹ The Project File is maintained on a secure server accessible at the Monterey Project Office.

7.2 Worksheet #31, 32 & 33: Assessments and Corrective Action

Assessments

Assessment Type	Responsible Personnel and Organization	Number and Frequency	Assessment Deliverable	Deliverable Due Date
Review of QAPP, SOPs, and Accident Prevention Plan with Field Staff	FTL/Ahtna	Prior to sampling startup and with all new field staff prior to assignment	Completed acknowledgement signature pages	48 hours following assessment
Work performed in accordance with site-specific QAPPs	FTL/Ahtna	Ongoing during all phases of fieldwork	Daily progress reports	24 hours following conclusion of business day
Logbook and Field Form Review	FTL/Ahtna	Daily	NA; corrections will be made directly to reviewed documents	24 hours following assessment
Laboratory Assessment for Appropriate Certifications, Capacity, and QAPP Review with Staff	Project Chemist/Ahtna	Prior to sampling mobilization, as new laboratories are contracted	Receipt of copies of certifications. Email traffic concerning lab capacity prior to sampling startup. QAPP sign-off sheet received from laboratory	48 hours following assessment
Tailgate Safety Meeting	SSHO/Ahtna	Daily	Verbal debriefing and daily sign-off log. If a safety incident occurs, a Supervisor Injury Employee Report is completed	Weekly; any safety incidents will be reported to the PM and Corporate Health and Safety Officer immediately
Daily QC Reports	FTL/Ahtna	Ongoing during all phases of fieldwork	Three Phase Inspection Forms (Attachment D)	24 hours following conclusion of business day
Field Sampling and Chain of Custody Form Review Against QAPP Requirements	Project Chemist/Ahtna	Daily	Corrections will be made directly to reviewed documents; communication may be in the form of email	24 hours following assessment

Assessment Type	Responsible Personnel and Organization	Number and Frequency	Assessment Deliverable	Deliverable Due Date
Data Validation	Data Validation Chemist/ Laboratory Data Consultants	Per Sample Delivery Group	Communication may be in the form of email traffic Amendment of the analytical report or corrective actions due to deficiencies identified in the validation process	24 hours following assessment
Laboratory Report Deliverables and Analytical Results Against QAPP Requirements	Project Chemist/Ahtna	As discrepancies are identified in the validation process	Memorandum or email to PM and Project Chemist	72 hours following assessment

Notes:

FTL – Field Technical Lead
 QAPP – Quality Assurance Project Plan
 QC – Quality Control
 SOP – Standard Operating Procedure
 SSHO – Site Safety and Health Officer

Assessment Response and Corrective Action

Assessment Type	Individual(s) Notified of Findings	Assessment Response Documentation	Time Frame for Response	Responsibility for Implementing Corrective Action	Responsibility for Monitoring Corrective Action
Review of QAPP, SOPs, and Accident Prevention Plan with Field Staff	FTL	Completed acknowledgement signature pages	48 hours following assessment	FTL	PM and QC Manager
Work performed in accordance with site-specific QAPP	PM	Interim CA documented pending final approval	By close of same business day	FTL	PM and QC Manager
Logbook and Field Form Review	FTL	Corrections will be made directly to reviewed documents	NA	FTL	PM
Laboratory Assessment for Appropriate Certifications, Capacity, and QAPP Review with Staff	Project Chemist	Response to email or memorandum	48 hours after notification	Laboratory PM	Project Chemist
Tailgate Safety Meeting	FTL	Included as part of the process of the Supervisor Injury Employee Report	24 hours after notification	Ahtna PM	Corporate H&S Manager
Daily QC Reports	FTL	Corrections will be made directly to reviewed documents	NA	FTL	PM and QC Manager
Field Sampling and Chain of Custody Form Review Against QAPP Requirements	Project Chemist	Response to email	48 hours after notification	FTL	PM and QC Manager

Assessment Type	Individual(s) Notified of Findings	Assessment Response Documentation	Time Frame for Response	Responsibility for Implementing Corrective Action	Responsibility for Monitoring Corrective Action
Data Validation	Project Chemist	If required, laboratory reports will be amended and corrections noted in the analytical narrative and contained with the validation report	1 business week	Data Validation PM	Project Chemist
Laboratory Report Deliverables and Analytical Results Against QAPP Requirements	Project Chemist	If required, laboratory reports will be amended and corrections noted in the analytical narrative	72 hours after notification	Laboratory PM	Laboratory QA Manager/ Project Chemist

Notes:

- FTL – Field Technical Lead
- NA – Not Applicable
- PM – Project Manager
- QAPP – Quality Assurance Project Plan
- QC – Quality Control
- SOP – Standard Operating Procedure
- SSHO – Site Safety and Health Officer

7.3 Worksheet #34: Data Verification and Validation Inputs

This worksheet lists the inputs that will be used during data verification and validation. Inputs include planning documents, field records, and laboratory records. Data verification is a check that all specified activities involved in collecting and analyzing samples have been completed and documented and that the necessary records (objective evidence) are available to proceed to data validation. Data validation is the evaluation of conformance to stated requirements, including those in the contract, methods, SOPs, and the QAPP.

Item	Description	Verification (completeness)	Validation (conformance to specifications)
Planning Documents/Records			
1	Approved QAPP	X	
2	Contract	X	
4	Field SOPs	X	
5	Laboratory SOPs	X	
Field Records			
6	Field Logbooks	X	X
7	Equipment Calibration Records	X	X
8	Chain of Custody Forms	X	X
9	Sampling Diagrams/Surveys	X	X
10	Relevant Correspondence	X	X
11	Change Orders/Deviations	X	X
12	Field Audit Reports	X	X
13	Field Corrective Action Reports	X	X
Analytical Data Package			
14	Cover Sheet (laboratory identifying information)	X	X
15	Case Narrative	X	X
16	Sample Chronology (e.g., dates and times of receipt, preparation, and analysis)	X	X
17	LOD/LOQ Establishment and Verification	X	X
18	Standards Traceability	X	X
19	Instrument Calibration Records	X	X
20	Definition of Laboratory Qualifiers	X	X
21	Results Reporting Forms	X	X
22	QC Sample Results	X	X
23	CA Reports	X	X

Item	Description	Verification (completeness)	Validation (conformance to specifications)
24	Raw Data	X	X
25	Chromatograms	X	X
26	Electronic Data Deliverable	X	X

7.4 Worksheet #35: Data Verification Procedures

Records Reviewed	Requirement Documents	Process Description	Responsible Person, Organization
Methods	QAPP, SOP	Records support implementation of the SOP-sampling and analysis.	Project Chemist, Ahtna
Performance Requirements	QAPP, SOP	Verify laboratory method SOPs are sufficient to satisfy DQOs.	Project Chemist, Ahtna
Sampling Locations, Number of Samples	QAPP, SOP	Verify that sample locations and quantities will be sufficient to satisfy DQOs.	Project Chemist, Ahtna
Three phase inspection forms and Other Field Documentation	QAPP, SOP	Review daily sampling activity reports including pertinent field sampling data.	Project Chemist, Ahtna
Chain of Custody	QAPP, SOP	Examine traceability of data from sample collection to generation of project reported data.	Project Chemist, Ahtna
Deviations	QAPP, SOP	Determine impacts of any deviations from methods.	Project Chemist, Ahtna
Sensitivity	QAPP, SOP	Verify that LODs and LOQs are achieved as outlined in the QAPP and that the laboratory successfully analyzed a standard at the LOD.	Project Chemist, Ahtna
Precision	QAPP, SOP	Review data against performance criteria and determine impact of any result out of criteria.	Project Chemist, Ahtna
Accuracy	QAPP, SOP	Review data against performance criteria and determine impact of any result out of criteria.	Project Chemist, Ahtna
QC samples	QAPP, SOP	Ensure that a sufficient number of QC samples are analyzed, as outlined in the QAPP, to meet DQOs.	Project Chemist, Ahtna
Field Change Requests	QAPP, SOP	Review any change request or corrective action documentation. Determine impact to project objectives.	Project/Program Chemist, Ahtna
Electronic Data Deliverables (EDDs)	QAPP	Verify that acceptable EDDs have been qualified. The Laboratory Data Consultants Automated Data Review (LDC ADR) EDD format files will be uploaded into the FODIS chemistry database, EDD files will be submitted to USACE. EDD File Specifications are provided in Attachment E.	Project Chemist, Ahtna

7.5 Worksheet #36: Data Validation Procedures

Analytical Group/Method:	Volatile Organics – TO-15 (Modified)	Gases – ASTM D1945, D5504
Data deliverable requirements:	LDC ADR	LDC ADR
Analytical specifications:	Worksheet #28	Worksheet #28
Measurement performance criteria:	Worksheet #12	Worksheet #12
Percent of data packages to be validated:	100% Stage 2B	100% Stage 2B
Percent of raw data reviewed:	10% Stage 4	10% Stage 4
Percent of results to be recalculated:	10% Stage 4	10% Stage 4
Validation procedure:	DoD Data Validation Guidelines	DoD Data Validation Guidelines
Validation qualifiers:	See table below	See table below
Electronic validation program:	LDC ADR	LDC ADR

Notes:

DoD Data Validation Guidelines = Department of Defense General Data Validation Guidelines Environmental Data Quality Workgroup, Revision 1 (DoD, 2019) and Data Validation Guidelines Module 1: Data Validation Procedure for Organic Analysis by GC/MS (DoD, 2020)

LDC ADR = Laboratory Data Consultants Automated Data Review format

Summary of Data Qualifiers

Qualifier	Definition
U	The analyte was not detected and was reported as less than the LOD or as defined by the customer. The LOD has been adjusted for any dilution or concentration of the sample.
J	The reported result was an estimated value with an unknown bias.
J+	The result was an estimated quantity, but the result may be biased high.
J-	The result was an estimated quantity, but the result may be biased low.
N	The analysis indicates the presence of an analyte for which there was presumptive evidence to make a "tentative identification."
NJ	The analyte has been "tentatively identified" or "presumptively identified" as present and the associated numerical value was the estimated concentration in the sample.
UJ	The analyte was not detected and was reported as less than the LOD or as defined by the customer. However, the associated numerical value is approximate.

Qualifier	Definition
X	The sample results (including non-detects) were affected by serious deficiencies in the ability to analyze the sample and to meet published method and project quality control criteria. The presence or absence of the analyte cannot be substantiated by the data provided. Acceptance or rejection of the data should be decided by the project team (which should include a project chemist), but exclusion of the data is recommended.

7.6 Worksheet #37: Data Usability Assessment

Step 1	<p>Review the project’s objectives and sampling design</p> <p>The goal for O&M activities at Fort Ord is to implement remedies as necessary to protect human health and the environment while maximizing the number of site closures or advance sites as close to site closure as practicable during the Period of Performance in a cost-effective manner. The site-specific QAPPs will indicate the project objectives and sampling design. To that end, the usability assessment will incorporate the activities listed below.</p> <p>Field Certification</p> <p>Field personnel will generate field forms, maps, and notes describing the daily procedures. The three-phase inspection forms (Attachment D), generated during sampling, will discuss any successes and/or deviations from the QAPP. The FTL will review all field documentation as it is generated for consistency and errors. Any anomalies identified will be discussed with the project team to determine if any changes to the sampling design are needed. Any changes will be documented in a QAPP amendment.</p> <p>Data Quality Indicators: Precision, Accuracy, Representativeness, Comparability, Completeness, and Sensitivity (PARCCS)</p> <p>The PARCCS parameters will be used to help identify deficiencies in the sample data that would affect the achievement of the project DQOs. Laboratory limits and QC samples will be used as part of the PARCCS assessment to detect anomalies in the dataset. In addition, the laboratory will create trend charts to track variability in laboratory processes and establish in-house precision and accuracy criteria.</p> <p>Laboratory limits used in the sensitivity review consist of the LOD and LOQ. Laboratory QC samples consist of method blanks, LCSs, surrogates, and laboratory duplicates. All samples will be spiked with surrogate compounds where recommended or required by the method.</p> <p>Precision</p> <p>Precision is defined as the degree of mutual agreement between individual measurements of the same property under similar conditions and provides a measurement of the reproducibility of an analytical result. Precision will be evaluated through the analysis of field duplicate samples and LCSs. Field duplicate samples will be collected at a frequency of one per 10 field samples of a given matrix. The duplicate sample will not be reanalyzed when the RPD criteria are not met. Discussion of QC failures will be documented in the laboratory case narrative. The Project Chemist will work with the laboratory to determine the cause of the failure and to determine if any of the QC failures are due to matrix or sampling error and if the failures have an impact on the project objectives.</p> <p>The variance between the samples, in terms of RPD, is calculated according to the following equation:</p> $RPD = \frac{ A - B }{(A + B)/2} \times 100\%$
---------------	--

where:

A = First duplicate concentration

B = Second duplicate concentration

For this project, the goal for precision of field duplicates is listed in Worksheet #12. In the event that both of the duplicate sample results are less than the LOD, the RPD will not be calculated.

Accuracy

Accuracy is the degree of agreement between an analytical measurement and a reference accepted as a true value. The accuracy of a measurement system can be affected by errors introduced by field contamination, sample preservation, sample handling, sample preparation, or analytical techniques. A program of sample spiking will be conducted to evaluate laboratory accuracy. Accuracy will be evaluated by the percent recovery of the spiked compounds in the LCSs, surrogates, and proficiency samples (if requested by the PM). LCSs and surrogates will be spiked prior to extraction. LCS samples will be spiked with the method target compounds indicated in this QAPP, and surrogates will be added to every sample and spike. Proficiency samples will be taken through the entire sample preparation and analysis process. LCS or blank spike samples will be analyzed at a frequency of 5%, or one per sample delivery group/analytical batch (sample sets can be up to 20 field samples). Proficiency samples will be analyzed once per sampling event if required. The results of the spiked and proficiency samples are used to calculate the percent recovery for evaluating accuracy, using the following equation:

$$\text{Percent Recovery} = \frac{S - C}{T} \times 100$$

where:

S = Measured spike sample concentration

C = Sample concentration

T = True or actual concentration of the spike or proficiency

Worksheet #12 presents accuracy goals for this investigation based on the percent recovery of LCSs and surrogate spikes. The data reviewer will use the accuracy results to help determine if any of the QC failures are due to matrix or sampling error and if the failures have an impact on the project objectives.

The presence of high levels of target compounds in the sample chosen for spiking may necessitate a dilution of the sample, or may otherwise result in errors in spiked compound recovery. Discussion of laboratory QC failures will be documented in the laboratory case narrative. The Project Chemist will work with the laboratory to determine the cause of the failure and to determine if any of the QC failures are due to matrix or sampling error and if the failures have an impact on the project objectives.

Representativeness

Representativeness expresses the degree to which sample data accurately and precisely represent the characteristics of a population, variations in a parameter at a sampling point, or an environmental condition that the data are intended to represent. For this project,

<p>representative data will be obtained through careful selection of sampling locations and analytical parameters, through proper collection and handling of samples to avoid interference and minimize cross-contamination, and through consistent application of the appropriate established field and laboratory procedures.</p> <p>To aid in evaluating the representativeness of the sample results, laboratory blank samples will be evaluated for the presence of contaminants. Laboratory procedures will be reviewed to verify that SOPs were followed, and method requirements were met during the analysis of project samples. Laboratory sample storage practices, holding times, sub-sampling procedures, and method blanks will be assessed for potential impacts on the representativeness of the data. Data determined to be non-representative will be used only if accompanied by appropriate qualifiers and limits of uncertainty.</p> <p>Representativeness (as it relates to field procedures) refers to the collection of samples that allow accurate conclusions to be made regarding the composition of the sample media at the entire site. Representativeness will be assessed qualitatively by evaluating whether the procedures described in this QAPP were followed.</p> <p>Completeness</p> <p>Completeness is a measure of the percentage of project-specific data that are valid. Valid data are obtained when samples are collected and analyzed in accordance with the procedures outlined in this QAPP and when none of the QC criteria used to determine the usability of the data is critically exceeded to the point of rejection.</p> <p>When data validation is completed, the percent completeness value will be calculated by dividing the number of usable sample results by the total number of sample results planned for this investigation. The evaluation of completeness will help determine whether any critical deficiencies identified during the validation process resulted in non-attainment of project objectives.</p> <p>Completeness will be evaluated by reviewing the tasks that contribute to the sampling event, such as sample handling and storage procedures, chain of custody procedures, analytical procedures, and data validation procedures. The procedures and determined impact on the sample results will be used to identify any problems along the data path that will render the decision-making process useless and the data set incomplete. The completeness goal for this project that still allows for attainment of the project objectives is 90%.</p> <p><u>Number of possible analyte results – Number of rejected and unreported results × 100</u> Possible number of analyte results</p> <p>The project team may determine that an individual sampling point or area is more critical than others for decision-making. Any sampling locations identified as such will have a completeness goal of 95% as determined by the validation process.</p> <p>Comparability</p> <p>Comparability expresses the confidence with which one dataset can be compared with another. Comparability of data will be achieved by following standard field and laboratory procedures outlined in SOPs and published methods. In addition, standard units of measurement will be used in reporting analytical and field data. Analytical and field</p>

	<p>methods selected for this investigation are consistent with the methods used during previous investigations of this type. Oversight by experienced team members will ensure that the procedures are conducted in a manner appropriate to attaining the project objectives. Any deviations from field or laboratory methods will be documented on a change request form. The project team will review the change request to determine if the change will impact the comparability of the data.</p> <p>Sensitivity</p> <p>The LOD and LOQ will be evaluated by the project team prior to sample analysis to determine if the laboratory is able to attain the sensitivity required for the project. If project decision limits are too sensitive, it will be determined prior to sample analysis whether a sensitivity variance will be issued to the laboratory based on the method chosen and the technology available.</p> <p>The LOD is the minimum quantity of an analyte that can be reliably detected for a specific analytical method at a 99% confidence level that the value is not a false negative. The LOQ represents the smallest quantity of an analyte that can be quantified accurately and reproducibly in a given sample matrix (e.g., three to five times the LOD). The LOD and/or the LOQ shall be sensitive enough to meet the project decision limits. The LOD and LOQ will be evaluated after sample analysis to determine if there were any matrix effects, operator errors, or analytical process errors that interfered with the ability to compare the results to the project decision limits. The LOD will be used to determine if detectable amounts of analytes are present. If no detectable amounts are reported, and all data are acceptable (as determined by the verification and validation process), then the data are usable. The LOD will be used to determine if any detectable amounts of contaminants of concern are present. If detectable amounts are reported and the verification and validation are acceptable, then the data are usable. Any detections falling between the LOD and LOQ will be qualified as estimated. If anomalies in sensitivity are present, the rationale for use or non-use of the affected samples will be discussed in the data validation reports. Worksheet #15 presents the laboratory LODs and LOQs for the selected analytical method(s) used to support the project decision limits.</p>
<p>Step 2</p>	<p>Review the data verification and data validation outputs</p> <p>The outputs from the verification and validation process will be used to determine data usability. Data validation reports and three phase inspection forms will be reviewed. Data will be summarized as necessary using graphs, maps, and/or tables. The entire project team is responsible for assessing whether the data meet the project objectives. Personnel at all levels will generate data and documentation that will be reviewed to identify trends, relationships, and/or anomalies in the dataset.</p>

Step 3	Implement the statistical method For each analytical method, the laboratory will use the LCS data to track and analyze trends in the laboratory. From these trends, they can recognize deficiencies in the method and create in-house acceptance criteria. For this project, the limits are based on laboratory control limits. The precision and accuracy of the entire dataset will be used to determine if any systemic problems have occurred during the sampling event that will result in deficiencies in the dataset. The occurrence of systemic problems and the resulting consequences will be discussed in the data validation report. The data reviewer will make every effort to identify any critical elements or trends that would result in non-usability of data as early as possible.
Step 4	Document data usability and draw conclusions Again, the entire project team is responsible for assessing whether the data meet the project objectives. The site-sampling layout, including sampling locations, frequency of sampling, and timing of sampling activities, will be reviewed by the project team. Data usability will be assessed in accordance with the guidance provided in DoD QSM Version 5.4 and additional applicable USACE and EPA guidance as well as the professional experience of the decision-maker during data validation. The conclusions will be discussed in the final annual report. If the data indicate anomalies, the impacted data will be qualified as described in DoD Data Validation Guidelines (DoD, 2019) and Data Validation Guidelines Module 1 (DoD, 2020). The impact will be documented along with the rationale for limited use of the data.

8.0 References⁷

Ahtna Environmental, Inc. (AEI), 2016a. Quality Assurance Project Plan, Former Fort Ord, California, Volume I, Appendix D, Final Revision 1, Operable Unit 2 Landfills, Former Fort Ord California. May. AR# [OU2-702B](#).

AEI, 2017. *Final Annual Report, 2016, Operations and Maintenance, Operable Unit 2 Landfills, Former Fort Ord California*. July. AR# [OU2-708](#).

AEI, 2018. *Final Annual Report, 2017, Operations and Maintenance, Operable Unit 2 Landfills, Former Fort Ord California*. May. AR# [OU2-712](#).

AEI, 2019. *Final Annual Report, 2018, Operations and Maintenance, Operable Unit 2 Landfills, Former Fort Ord California*. May. AR# [OU2-718](#).

Ahtna Global, LLC (Ahtna), 2021a. *Final Operable Unit 2 Annual Report Volume I, Fourth Quarter 2018 through Third Quarter 2019, Landfill Gas Monitoring and Landfills Operations and Maintenance, Former Fort Ord, California*. February. AR# [OU2-725B](#).

Ahtna, 2021b. *Operable Unit 2 Remedy Monitoring and Operations and Maintenance, Fourth Quarter 2019 through Third Quarter 2020, Former Fort Ord, California*. October. AR# [OU2-729B](#).

Ahtna, 2022. *Operable Unit 2 Remedy Monitoring and Operations and Maintenance, Fourth Quarter 2020 through Third Quarter 2021, Former Fort Ord, California*. June. AR# [OU2-733B](#).

Ahtna, 2023a. *Operable Unit 2 Remedy Monitoring and Operations and Maintenance, Fourth Quarter 2022 through Third Quarter 2022, Former Fort Ord, California*. June. AR# [OU2-738B](#)

Ahtna, 2023b. *Operations and Maintenance Plan Revision 4, Operable Unit 2 Landfills, Former Fort Ord, California*. December 29.

California Department of Toxic Substances Control (DTSC). 2022. Human and Ecological Risk Office (HERO), Human Health Risk Assessment (HHRA) Note Number: 3, DTSC modified Screening Levels. May. <https://dtsc.ca.gov/wp-content/uploads/sites/31/2022/02/HHRA-Note-3-Tables-June2020-Revised-May2022A.xlsx>

Dames & Moore, 1993. *Baseline Risk Assessment, Remedial Investigation/Feasibility Study, Site 2 Landfills, Fort Ord, California*. June 7. AR# [OU2-218](#).



Department of Defense (DoD), 2013. *DoD Environmental Field Sampling Handbook, Revision 1.0*. Chapter 3. Common Sampling Procedures. April. Available from: <https://denix.osd.mil/edqw/home/edqw-home-documents/manuals/dod-environmental-field-sampling-handbook/>

⁷ At the end of references included in the Fort Ord Administrative Record are the Administrative Record Numbers (AR#s) (e.g. OU2-123). To find the referenced document, this number may be typed into the online search tool at: <http://www.fortordcleanup.com/documents/search/>. Please note the referenced documents were available in the Fort Ord Administrative Record at the time this document was issued; however, some may have been superseded by more current versions and were subsequently withdrawn.

- DoD Environmental Data Quality Workgroup, 2021. Department of Defense Quality Systems Manual for Environmental Laboratories, Final Version 5.4. <https://www.denix.osd.mil/edqw/documents/>
- DoD, 2019. Department of Defense General Data Validation Guidelines, Environmental Data Quality Workgroup, Revision 1 September. <https://www.denix.osd.mil/edqw/documents/>
- DoD, 2020. Data Validation Guidelines Module 1: Data Validation Procedure for Organic Analysis by GC/MS, Environmental Data Quality Workgroup, May. <https://www.denix.osd.mil/edqw/documents/>
- DoD, 2021. [Data Validation Guidelines Module 1, 2, and 4 Revised Blank Qualification Table](#), Environmental Data Quality Workgroup, May.
- Gilbane Company, 2015. *Final Annual Report, 2014, Operations and Maintenance, Operable Unit 2 Landfills, Former Fort Ord California*. July. AR# [OU2-696](#).
- Intergovernmental Data Quality Task Force (IDQTF), 2005. Uniform Federal Policy for Quality Assurance Project Plans, Part 1: UFP-QAPP Manual, Final Version 1. March.
- IDQTF, 2012. Uniform Federal Policy for Quality Assurance Project Plans, Part 2a, Revision 1: Optimized UFP-QAPP Worksheets. March.
- IT Corporation, 2001. Draft Final Remedial Action Confirmation Report and Post-Remediation Screening Risk Assessment Area A, Operable Unit 2 Landfills, Former Fort Ord, CA. April. AR# [OU2-599A](#).
- Shaw Environmental, Inc. (Shaw), 2005a. Draft Final Remedial Action Construction Completion Report, Operable Unit 2 Landfills, Areas A through F, Former Fort Ord, California. January 31. AR# [OU2-630B](#).
- Shaw, 2005b. *Draft Final Evaluation Report, Landfill Gas Pilot Test, Operable Unit 2 Landfills, Former Fort Ord, California*. August 19. AR# [OU2-627A](#).
- Shaw, 2005c. Draft Final Report, 2003 Ambient Air Monitoring and Human Health Risk Assessment, Operable Unit 2 Landfills, Former Fort Ord, California, Revision 0. March 3. AR# [OU2-647E](#).
- Shaw, 2008a. *Operation and Maintenance Plan, Operable Unit 2 Landfills, Former Fort Ord, California*. Revision 2. September 4. AR# [OU2-593F](#).
- Shaw, 2008b. *Final Construction Completion Report, Landfill Gas System Expansion, Operable Unit 2 Landfills, Former Fort Ord, California*, Revision 0. September 11. AR# [OU2-662F](#).
- Shaw, 2009. *Field Work Variance No. TII-138, Operation and Maintenance Plan, Operable Unit 2 Landfills, Former Fort Ord, California*. Revision 2. May 21. AR# [OU2-593F.1](#).
- Shaw, 2011. *Field Work Variance No. TII-154, Operation and Maintenance Plan, Operable Unit 2 Landfills, Former Fort Ord, California*. Revision 2. January 10. AR# [OU2-593F.3](#).
- U.S. Department of the Army (Army), 1994. *Record of Decision, Operable Unit 2, Fort Ord Landfills, Fort Ord, California*. July. AR# [OU2-480](#).

- Army, 1995. *Explanation of Significant Differences (ESD), Operable Unit 2, Fort Ord Landfills, Fort Ord, California*. August 3. AR# [OU2-406](#).
- Army 1997a. *Explanation of Significant Differences Consolidation of Remediation Waste in a Corrective Action Management Unit (CAMU), Operable Unit 2 Landfill*. January 13. AR# [OU2-523](#).
- Army, 1997b. *Record of Decision, Basewide Remedial Investigation Sites, Fort Ord, California*. January 13. AR# [RI-025](#).
- Army, 2003. *Explanation of Significant Differences (ESD), Excavation and Segregation of Spent Ammunition from Soil, Site 39, Former Fort Ord, California*. October 31. AR# [BW-2274](#).
- Army, 2006. *Explanation of Significant Differences, No Further Action for Munitions and Explosives of Concern, Landfill Gas Control, Reuse of Treated Groundwater, Designation of Corrective Action Management Unit (CAMU) Requirements as Applicable or Relevant and Appropriate Requirements (ARARs), Operable Unit 2, Fort Ord Landfills, Former Fort Ord, California*. August. AR# [OU2-656](#).
- Army, 2009. *Record of Decision Amendment, Site 39 Inland Ranges, Former Fort Ord, California*. August 25. AR# [RI-041E](#).
- Army, 2022. *Final 5th Five-Year Review for the Fort Ord Superfund Site, Monterey County, California*. September. AR# [BW-2925](#).
- U.S. Army Corps of Engineers (USACE), 1997. *Installation-Wide Habitat Management Plan for Former Fort Ord, California*. April. AR# [BW-1787](#).
- U.S. Environmental Protection Agency (EPA), 1999. *Compendium Method TO-15, Determination of Volatile Organic Compounds (VOCs) In Air Collected In Specially-Prepared Canisters And Analyzed By Gas Chromatography/Mass Spectrometry (GC/MS)*. January.
- EPA, 2006. *Guidance on Systematic Planning Using the Data Quality Objectives Process, EPA QA/G-4*. February.
- EPA, 2021. *Regional Screening Level (RSL) Resident Ambient Air Table (TR=1E-6, HQ=1)*. May. <https://semspub.epa.gov/work/HQ/400762.pdf>

Figures

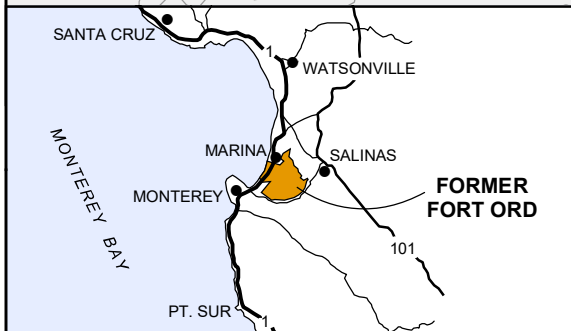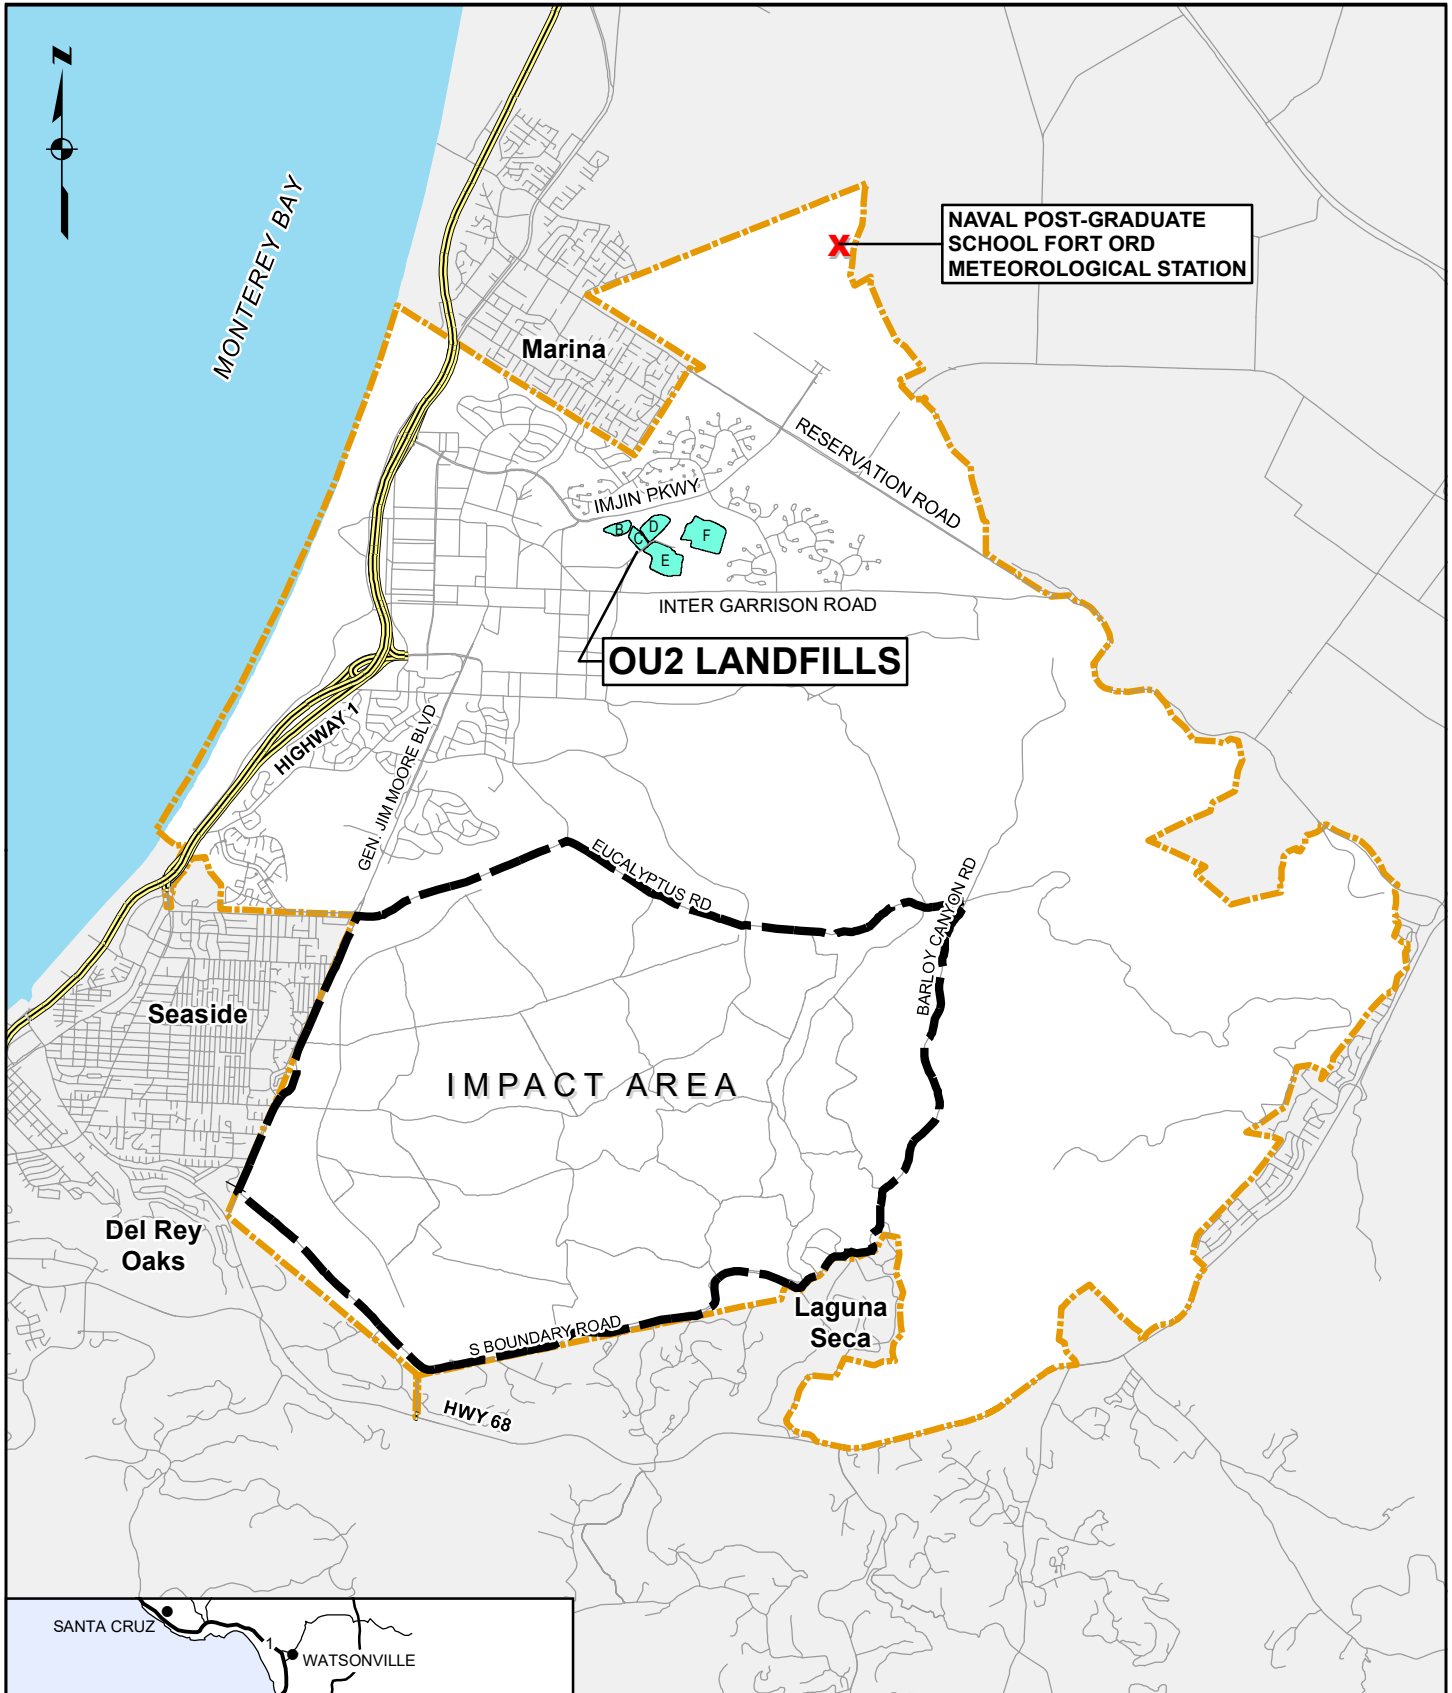

NAVAL POST-GRADUATE
SCHOOL FORT ORD
METEOROLOGICAL STATION

OU2 LANDFILLS

IMPACT AREA


FORMER FORT ORD

LOCATION MAP

Ahtna



FIGURE
1

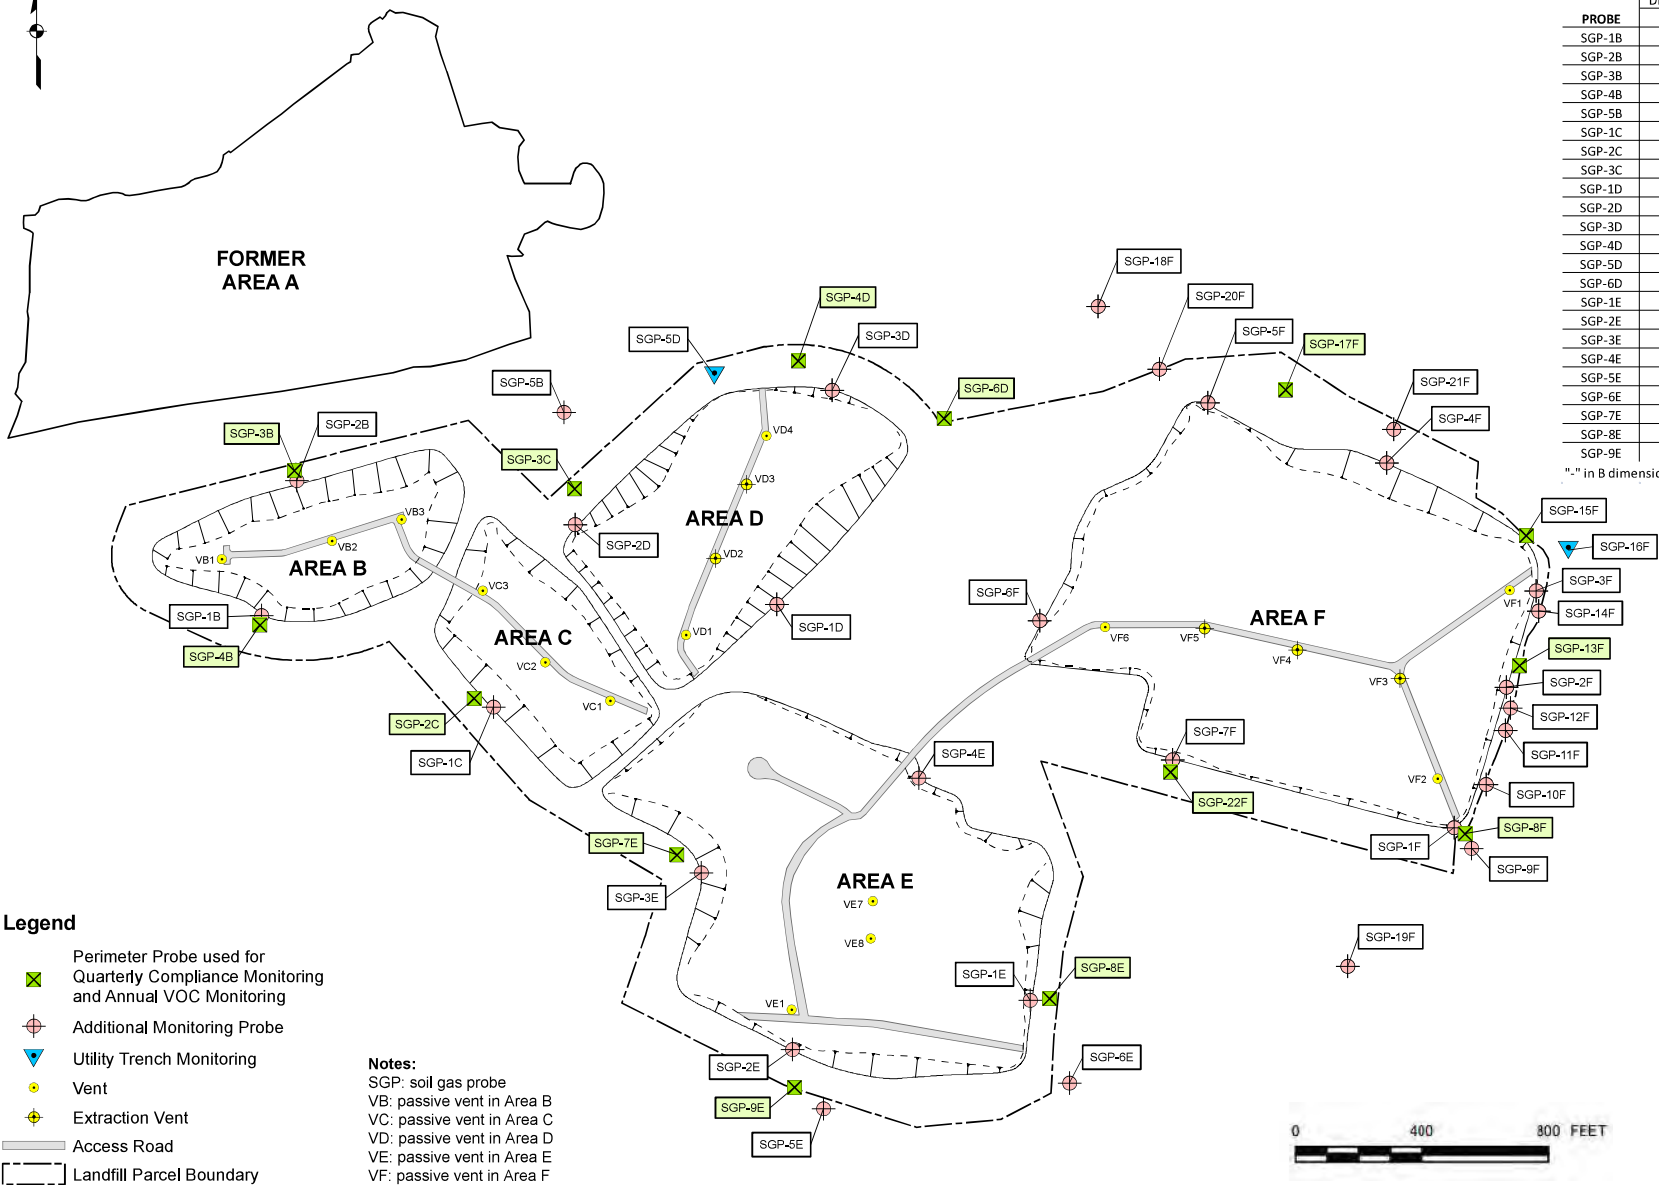

PROBE DEPTH TABLE


PROBE	DIMENSIONS (ft)		PROBE	DIMENSIONS (ft)	
	A	B		A	B
SGP-1B	12	-	SGP-1F	12	22
SGP-2B	12	-	SGP-2F	12	32
SGP-3B	12	-	SGP-3F	12	32
SGP-4B	12	-	SGP-4F	12	32
SGP-5B	12	-	SGP-5F	12	32
SGP-1C	12	-	SGP-6F	12	32
SGP-2C	12	-	SGP-7F	12	32
SGP-3C	12	-	SGP-8F	12	22
SGP-1D	12	22	SGP-9F	22	-
SGP-2D	12	22	SGP-10F	12	22
SGP-3D	12	22	SGP-11F	12	32
SGP-4D	12	22	SGP-12F	32	-
SGP-5D	4	-	SGP-13F	12	32
SGP-6D	12	22	SGP-14F	12	32
SGP-1E	12	-	SGP-15F	12	32
SGP-2E	12	-	SGP-16F	4	-
SGP-3E	12	-	SGP-17F	12	32
SGP-4E	12	-	SGP-18F	12	32
SGP-5E	12	-	SGP-19F	12	22
SGP-6E	12	-	SGP-20F	12	32
SGP-7E	12	-	SGP-21F	12	22
SGP-8E	12	-	SGP-22F	12	32
SGP-9E	12	-			

"-" in B dimension column means single probe


Legend

- Perimeter Probe used for Quarterly Compliance Monitoring and Annual VOC Monitoring
- Additional Monitoring Probe
- Utility Trench Monitoring
- Vent
- Extraction Vent
- Access Road
- Landfill Parcel Boundary

Notes:
 SGP: soil gas probe
 VB: passive vent in Area B
 VC: passive vent in Area C
 VD: passive vent in Area D
 VE: passive vent in Area E
 VF: passive vent in Area F



FORMER FORT ORD	
LANDFILL GAS MONITORING LOCATIONS	
FIGURE 2	

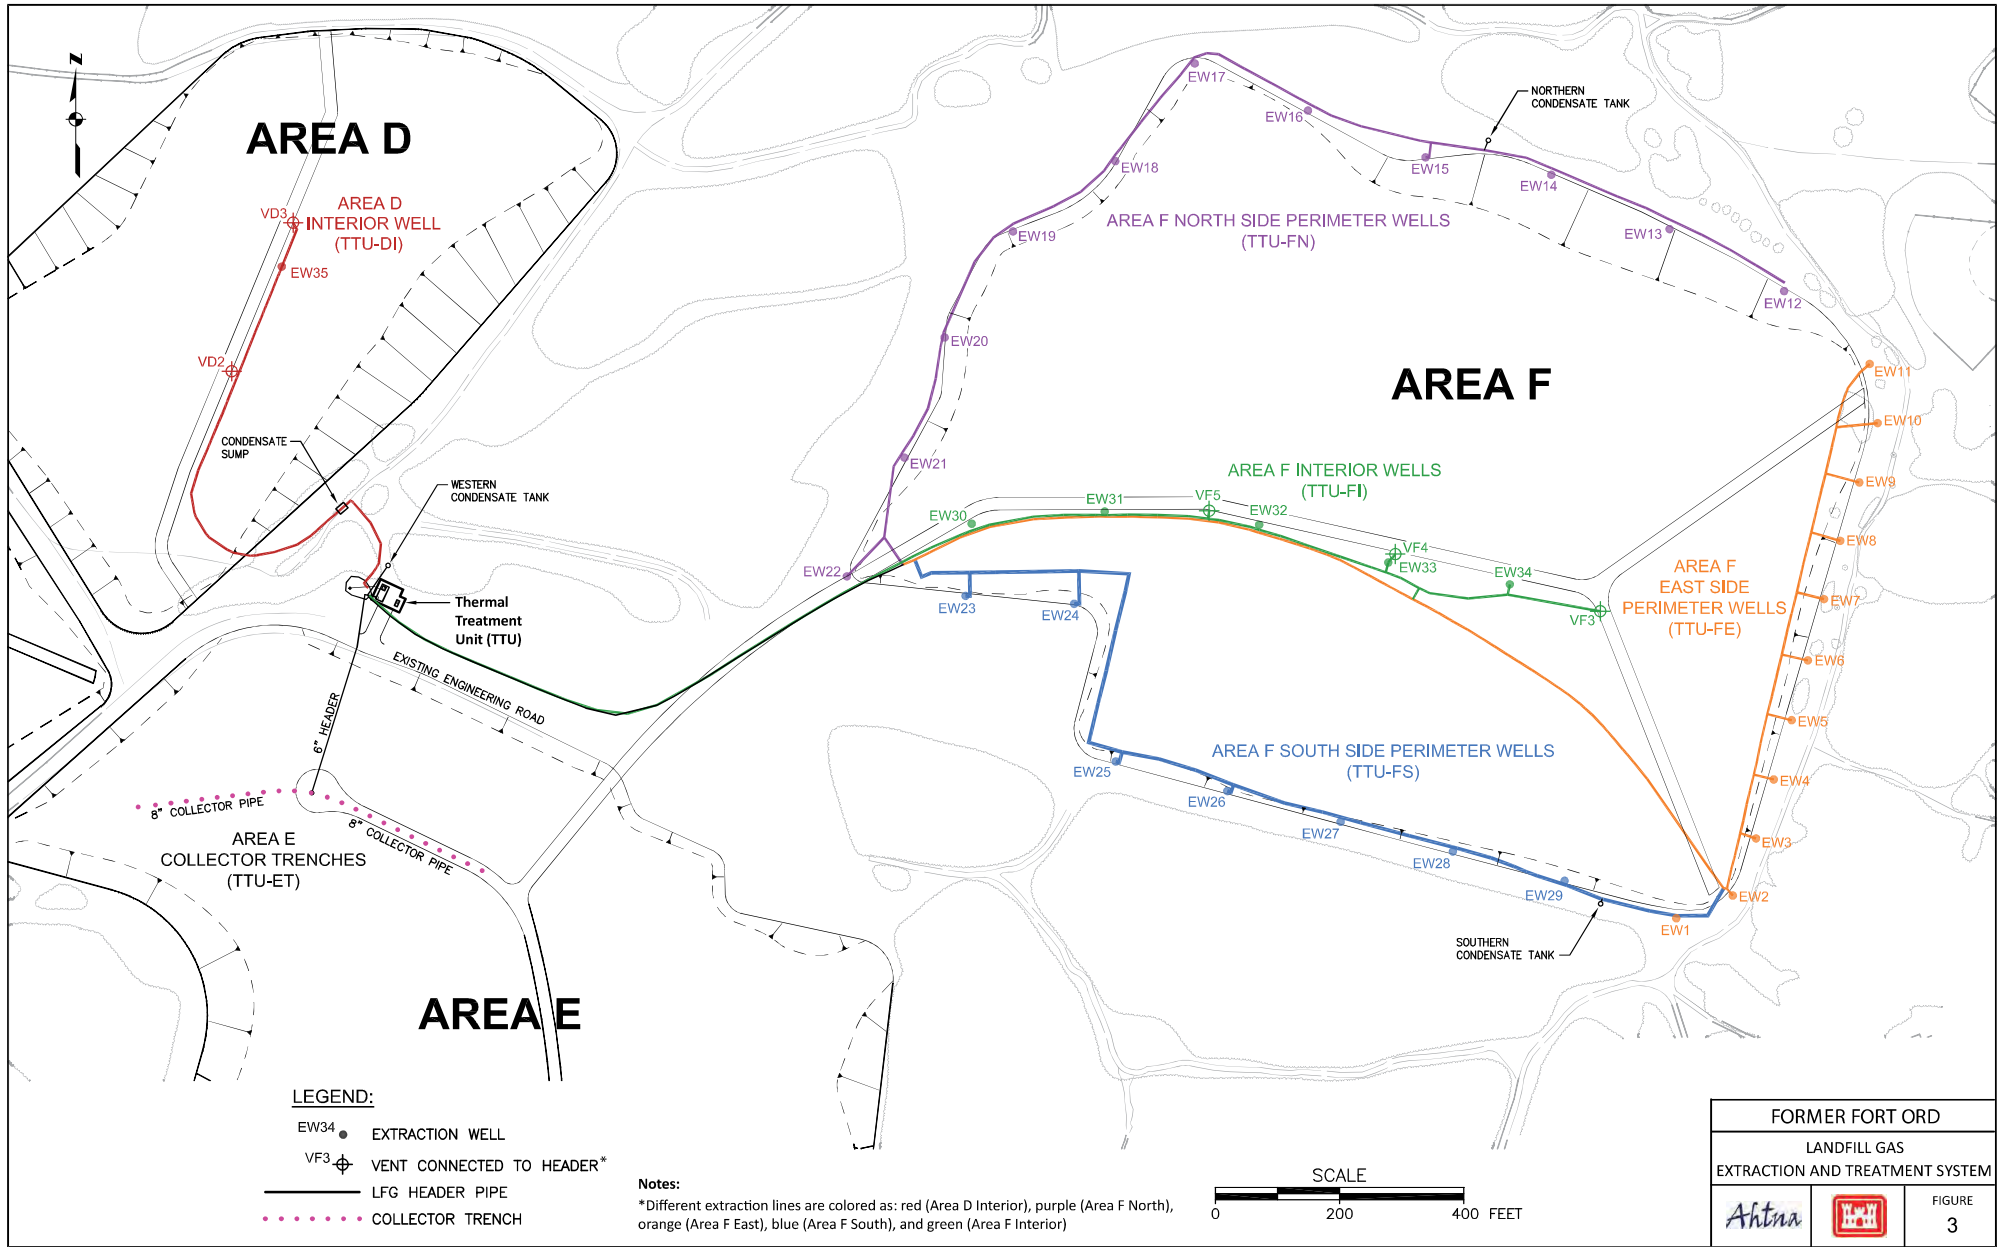

AREA D

AREA D INTERIOR WELLS (TTU-DI)

VD3
EW35

VD2

CONDENSATE SUMP

WESTERN CONDENSATE TANK

Thermal Treatment Unit (TTU)

EXISTING ENGINEERING ROAD

8" HEADER

8" COLLECTOR PIPE

AREA E COLLECTOR TRENCHES (TTU-ET)

8" COLLECTOR PIPE

AREA E

LEGEND:

- EW34 ● EXTRACTION WELL
- VF3 ⊕ VENT CONNECTED TO HEADER*
- LFG HEADER PIPE
- COLLECTOR TRENCH

Notes:
 *Different extraction lines are colored as: red (Area D Interior), purple (Area F North), orange (Area F East), blue (Area F South), and green (Area F Interior)

AREA F

AREA F NORTH SIDE PERIMETER WELLS (TTU-FN)

NORTHERN CONDENSATE TANK

AREA F INTERIOR WELLS (TTU-FI)


AREA F EAST SIDE PERIMETER WELLS (TTU-FE)

AREA F SOUTH SIDE PERIMETER WELLS (TTU-FS)

SOUTHERN CONDENSATE TANK

FORMER FORT ORD		
LANDFILL GAS EXTRACTION AND TREATMENT SYSTEM		
<i>Ahtna</i>		FIGURE 3

SCALE



Attachments

Attachment A

Standard Operating Procedures (SOPs)

SOP No.	SOP Title	Author	Organization
1	GEM™5000 Gas Analyzer & Extraction Monitor Operation Manual		LANDTEC
2	Guide to Air Sampling, Canisters and Bags		Eurofins
3	Field Sampling Procedure Using Summa Canisters with RAVEqc Quick-Connect (QT) Fittings		Eurofins
4	Common Sampling Procedures (Chapter 3 from DoD Environmental Field Sampling Handbook)		DoD
FSOP-001	Fieldwork Documentation		Ahtna
FSOP-002	Sample Management		Ahtna
FSOP-802	Investigation derived Waste Management		Ahtna
ST-1	Source Test Protocol, Former Fort Ord, Monterey, CA. Thermal Treatment Unit (TTU). June 1, 2022		Ahtna



GEM5000 Gas Analyzer

Operating Manual



QED Environmental Systems, Inc.

2355 Bishop Circle West

Dexter, MI. 48130

Tel: (800) 624-2026

Fax : (734) 995-1170

Email: info@qedenv.com

Website: www.landtecna.com

Rev.2.1.2018


Table of contents

1.0	MANUAL GUIDELINES	4
1.1	Hazard warnings and safety symbols	4
1.2	Notes	4
2.0	INTRODUCTION	5
2.1	Safety instructions.....	5
2.2	Instructions for safe use.....	6
2.3	MCERTS.....	8
2.4	CIRIA	8
3.0	THE GEM5000 GAS ANALYSER	10
3.1	The GEM5000	10
3.2	GEM5000 standard product.....	10
4.0	GEM5000 OPTIONAL PRODUCTS AND ACCESSORIES.....	11
4.1	Optional products	11
4.1.1	Pitot tube (optional)	11
4.1.2	Orifice plate (optional).....	11
4.1.3	Temperature probe (optional).....	11
4.1.4	Anemometer (optional).....	11
4.1.5	H ₂ S filter (optional)	12
4.1.6	Gas analyser manager – GAM (optional).....	12
4.1.7	GPS (optional).....	12
4.1.8	Bluetooth.....	12
5.0	GEM5000 INSTRUMENT FEATURES.....	13
5.1	Physical characteristics of the instrument panel	13
5.2	Analyser features and keys	13
5.3	Instrument connection points.....	14
6.0	GENERAL OPERATIONAL INSTRUCTIONS	16
6.1	Switching the instrument on	16
6.1.1	Power on self-test.....	16
6.2	Switching the analyser off	16
6.3	Instrument status icons.....	17
6.4	Instrument LED power states.....	18
6.5	Changing between parameters	18
6.6	Entering data.....	18
6.7	Instrument main gas read screen	19
6.8	Storage	19
6.9	Battery/charging.....	19
6.10	Cleaning instructions.....	20
6.11	Memory	21
6.12	Warning and error codes	21
7.0	OPERATOR SETTINGS.....	21
7.1	Menu key	21
7.2	Operation settings.....	22
7.2.1	Timers	22
7.2.2	Gas Check	23
7.2.3	View data	23
7.2.4	Set alarms.....	24
7.2.5	Adjust flow fail	25
7.2.6	Technician login.....	26
7.3	Device settings	27
7.3.1	Date and time	27
7.3.2	Bluetooth.....	28










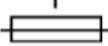

7.3.3	Device information.....	29
7.3.4	Diagnostics.....	29
7.3.5	Navigation (optional).....	30
7.4	User settings.....	31
7.4.1	Operating language.....	31
7.4.2	Units of measurement.....	32
7.4.3	ID selection.....	33
7.4.4	Routes.....	35
7.4.5	Adjust backlight.....	35
7.4.6	Adjust volume.....	36
7.4.7	User Prompts.....	37
7.5	Exit menu.....	37
8.0	TAKING READINGS.....	38
8.1	Preliminary checks before taking readings (best practice).....	38
8.1.1	Creating an ID.....	39
8.2	Change screen layout.....	40
8.3	Answering site questions.....	40
8.4	Answering ID questions.....	40
8.5	Special action.....	41
8.5.1	Configuration of the data logging option.....	42
8.5.2	Profiling option.....	42
8.6	GEM analyser in GA mode.....	43
8.7	The gas flow measurement screen.....	43
8.8	How to use an anemometer (optional).....	44
8.9	How to use a pitot tube (optional).....	47
8.10	How to use an H ₂ S filter (optional).....	48
8.8.1	Cross gas effects on chemical cells.....	48
8.9.2	Cross-gas effects on methane, carbon dioxide and oxygen.....	49
8.11	How to use a temperature probe (optional).....	51
8.12	How to identify a borehole using the GPS feature (optional).....	52
8.13	Taking gas and flow measurement.....	55
9.0	CALIBRATION.....	56
9.1	Calibration introduction.....	56
9.2	Frequency of calibration – best practice.....	56
9.3	Calibration gases.....	57
9.4	Calibration set-up.....	57
9.5	Calibration equipment.....	58
9.6	Gas analyser.....	59
9.7	Calibration processes – best practice.....	59
9.7.1	Gas Check in fresh air.....	60
9.7.2	Calibration – mixtures 1, 2, & 3.....	61
9.8	Restore to factory.....	62
9.9	Calibration history.....	62
9.10	Calibration summary.....	62
10.0	PROBLEM SOLVING.....	63
11.0	WARNING AND ERROR DISPLAY.....	63
12.0	SERVICE.....	64
13.0	WARRANTY POLICY.....	65
14.0	GLOSSARY OF TERMS.....	73

1.0 Manual guidelines

1.1 Hazard warnings and safety symbols

	<p>Warning</p>	<p>Information in this manual that may affect the safety of users and others is preceded by the warning symbol.</p> <p>Caution - Failure to follow the correct information may result in physical injury which in some cases could be fatal. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.</p>
---	----------------	--

General product label symbols are listed as follows:

	<p>CE conformity-The CE-marking is the manufacturer's statement to the EU authorities that the product complies with all relevant CE-marking Directives.</p>		<p>If the CSA mark appears with the indicator "US" or "NRTL" it means that the product is certified for the U.S. market, to the applicable U.S. standards.</p>
	<p>VDE mark is a symbol for electrical, mechanical, thermal, toxic, radiological and other hazards.</p>		<p>Separate collection, handling and disposal for waste electrical and electronic equipment and its components.</p>
	<p>Electric shock warning.</p>		<p>Refer to operators manual.</p>
	<p>Double insulated construction - does not require an Earth.</p>		<p>Specific marking of explosion protection (ATEX only).</p>
<p>II 2G</p>	<p>Equipment group and category. G = gases; the type of explosive atmosphere.</p>		<p>IECEx licenced mark (IECEx only).</p>
	<p>Fuse.</p>		<p>Equipment for indoor use only.</p>

1.2 Notes

Important/useful information and instructions are shown clearly throughout the manual in a note format. For example:

✂ Note: For further information please contact Technical Support at (800) 968-2026 or email landtec_support@qedenv.com

2.0 Introduction


This manual explains how to use the GEM5000 landfill gas analyzer. The GEM5000 has additional functionality to the GA5000 gas analyzer. The GA5000 measures gas concentrations only, whereas the GEM5000 measures flow and gas concentrations. The GEM5000 measures flow and calculates the calorific values of the gas as well as being a useful tool for balancing the gas field. The GEM5000 gas analyzer may be used to monitor, calculate, adjust and record the flow at each monitoring point.


This instrument may also be used in GA5000 mode of operation if required. The operator may change the analyzer between a gas extraction monitor (a GEM5000 gas analyzer) or a landfill gas analyzer (a GA5000 gas analyzer). The mode of operation can be changed from the 'Special Action' menu. Please refer to section '8.0 – Taking Readings' for further instruction.

The 5000 series of gas analyzers complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

2.1 Safety instructions

 Warning	<p>The 5000 series of gas analyzers can be used for measuring gases from landfill sites and other sources as described in this manual.</p> <p>The operator may be exposed to harmful gases during the use of the instrument. Inhaling these gases may be harmful to health and in some cases may be fatal.</p> <p>It is the responsibility of the user to ensure that he/she is adequately trained in the safety aspects of the gases being used and appropriate procedures are followed. In particular, where hazardous gases are being used the gas exhausted from the analyzer must be piped to an area where it is safe to discharge the gas.</p> <p>Hazardous gas can also be expelled from the instrument when purging with clean air.</p> <p>The instrument has been designed to be used in explosive atmospheres as defined by the classification. The instrument can be configured to measure low levels of several gases, but may not be certified for use in potentially explosive atmospheres of these gases. It is the responsibility of the operator to determine the protection concept and classification of equipment required for a particular application and whether these gases create a potentially explosive atmosphere.</p>
--	---

 **Note:** Gas analyzers are a sensitive piece of scientific equipment, and should be treated as such. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the instrument may be impaired.


2.2 Instructions for safe use**For ATEX and IECEx the 5000 series of gas analysers are certified to Hazardous Area Classification**** II 2G Ex ib IIA T1 Gb (Ta = -10°C to +50°C)**

It is vital instructions are followed closely. It is the responsibility of the operator to determine the protection concept and classification required for a particular application.

(Reference European ATEX directive 2014/34/EU)

The following instructions apply to equipment covered by certificate numbers SIRA 11ATEX2197X and IECEx SIR 11.0089X:

- The equipment may be used with flammable gases and vapours with apparatus group IIA and temperature class T1.
- The equipment can contain gas sensing heads for the detection of particular gases. The inclusion of a sensor does not infer that the equipment is suitable for the use of gases with a temperature class of less than T1.
- The equipment is only certified for use in ambient temperatures in the range -10°C to +50°C and should not be used outside this range.
- The equipment must not be used in an atmosphere of greater than 21% oxygen.
- Repair of this equipment shall be carried out in accordance with the applicable code of practice.
- When used in a hazardous area only use GF5.2 temperature probe (SIRA 11ATEX2197X and IECEx SIR11.0089X). For connector C, the GF5.4 anemometer (BVS 04ATEXE194) for use with ATEX only. The analyser should not be connected to any other devices in the hazardous area including the GF-USB lead (connector A) or GF3.9 battery charger (connector B) supplied with the analyzer.

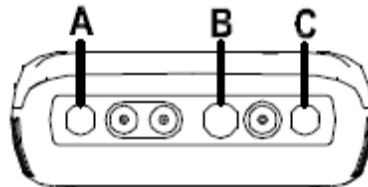

**Do not charge, recharge or open in a potentially explosive atmosphere.
In hazardous area only use "Temperature Probe GF5.2" in Connector B.
Connector C (Uo=10V,Io=5mA,Po=50mW,Ci=0,Li=0,Co=100uF,Lo=1000mH),
Connector B (Uo=5V,Io=6mA,Po=7mW,Ci=0,Li=0,Co=100uF,Lo=1000mH)**

**MAXIMUM NON-HAZARDOUS SUPPLIES:
Connector A - Um=6V Connector B - Um=10.1V**

- The safe area apparatus that is to be connected to the USB Port shall be a Safety Extra Low Voltage (SELV) or Protective Extra Low Voltage (PELV) circuit.
- Only a Geotechnical Instrument battery pack part number 20087 or 2011113 is permitted as a replacement. This battery pack is not field replaceable and shall only be changed in a safe area by QED personnel.
- Only Battery Charger type GF3.9 shall be used to recharge the batteries via Connector 'B'.
- If the equipment is likely to come into contact with aggressive substances, e.g. acidic liquids or gases that may attack metals, or solvents that may affect polymeric materials, then it is the responsibility of the user to take suitable precautions, e.g. regular checks as part of routine inspections or establishing from the material's data sheet that it is resistant to specific chemicals that prevent it

from being adversely affected, thus ensuring that the type of protection is not compromised.

- The relative pressure range is +/-500 mbar. Note, however, that the input pressure should not exceed +/- 500 mbar relative to atmospheric pressure and the output pressure should not exceed +/- 100 mbar relative to atmospheric pressure.

For CSA (Canada) the 5000 series of gas analysers are certified to Hazardous Area Classification

CLASS 2258 03 - PROCESS CONTROL EQUIPMENT - Intrinsically Safe and Non-Incendive Systems - For Hazardous Locations



Ex ib IIA:

Model GA 5000, GEM 5000 and BIOGAS 5000 Methane Detectors; portable, battery powered with non-field-replaceable Battery Pack P/N 20087 or 2011113; intrinsically safe and providing intrinsically safe circuits (“[ib]” for Zone 1) to Model GF5.2 Temperature Probe (Connector B) and with entity output parameters as tabulated below; Temperature Code T1; -10 °C ≤ Tamb. ≤ +50°C.

Connector	Entity Parameters						
	Uo (V)	Io (mA)	Po (mW)	Co (uF)	Lo (mH)	Ci (uF)	Li (mH)
B	5.0	6	7	100	1000	0	0
C	10.0	5	50	100	1000	0	0

⚠ Note: This device has been investigated for electrical safety features only.

For CSA (USA) the 5000 series of gas analysers are certified to Hazardous Area Classification

CLASS 2258 83 - PROCESS CONTROL EQUIPMENT - Intrinsically Safe and Non-Incendive Systems – For Hazardous Locations - CERTIFIED TO U.S. STANDARDS



AEx ib IIA:

Model GA 5000, GEM 5000 and BIOGAS 5000 Methane Detectors; portable, battery powered with non-field-replaceable Battery Pack P/N 20087 or 2011113; intrinsically safe and providing intrinsically safe circuits (“[ib]” for Zone 1) to Model GF5.2 Temperature Probe (Connector B) and with entity output parameters as tabulated below; Temperature Code T1; -10 °C ≤ Tamb. ≤ +50°C.

Connector	Entity Parameters						
	Uo (V)	Io (mA)	Po (mW)	Co (uF)	Lo (mH)	Ci (uF)	Li (mH)
B	5.0	6	7	100	1000	0	0
C	10.0	5	50	100	1000	0	0

⚠ Note: This device has been investigated for electrical safety features only.

2.3 MCERTS

MCERTS is the UK Environment Agency's Monitoring Certification Scheme. The scheme provides a framework within which environmental measurements can be made in accordance with the Agency's quality requirements. The scheme covers a range of monitoring, sampling and inspection activities.

MCERTS promotes public confidence in monitoring data and provides industry with a proven framework for choosing monitoring systems and services that meet the Environment Agency's performance requirements.

The Environment Agency has established its Monitoring Certification Scheme (MCERTS) to deliver quality environmental measurements. The MCERTS product certification scheme provides for the certification of products according to Environment Agency performance standards, based on relevant CEN, ISO and national standards.

MCERTS certified instruments have been tested by an independent body to ensure that they meet certain performance requirements. In addition the manufacturer of an MCERTS product is regularly audited to ensure that the performance requirements of the certification are being continually met.

The 5000 series of gas analyzers **have been certified to Version 3.1 of the 'Performance Standards for Portable Emission Monitoring Systems'**.

2.4 CIRIA

The CIRIA guideline 'Assessing the risks posed by hazardous ground gases to buildings' proposes that gas concentrations and flow rates should be monitored.

As an example methodology, they suggest using a gas analyser to first measure flow and pressure and then afterwards to measure gas concentration.

The logging profile option offers frequency of data to be collected within a timed period which, in return, identifies a gas profile of the sample point being monitored, information about whether the sample point is performing correctly, when the peaks occur and whether air is drawn in after a certain period. This logging option is available on firmware software version 1.6.5

Versions of the GA5000 analyzer range with internal flow on firmware version 1.6.5 and above have the ability to take measurements according to the CIRIA guidelines, while still allowing other users to take the measurements as before.

3.0 The GEM5000 Gas Analyzer

3.1 The GEM5000



The GEM5000 gas analyzer is designed to monitor landfill gas extraction systems.

Benefits:

- Allows balancing of gas extraction site.
- Maximize power generation from site.
- Field proven.
- Standardizes monitoring routines.
- Easy transfer of data.
- GPS for compliance.

Features:

- ATEX certified.
- MCERTS certified.
- H₂ compensated CO.
- Calculates flow (m³/hr) and calorific value (kW or BTU).
- Technician log-in.
- Event log.
- Two instruments in one (GA and GEM mode).
- Measures static and differential pressure.
- Simultaneous display of gases.
- Storage of changes in set-up of gas field.
- Data logging.

Applications:

- Gas extraction fields.
- Flare monitoring.
- Landfill sites.

3.2 GEM5000 standard product**Reference:**

- A Hard carry case
- B In-line water trap tubing & filter
- C Gas analyser instrument
- D H₂S filter (optional – if the compensated CO cell is fitted)
- E 5000 series safety manual
- F Mains battery charger and adaptors:
- UK
 - Europe
 - US
 - Australia

4.0 GEM5000 Optional Products and Accessories

4.1 Optional products

The GEM5000 gas analyzer has a number of optional products for purchase which enhance the usability and enable further analysis of data and reading information.

✍ Note: For more information on the features listed in this section please contact Sales at (800) 624-2026 or email info@qedenv.com

4.1.1 Pitot tube (optional)

The GEM5000 gas analyzer enables the use of a pitot tube to aid accurate flow measurement. The pitot tube is used for gas extraction systems and the pressure readings are taken in mbar. High gas flow is calculated in the analyzer in m³/hr (metres cubed per hour).

4.1.2 Orifice plate (optional)

QED recommends the use of orifice plates as good practice when using the GEM5000 gas analyzer, enabling repeatability in flow measurement via a fixed method. Contact Sales at (800) 624-2026 or email info@qedenv.com if the use of Orifice plates is required.

4.1.3 Temperature probe (optional)

The GEM5000 gas analyzer has the facility to automatically display and record the borehole temperature via an optional temperature probe.

When a temperature probe is fitted the temperature reading will be displayed on the **'Main Gas Read Screen'** and recorded with all other data.

✍ Note: Temperature probes with an Ex label are part of the GEM5000 Ex certification SIRA 11ATEX2197X and IECEx SIR11.0089X, and therefore certified for use under the same conditions as the analyzer.

4.1.4 Anemometer (optional)

The GEM5000 gas analyzer has the facility to automatically display and record high flow via an optional anemometer probe. It is designed to plug into the instrument and instantly provide a flow indication. An anemometer probe adds flow measurements to the professional reporting ability of the GEM5000 range along with gas concentrations, pressure and temperature.

The anemometer has a simple connection, a narrow diameter measurement head (11mm), a wide temperature operating range (up to 80°C) and indicates flows up to 40 m/sec.

When an anemometer probe is fitted to the analyzer the flow will be displayed in the **'Main Gas Read Screen'** and recorded with all other data.

Flow can be measured in either m/s (gas velocity) or m³/hr (volume flow rate). In order to calculate the volume flow rate the pipe diameter will need to be entered into the instrument, either manually or via the Landtec Systems Gas Analyser Manager, (LSGAM), software.

✍ Note: The anemometer probe is ATEX certified for use in a potentially explosive atmosphere under Ex certificate BVS 04ATEXE194.

4.1.5 H₂S filter (optional)

The GEM5000 gas analyzer has the capability to use an H₂S filter and is required as standard if the compensated CO cell is fitted and configured at the time the instrument is manufactured. H₂S gas can have a cross-gas effect on the CO reading. By using a filter, the H₂S is removed from the gas sample, therefore providing a more accurate CO reading.

The filter only needs to be used when you are trying to get rid of any possible cross gas effects H₂S might have on other gases. Do not use the filter on all boreholes.

4.1.6 Landtec Systems Gas Analyzer Manager – LSGAM (optional)

Landtec Systems Gas Analyzer Manager (LSGAM) enables the operator to maximize the operation of the gas analyzer. It enables direct communication with the unit, features a simple upload and download facility and is fully compatible with the latest Microsoft™ operating systems.

Features:

- Organization and transfer of borehole IDs and readings to and from the gas analyzer.
- Configuration of the gas analyzer.
- Flexible grouping of the IDs.
- Structured organization of transferred data.
- Automatic detection of instrument type and available options.
- Secure data mode to prevent tampering.
- First time set-up wizard.
- Enable flow measurements for GEM5000 gas analyzers.

4.1.7 GPS (optional)

An optional GPS feature is available for the GEM5000 gas analyzer. It enables the site engineer to automatically locate borehole IDs using GPS satellite signal from predefined borehole IDs uploaded from LSGAM or set on the analyzer when out in the field prior to taking a reading. The GPS reading data is stored for each measurement reading providing an audit trail confirming that a reading was taken.

4.1.8 Bluetooth

The analyzers are fitted with a Bluetooth receiver which enables the operator to download readings and upload IDs without the need to connect the analyzer to a PC via a USB cable.

5.0 GEM5000 Instrument Features

5.1 Physical characteristics of the instrument panel

Front view:



Reference:

- A Main Gas Read Screen
- B Soft-keys
- C Backlight Key
- D Menu Key
- E Pump key
- F LED Light
- G On/Off Key
- H Assistance key
- I Enter Key
- J Scroll up key
- K Scroll down key
- L Key 0 – Space key

Back view:



Reference:


- M Model Number
- N Serial number
- O Part number
- P Certificate number
- Q Recalibrated date

5.2 Analyzer features and keys

A	Main Gas Read Screen	Start and end screen when using the instrument.
B	Soft-keys	The function of the three 'soft-keys' on the front of the instrument panel is determined by menu options taken. Functions vary from screen to screen.
C	Backlight key	Enables the operator to turn the backlight on/off on the analyzer display panel.
D	Menu key	Press the 'Menu' key to view and maintain User, Device and Operation settings.
E	Pump key	Press the 'Pump' key to start or stop the pump.
F	LED light	LED power light is visible on the front of the analyzer when the instrument is powered on.
G	On/Off key	Press the 'On/Off' key for 2 seconds to switch the instrument on and off.
H	Assistance key	Press for on-screen assistance and help.
I	Enter key	Use to accept changes, options, user inputted answers etc.
J	Key 2 – Page Up	Also 'Key 2'. Press scroll up to view further information on the instrument screen.
K	Key 8 – Page down	Also 'Key 8'. Enables the operator to scroll down to display more information.
L	Key 0 – Space key	Also 'Key 0'. Press to enter a space when entering text on the instrument screen.
M	Model Number	Instrument model type identification.
N	Serial Number	Unique identification for the instrument. Verification of the serial number will be required if Technical Support assistance is needed.
O	Part Number	Manufacturer's part number.
P	Certification Number	Displays instrument certification information.
Q	Recalibrated Date	The date displayed is the date the instrument is due to be calibrated.

5.3 Instrument connection points

Top view:

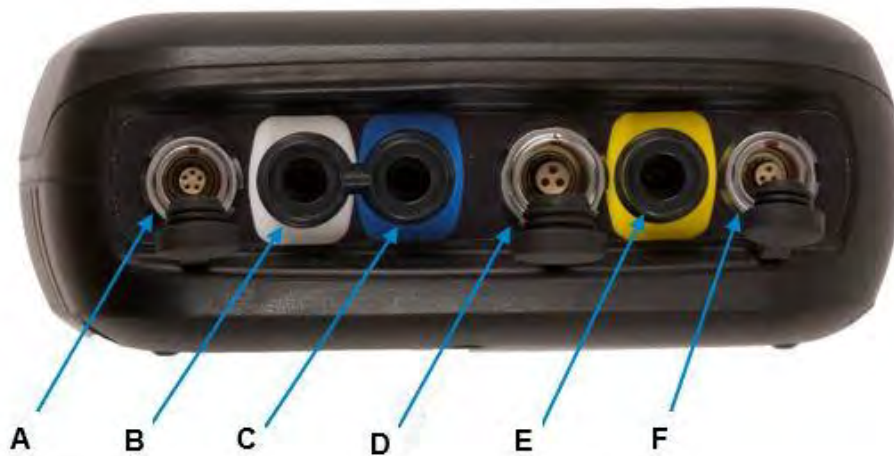

Ref:	Connection Point:	Function:
A	Connector A	Attach the USB cable for PC-to-analyzer connectivity.
B	Inlet Port & Static Pressure Port (White port)	Attach the sample tube to take a gas sample. Also used to measure the static pressure.
C	Differential Pressure Port (Blue port)	Attach the sample tube to measure differential pressure.
D	Connector B	Attach the temperature probe and also used to attach the mains charger to the analyzer for charging.
E	Gas Outlet Port (Yellow port)	The gas outlet port is the point at which the sample gas is expelled. Tubing may also be attached to the port.
F	Connector C	Attach the anemometer.

6.0 General Operational Instructions

6.1 Switching the instrument on

- 1) To switch on the analyzer, press and hold the **'On/Off' key**. The Landtec logo will display followed by the instrument warm up.
- 2) Following the instrument warm up, the **'Date and Time' screen is displayed** prompting the technician to set the date and time and required format.
- 3) When complete, select the soft-key to **'Exit' and the 'Power On Self-test' screen is displayed** followed by instrument status. Instrument status displays the instruments service due date, serial number, options, service scheme and software version. **Text will also display stating 'Self-test complete'.**
- 4) Select the soft-key **'Next' to move onto the next screen and the 'Technician Login' screen is displayed.**
- 5) **Use the cursor keys to move through the list of ID's.** Select either the required **'Technician ID'** from the list followed by the soft-key **'Accept'**, **or select 'Default'** followed by the soft-key **'Accept'** to continue to the **'Main Gas Read Screen'**.

⚠ Note: The selected technician ID is displayed at the top left corner of the Main Gas Read Screen.

6.1.1 Power on self-test

When switched on, the read-out will perform a pre-determined self-test sequence. During this time many of the analyzer's **functions are** tested, including:

- General operation
- Gas flow measurement
- Calibration
- Battery charge level

During the self-test the following information is also displayed:

- **Manufacturer's service due date**
- The last gas check date
- Software version programmed
- Date format
- Serial number
- Operating language
- The currently enabled sales option













⚠ Note: The self-test should only be done with the analyzer sampling fresh air.

6.2 Switching the instrument off

- 1) To switch off the analyzer, press and hold the **'On/Off' key**, at which point a clean air purge will be carried out and the instrument will then switch off.
- 2) If for any reason the analyzer **'locks up' and will not switch off in this manner, press and hold the 'On/Off' key for 15 seconds;** this will force the instrument to switch off.

6.3 Instrument status icons

The following icons may be displayed on the instrument screen:

Icon	Description	Icon	Description
	Battery charge state Gives the operator an estimation of the battery charge state. For example 100% gives about 8 hours use in the field and 50% would mean that there is approximately 4 hours battery life remaining.		Battery charge state Indicates less than 2 hours of charge remaining.
	Pump status This icon is displayed along with a counter showing the pump run-time. This counts down where the operator has specified the pump run-time; if not it counts up; the icon turns red when stalled.		Pump stalled This icon is displayed when the pump stalls. The instrument's gas inlet (or outlet) may be blocked. This warning is most commonly caused by a water-logged or dirty sample filter. Change the sample filter and check for obvious blockages in the sample tubes. Alternatively, a small amount of adjustment can be made to the low flow detection point to compensate for minor changes in the performance of the pump fitted to the instrument.
	GPS signal strength This icon shows the signal strength the analyzer's GPS module is able to provide. Full, okay and fair strength respectively.		GPS failure The GPS was unable to get a line of sight lock on enough satellites. Or, it may be that it hasn't had time to get a lock.
	This indicates when Bluetooth has been enabled. The color changes from gray to blue when connected.		Language This icon indicates the currently selected operating language. This can be changed via the main menu.
	Data logging This icon indicates that the data logging feature is in operation.		Service overdue This icon indicates that the analyzer is overdue for service
	Legacy mode This icon indicates that the analyzer is in legacy mode and hence is ready to connect to a PC.		USB disabled This icon indicates that the analyzer has reached a battery critical state, and hence has turned off its USB connectivity.

6.4 Instrument LED power states

When the instrument is powered on a LED power light is visible on the front of the analyzer, located above the 'On/Off' key. The following LED power light states are as follows:

Steady yellow	Unit turning on. This will extinguish when software has loaded correctly.
Flashing (rapid)	Unit is powering off.
Flashing (slow)	Power off is being delayed for purge/shutdown handling.
Flashing yellow	Unit is turning off due to power button being pressed.
Flashing red	Unit is turning off due to critically low battery.

✍ Note: Pressing and holding the power button for ~20s resets the analyser.

6.5 Changing between parameters

By default, the instrument displays the 'Main Gas Read Screen' (for gas measurement). The instrument will return to this screen after power on or when returning from the menus. The 'Scroll' keys can be used to switch to another measurement screen.

6.6 Entering data

During normal operation the operator may be prompted to enter data or information via the keypad, i.e. entering an ID code or setting an alarm level.

When entering data into the instrument all fields are fixed format and are populated from the left.

Text:

Entering text uses similar multi-tap functionality as a mobile phone. Key the numeric/alpha key pad the required number of times to select the appropriate letter. To key numeric data continue to press the numeric/alpha key until the required number is displayed.

Numeric data:

To enter a new date 09/15/116 the operator would type in 091516 using the numeric keypad in the following sequence: -

```
* 0_/_/_/___
* 09/_/_/___
* 09/1_/_/___
* 09/15/_/___
* 09/15/1_/_
* 09/15/16
```

Press the 'Enter' key to confirm/accept data keyed.

Any mistakes can be corrected using the soft-key 'Delete' which will delete the last digit typed. Alternatively, the sequence can be retyped before the 'Enter' key is pressed and the existing numbers will be pushed off the screen.

✍ Note: The instrument will not allow invalid data to be entered; this should be deleted and re-entered.

6.7 Instrument main gas read screen

The 'Main Gas Read Screen' is considered to be the normal operating screen and all operations are carried out from this starting point.

The actual data shown on this display will depend on the version of the instrument and the options that have been selected.



Main Gas Read Screen

You can also press key 2 and access a zoomed version of the main read screen, once you have entered this mode, simply use keys 4 and 6 to switch between the gases and pressures. Examples of both screens can be seen below:



Zoomed version

6.8 Storage

The analyzer should not be exposed to extreme temperature. For example, do not keep the analyzer in a hot car. When not in use, analyzers should be kept in a clean, dry and warm environment, such as an office. Protect the analyzer with either the soft carry case or store in the hard carry case provided with the instrument.


The instrument should be discharged and fully charged at least once every four weeks, regardless of indicated charge state.

6.9 Battery/charging

The battery used in the 5000 series of gas analyzers is nickel metal hydride and manufactured as a pack from six individual cells. This type of battery is not so susceptible to the top-off charging 'memory effects' as nickel cadmium batteries, although it is not recommended that the unit is given small top-off charges.

✍ Note: **To reach optimum charge, it is recommended that the instrument is switched off when being charged and remains switched off during the charging process.**

A full charge will take approximately 4 hours from a fully discharged battery.


 Warning	The battery charger is NOT covered by the Ex certification. The battery must be charged only in a safe area.
--	---

The battery charger is intelligent and will indicate when the unit is charging and charged.

The instrument must be charged ONLY using the battery charger supplied with the instrument. The battery charger supplied is intended for indoor use only. Please ensure adequate ventilation while charging. Typically, a fully charged battery will last 7-8 hours. A quick 30 minute charge can be used to give approximately one hours use in the field but this may shorten the battery life. Temperature can dramatically affect the battery life; please take this into account when estimating battery life.

⚡ Note: Connect the charger to the mains attaching the appropriate adaptor.

Power supply front and back drawing:

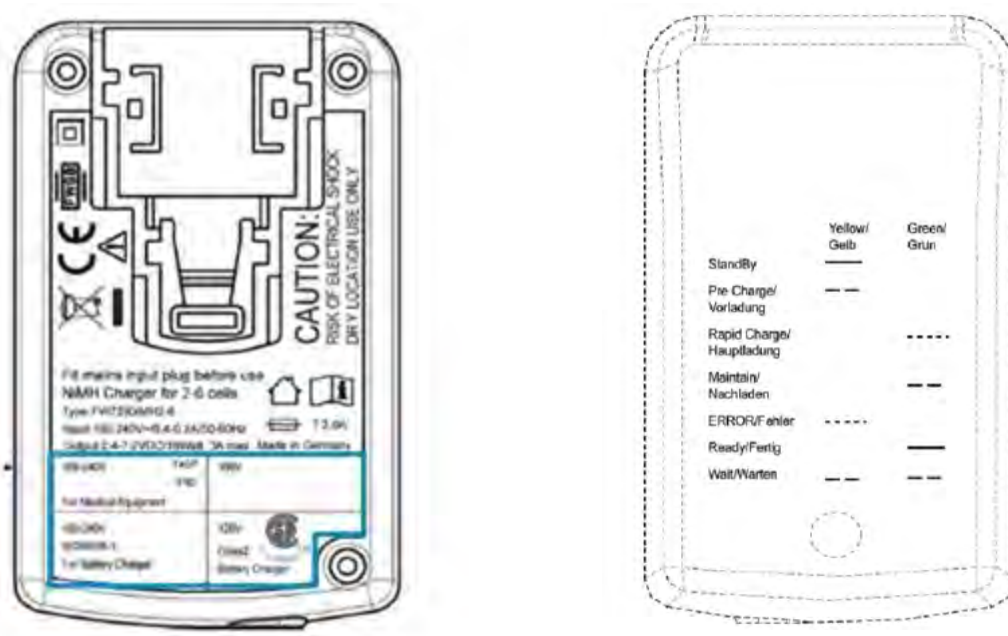

Charger: Input voltage: 100-240V AC +/- 10%
 Input frequency: 50-60Hz +/- 10%
 Input current: 0.4A@100VAC .. 0.2A@240VAC

Output voltage: 10.1VDC max
 Output current: 1.5A max

⚡ Note: This charger has been internally restricted to 1.5A

6.10 Cleaning instructions

Do NOT use any cleaning agents to clean the analyzer or battery charger as they may have an adverse effect on the safe use of these devices.

6.11 Memory

The analyzer's memory is stored in a readings and configuration database. The analyzer will prompt when its memory is full, and you will not be able to store any further readings. Please download your readings via LSGAM or the Basic Download Software and then clear the memory.

✍ Note: The analyzer should never be stored for prolonged periods with valuable data in its memory. It is advisable to download all readings to LSGAM at the end of each day's monitoring. To clear the memory, please refer to the LSGAM operating manual.


6.12 Warning and error codes

When switched on the instrument will perform a predetermined self-test sequence taking approximately ten seconds. During this time many of **the instrument's working parameters** and settings are checked. If any operational parameters are out of specification or if the pre-programmed recommended calibration/service date has passed, errors or warnings may be displayed.

✍ Note: For further information please refer to **section '10.0 Problem Solving'**.

7.0 Operator Settings

7.1 Menu key



The 'Menu' key enables the operator to select options to set up specific parameters and perform operational tasks prior to sample readings being taken or to view data and information stored in the instrument.

- 1) Select the 'Menu' key on the front of the analyzer and the following screen is displayed:



- 2) Press the relevant numeric key on the analyzer keypad to select the required option.
- 3) To exit this menu, select the soft-key 'Exit' on the front of the analyzer and the operator is returned to Main Gas Read Screen.

7.2 Operation settings

To access the 'Operation settings' menu, select the 'Menu' key on the front of the analyzer. The following menu is displayed:



7.2.1 Timers



The timers function enables the operator to set standard purge times and set auto-power off if the unit is untouched for the period of time specified.

- 1) Select 'Key 1 – Timers' and the following screen is displayed:



- 1) Select 'Key 1' to edit the purge time. Enter the 'Pump Running Time' in seconds; this is the length of time you wish to run the pump to draw the sample, e.g. key in 030 then press the 'Enter' key to accept.
- 2) Select 'Key 2' to edit the auto power off time. Enter the 'Auto power off' in minutes; the instrument will automatically power off to preserve the battery life after the specified time if no activity has occurred on the instrument. Press the 'Enter' key to accept.
- 3) Select the soft-key 'Exit' key to exit the screen and return to the 'Operation settings' menu.

Note: Setting the purge time and auto power off functions to zero, disables the option. It is not recommended to reduce the purge time to below 30 seconds.

7.2.2 Gas Check



This option displays the 'Gas Check' menu and enables the operator to zero and span the gas channels on the instrument. Historical/previous gas checks data can also be viewed and factory settings can be restored.

- 1) Select the 'Menu' button on the front of the analyzer to display the 'Device Settings' menu. Press the soft key to display 'Operation Settings'.
- 2) Select 'Key 2 - Gas Check' and the following menu is displayed:



- 3) For more information about the Gas Check Menu please refer to section 9.0 - Calibration.
- 4) Select soft-key 'Exit' to exit operation settings and return to the main screen.

7.2.3 View data



This option enables the operator to view the readings collected and stored on the instrument. Readings may be downloaded to the optional LSGAM software if further analysis is required.

- 1) Select the 'Menu' button on the front of the analyzer to display the 'Device Settings' menu. Press the soft-key to display 'Operation Settings'.
- 2) Select 'Key 3 - View Data' and the following screen is displayed:

View Data		10:49 - 09/01/12		3 / 3	
ID: EEEE		06/01/12 11:36:37			
CH ₄	(%)	23.1	PEAKCH4	(%)	23.1
CO ₂	(%)	0.1	PEAKCO2	(%)	0.1
O ₂	(%)	17.0	MINO2	(%)	17.0
CO	(ppm)	0	SysP	(mb)	0.00
H ₂	(ppm)	----	Baro	(mb)	982
H ₂ S	(ppm)	2	Temp	(°C)	----
Bal	(%)	59.7	Anemo	(m/s)	----
			Flow	(m ³ /h)	----

- 3) Toggle through the reading by selecting 'Key 4 – Scroll left' and 'Key 6 – Scroll right' on the analyzer. Select 'Key 2 – Page up' and 'Key 8 – Page down' to page through the auxiliary channels listed.
- 4) Select the soft-key 'Filter' to filter the data by sample point ID, or specify before or after date. Press the soft-key 'Exit' to exit the filter menu and return to the 'View Data' screen.



- 5) Select the soft-key 'Delete' followed by the appropriate soft-key to delete a single reading or all filtered readings. Press soft-key 'Cancel' to cancel the deletion request.
- 6) Select the soft-key 'Exit' to exit the view data screen.

7.2.4 Set alarms



Set Alarms

This option enables the operator to define the conditions for which an alarm/target will be triggered. These conditions apply to the general operation of the instrument and are not ID specific. A summary of the alarm settings can be found in 'Key 3 – Summary'.

Types of alarms

Common Alarms – Are non-ID specific alarms which apply to all the readings taken with the analyzer.

ID specific alarms – Are ID specific, i.e. they will only trigger when a certain Id is being used.

Tuning/targets – You can also set targets for your gas channels; these will highlight gas channels green as oppose to when they alarm (yellow). These can be common or ID specific.

Setting up alarms/targets

- 1) Select the 'Menu' button on the front of the analyzer to display the 'Device Settings' menu. Press the soft key to display 'Operation Settings'.


- 2) Select 'Key 4 – Set Alarms' and the following menu is displayed:



- 3) Select the corresponding key to select the gas for which you wish to set an alarm/target trigger for, followed by 'Key 1' to change the trigger condition of an alarm.
- 4) To manually adjust the alarm/target set press (<) 'Key 4 – Scroll left' or 'Key 6 – Scroll right' (>) and enter the trigger value. Once you are happy, press the middle soft key for 'save'.
- 5) For pressure, temperature and flow alarms, press the left soft key for 'Secondary' and then select the corresponding key to select the channel for which you wish to set an alarm trigger for, followed by 'Key 1' to change the trigger condition of an alarm/target. Once you are happy, press the middle soft key for 'save'.



- 6) To disable all alarm settings select key 0 – 'Disable All'

 Note: ID specific alarms cannot be added/edited on the analyzer, to add/edit ID specific alarms, please use the optional LSGAM Software.

7.2.5 Adjust flow fail




This option enables the operator to adjust the flow fail tolerance of the instrument, i.e. the operator can adjust the sensitivity for when the pump will stop operating on the presence of a blockage or low flow.

- 1) Select the 'Menu' button on the front of the analyzer to display the 'Device Settings' menu. Press the soft-key to display 'Operation Settings'.

- 2) Select 'Key 5 – Adjust Flow Fail' and the following screen is displayed:



- 3) Manual adjustment of the flow fail is available via this option and can be carried out with use of 'Key 4 – Scroll left' (<) less sensitive and 'Key 6 – Scroll right' (>) more sensitive.
- 4) Select the soft-key 'Save' to store the setting or select soft-key 'Exit' to exit the screen without saving the change.
- 5) The operator will return to the 'Operation settings' menu.

 Note: The default setting displays the bar in the centre. BEFORE altering this setting, please contact Technical Support at (800) 968-2026 or email landtec_support@qedenv.com

7.2.6 Technician login




This option enables the operator to select or change a pre-defined technician login and all subsequent readings will be tagged with this Technician Login ID. The technician ID must already have been created using the LSGAM software and uploaded to the instrument.

- 1) Select the 'Menu' button on the front of the analyzer to display the 'Device Settings' menu. Press the soft key to display 'User Settings'.
- 2) Select 'Key 6 – Technician login' and the following screen is displayed:



- 3) Use the cursor keys to move throughout the list of IDs displayed; select the 'Enter' key to select choice of ID, default if no IDs are listed or soft-key 'Skip' to skip the selection.

4) The operator will return to the 'User settings' menu.

 Note: If no technicians are loaded via LSGAM, this section is skipped during start up and the 'Technician ID' icon is removed from the menu.

7.3 Device settings

To access the 'Device Settings' menu, select the 'Menu' key on the front of the analyzer to display the 'Operating Settings' menu followed by the soft-key to display 'Device Settings' menu. The following menu is displayed:



7.3.1 Date and time



This option enables the operator to set the instrument date and time or to receive and update the settings automatically from satellite signal.

1) Select the 'Menu' key on the front of the analyzer to display the 'Device Settings' menu followed by 'Key 1 – Date and Time' and the following screen is displayed:



- 2) Select 'Key 1 – Set Date' and key in the required date. Type the date using the numeric keypad. Press the soft-key 'Date Format' to toggle and select the required date format i.e. dd/mm/yy. Press the 'Enter' key to confirm and update the date setting.
- 3) Select 'Key 2 – Set Time' and key in the required time (hh:mm). Type the time using the numeric keypad and press the 'Enter' key to confirm the update.

- 4) The operator may also change the default time zone. Selecting the 'Key 4 Scroll-left' or 'Key 6 – Scroll right' to move through the different time zones. Press the 'Enter' key to confirm your default setting.
- 5) Select 'Key 3' to toggle between 'Manual Update' and 'Automatic Update' in order to choose how the date and time is set if updating from satellite signal.

Manual Used to manually obtain and update the date and time from the satellite signal when requested. Select soft-key 'Set now' to set date and time from satellite when available.

Automatic Used to automatically update the date and time received from the satellite signal when available. This option is only available when the GPS option is fitted to the analyser at the time of manufacture.

- 6) Select the soft-key 'Exit' to exit and return to the 'Device Settings' menu.

7.3.2 Bluetooth



This option enables the operator to set and utilize Bluetooth technology. This may be useful when downloading gas readings from the analyzer to the PC instead of connecting the analyzer to a PC via a USB cable. Bluetooth may also be used to transfer Site IDs to other 5000 series gas analyzers if required.

- 1) Select the 'Menu' key on the front of the analyzer to display the 'Device Settings' menu.
- 2) Select 'Key 2 – Bluetooth' and the following screen is displayed:




- 3) Enter the 'Pairing PIN' value when prompted by your computer for the device's pairing code.
- 4) Select soft-key 'Exit' to exit the screen and return to the 'Device Settings' menu.

7.3.3 Device information



This option displays default instrument information and settings such as serial number, service due date, last zero calibration date and last span calibration date.

- 1) Select the 'Menu' key on the front of the analyser to display the 'Device Settings' menu.
- 2) Select 'Key 3 – Device Information' and the following screen is displayed:

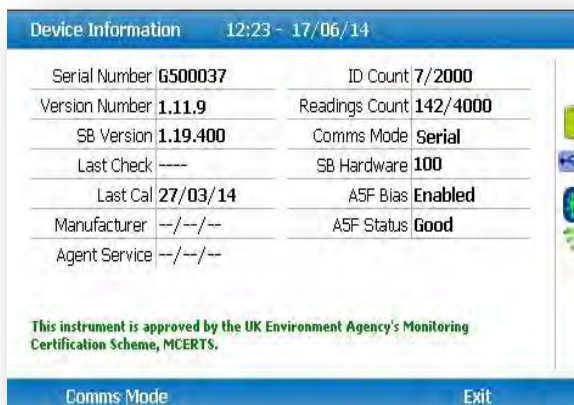

Device Information		12:23 - 17/06/14	
Serial Number	G500037	ID Count	7/2000
Version Number	1.11.9	Readings Count	142/4000
SB Version	1.19.400	Comms Mode	Serial
Last Check	----	SB Hardware	100
Last Cal	27/03/14	A5F Bias	Enabled
Manufacturer	--/--	A5F Status	Good
Agent Service	--/--		

This instrument is approved by the UK Environment Agency's Monitoring Certification Scheme, MCERTS.

Comms Mode Exit

- 3) The information displayed on this screen is informational only and cannot be edited by the operator. The operator may be asked serial number, service due date and version number information when contacting QED.
- ✎ Note: The communications setting 'Legacy' mode is for use with GAM \geq v1.5. GA5K mode is reserved for future applications – use with 5000 series updater tool
- 4) Select soft-key 'Exit' to exit the screen and return to the 'Device Settings' menu.

7.3.4 Diagnostics



This option enables the Technical Support Team to identify and resolve issues with the instrument and settings. If required, the operator may be asked to confirm the diagnostics displayed.

- 1) Select the 'Menu' key on the front of the analyser to display the 'Device Settings' menu.
- 2) Select 'Key 4 – Diagnostics' and the following screen is displayed:

Diagnostics						15:19 - 05/01/12	G500046
Channel	ADC	Filt	Lin	Lin2	Status		
Ref	(N/A)	10138	10134	+10134	+10134	✓	
CH ₄	(%)	-1	9944	0.2	0.2	✓	
CO ₂	(%)	5343	5343	2.6	2.6	✓	
O ₂	(%)	43511	43507	13.7	13.7	✓	
S4Cell	()					✗	
CO	(ppm)	32836	32836	0	0	✓	
H ₂	(ppm)	32833	32833	0	****	✓	
H ₂ S	(ppm)	32866	32859	3	3	✓	
PID	()					✗	

Next Previous Exit

- 3) Select soft-key 'Next' to display the next screen, 'Previous' to return to the previous screen, or select soft-key 'Exit' to exit this screen and return to the 'Device Settings' menu.

✍ Note: For further information please contact Technical Support at (800) 968-2026 or email landtec_support@qedenv.com

7.3.5 Navigation (optional)



Navigation is On

This option enables the operator to switch the 'GPS Navigation' functionality on or off. (This is optional and dependent upon purchasing the navigation option).

- 1) Select the 'Menu' key and the 'Device Settings' menu is displayed.
- 2) Select 'Key 5 - Navigation On' to switch on the GPS navigation functionality or 'Key 5 - Navigation Off' to switch the GPS navigation functionality off.



Navigation is On



Navigation is Off

✍ Note: For further information please refer to section '8.0 - Taking Readings'.

7.4 User settings

To access the 'User settings' menu, select the 'Menu' key on the front of the analyzer to display the 'Operating Settings' menu followed by the soft-key to display 'User Settings' menu. The following menu is displayed:



To exit the user settings menu select the soft-key 'Exit'.

7.4.1 Operating language



This option enables the operator to specify the operating language displayed for the instrument.

- 1) Select 'Key 1 – Operating Language' and the following screen is displayed:



Set the required language for the gas analyser by selecting the appropriate function key. Choose from, on the first page:

Key 1	English
Key 2	Spanish
Key 3	French
Key 4	German
Key 5	Italian
Key 6	Portuguese

Use the soft-keys to move to the next page for further language options, including simplified Chinese

- To exit this option, select the soft-key 'Exit' and the operator is returned to the 'User Settings' menu.

7.4.2 Units of measurement



This option enables the operator to specify the default units of measurement for the instrument.

- Select 'Key 2 – Units of Measurement' and the following screen is displayed:



- To set the required units of measurement toggle and choose from the following:

Key 1	Temperature	°C °F
Key 2	Flow	scfm m3/hr
Key 3	Measurement	Inches Millimetres
Key 4	Pressure	mb "H2O
Key 5	Balance	Balance Residual N2

- 3) Select soft-key 'Exit' to exit this screen and return to the 'User Settings' menu.

7.4.3 ID selection

The ID selection screen allows the operator to scroll through all IDs, including those uploaded from LSGAM and added directly onto the instrument, and then make a selection. Detailed information regarding the currently selected ID, such as flow device type and pump runtime, are displayed below: -



By selecting 'Key 5' the operator can toggle between showing 30 IDs and showing 5 IDs with more detailed information relating to the chosen ID.



The technician can scroll between the IDs using the following keys on the instrument keypad:

- Two (2) and eight (8) move the selection up/down
- Four (4) and six (6) move the selection left/right on the list view
- One (1) and three (3) move the selection left/right a page in the list view only
- Seven (7) and nine (9) move the selection to first/last ID

Five (5) toggles between the 'ID with information' and 'ID list'
 Return/enter key selects the desired ID and proceeds to the navigation or reading screen.

If there are no IDs present the technician can either add a new ID or press the enter key on the instrument keypad to return to the previous screen.

Soft keys:

Left - Select 'No ID' and go to the purge/reading screen.




Center - Enabled when there is a list of IDs, allowing the technician to dynamically filter the IDs displayed in the list.

Right - Allows the technician to add a new ID to the instrument 'in the field'.

✍ Note: If your analyzer has firmware version v1.12 or greater, used IDs will have a strikethrough.

Changing the sort order

By default the IDs are sorted in the order in which they were transferred to the instrument. To change the sort order between unsorted, sort by name or sorted by distance to travel press Key 0.

-  Sorted by original order (not sorted)
-  Sorted alphabetically
-  Sorted by distance to travel

✍ Note: Only available when GPS is enabled

For analyzers with firmware v1.12 and above:

- 1) Press the menu key
- 2) Press the middle soft key for '**User Settings**'
- 3) Press key 3 – '**ID options**'
 - a. Key 1 to change the sort order
 - b. Key 2 to change how the IDs are displayed
 - c. Key 3 to clear the line through on the current ID being used
 - d. Key 4 to remove the line through on all IDs




7.4.4 Routes

Using the optional LSGAM Software, you can upload a route. This is a predefined list of IDs that you can go through in an order. This feature is useful if you have a certain order to complete your IDS in.

Furthermore if your GA5000 has v1.12 or higher firmware it will strike through your IDs once you have used them.



 Note: If the analyzer is set to "route mode" (v1.12 and above), the filter box will no longer be there, as you cannot filter in this mode. It will be replaced by "Route" and the route name.

7.4.5 Adjust backlight



Adjust Backlight

This option enables the operator to adjust the backlight (brightness). Having this set to a darker setting will help preserve the battery power

- 1) Select 'Key 4 – Adjust Backlight' and the following screen is displayed:



- 2) Keys 4 and 6 can be used to adjust the brightness of the display screen.

'Manual' disables the backlight timeout.

- 3) Select the soft-key 'Save' to store the setting or select soft-key 'Exit' to exit the screen without saving the change.
- 4) The operator will return to the 'User settings' menu.


Selecting 'Key 1' allows the operator to configure the dimmer settings from 'Auto Dim' to 'Auto Off' in order to help preserve power consumption when data logging.



This icon represents 'Auto Dim' – this enables the backlight idle timeout, which means the backlight will go dim after a specified period of inactivity. This will help save battery life.



This icon represents 'Auto Off' – this switches the backlight off, saving power.

 Note: The manually set contrast setting is retained when the read-out is switched off and may require resetting when next switched on.


7.4.6 Adjust volume



Adjust Volume

This option enables the operator to adjust the volume for the internal speaker, for example the alarm tone. A lower setting will help preserve the battery power.

- 1) Select the 'Menu' button on the front of the analyzer to display the 'Device Settings' menu. Press the soft-key to display 'User Settings'.
- 2) Select 'Key 5 – Adjust Volume' and the following screen is displayed:

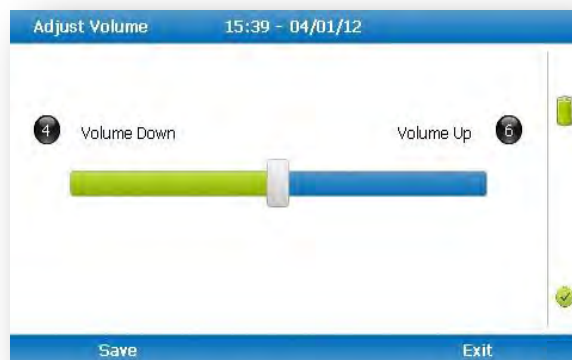

- 3) Manual adjustment of the volume is available via this option and can be carried out with use of 'Key 4 - Scroll left' (<) volume down and 'Key 6 - Scroll right' (>) volume up.
- 4) Select the soft-key 'Save' to store the setting or select soft-key 'Exit' to exit the screen without saving the change.
- 5) The operator will return to the 'User settings' menu.

7.4.7 User Prompts




This option enables the operator to either turn on or off the context-sensitive user prompts which are displayed during the gas sample process. The analyzer will have the user prompts on when it is first used, so if they are not required they can be switched off by selecting soft-key **'6'** and this will now be its default setting. Prompts can be switched back on at any time by returning to this menu and selecting soft-key **'6'**.

7.5 Exit menu

- 1) Press the 'Menu' button on the front of the analyzer to exit settings.


8.0 Taking Readings

8.1 Preliminary checks before taking readings (best practice)

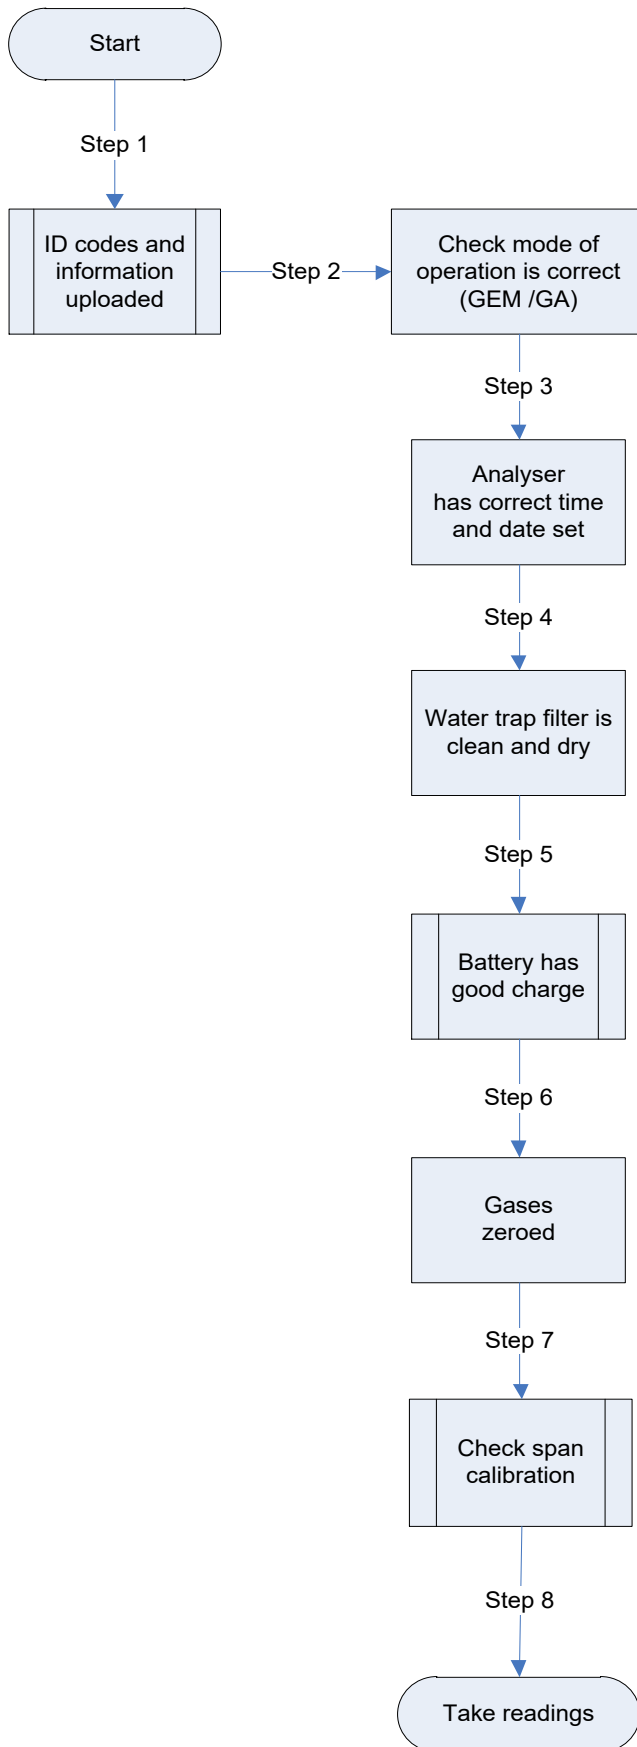


Prior to use, it is good practice to ensure that:

- Step 1** If using LSGAM - all necessary ID codes and information have been uploaded from LSGAM to the analyzer. Please see section 8.1.1 for more information on this.
- Step 2** Check the 'Mode of Operation' is correct. Choose either GEM5000 for gas extraction monitoring analyzer or GA5000 for landfill gas analyzer. Change using 'Special Actions'.
- Step 3** The instrument has the correct time and date set.
- Step 4** The water trap filter is fitted and is clean and dry.
- Step 5** The battery has a good charge (minimum 25% charge, even if only a few readings are required).
- Step 6** The gas channels have been zeroed, without gas concentration present.
- Step 7** If necessary check the span calibration with a known concentration calibration gas.
- Step 8** Take readings.

 Warning	Inhaling hydrogen sulphide gas (H ₂ S) or other harmful gases can cause death. It is the responsibility of the user to ensure that he/she is adequately trained in the safety aspects of using H ₂ S and other harmful gases. In particular, where hazardous gases are being used the gas exhausted from the analyser must be piped to an area where it is safe to discharge the gas. Hazardous gas can also be expelled from the instrument when purging with clean air.
--	---

Good practice

- Travel to site with the gas analyzer in the vehicle's interior - not in the trunk or truck bed, where it may be subjected to extremes of temperature and possible shock damage. Do not place the gas analyzer against anything hot (e.g. gas extraction pipe, car body or in an unattended car during the summer) as this will cause a temperature increase in the gas analyzer and may cause erroneous readings.
- When moving around a site, protect the gas analyzer from strong direct sunlight and heavy rain.
- Always use the water trap! If the water trap becomes flooded, change the filter and ensure all tubes are clear of moisture before re-use.

 Note: If the exhaust of a 5000 series gas analyzer is connected to a pressurized system then this results in a flow of gas out of the inlet flow port.

8.1.1 Creating an ID

There are two different methods to creating an ID, either via LSGAM or via the instrument.

If created on the analyzer, you can only fill out basic information, such as ID code, description and ID type. Whereas on LSGAM, you can assign site and ID questions (please see below), assign flow devices, input GPS coordinates etc.

To create an ID on LSGAM please consult the LSGAM operating manual. To create an ID on the instrument:

- 1) **Press the left blue arrow key for 'Next ID'**
- 2) **Press the right blue arrow key for 'Add'**
- 3) **Input an ID code using the keypad**
- 4) **Press enter**
- 5) **Using the corresponding number to input different properties of the ID**
- 6) **Once you are happy, press the middle key for 'add'**

8.2 Change screen layout

Use key 2 to toggle between 2 different ways of viewing the gas reading screen:

***** 09:17 - 06/26/14 Baro: 997 mb				
Channel	Adjusted	Initial	Previous	Units
CH ₄		81.7	81.3	%
CO ₂		1.6	1.7	%
O ₂		16.7	17.0	%
S5Cell		0	----	ppm
Bal		0.0	0.0	%
Static.P			----	mb
Diff.P			----	mb
Temp.			----	°F
Flow			----	m3/h
Power			----	KW
Next ID		Special Action		Start

Default view

***** 15:18 - 06/17/14 Baro: 29.81 "Hg				
Channel	Adjusted	Initial	Previous	Units
CH ₄	80.8	80.8	0.0	%
CO ₂	1.7	1.7	0.1	%
O ₂	17.5	17.5	20.6	%
Bal	0.0	0.0	79.3	%
Next ID		Special Action		Start

You can use key 4 and key 6 to switch between the gases page and the pressure & flow page. This feature is only available on analyzers running on firmware version 1.11 or later.

8.3 Answering site questions

Prior to taking the readings at a particular site, the site questions should be populated, this is only necessary when using site questions, if not, please proceed with the reading as normal. This is accessed via the 'Special Action' menu. The answers to these questions are then stored and appended to each reading stored thereafter, until the site questions are updated for another site. You will need LSGAM software to create site questions and if you are using LSGAM, this data will be uploaded to LSGAM along with the reading data.


8.4 Answering ID questions

Prior to, or after, you have taken the reading, the ID questions should be populated, this is only necessary when using ID questions, if not, please proceed with the reading as normal. When you have uploaded IDs with ID questions assigned to them (LSGAM software required), you will be prompted to answer these questions at the end of the reading, this means that the answer only equates to that reading.

8.5 Special action

This menu enables the operator to perform the additional following functions out of sequence if so desired.

- 1) From the 'Main Gas Read Screen' select the soft-key 'Special Action' and the following menu is displayed:

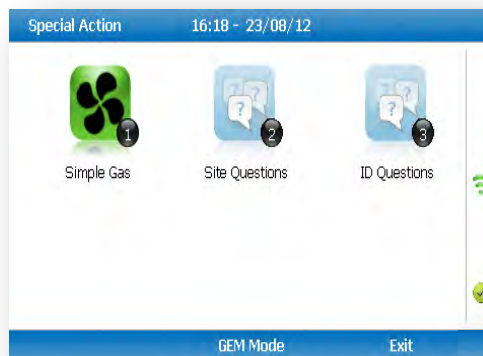

Note: The list of special action options displayed on the special action menu is dependent upon device type and sequence.

The following actions may be available:

Action	Function
Key 1 – Simple Gas	This action enables the operator to take a quick gas reading. The pump will start running automatically when this key is selected. The operator can stop the pump by pressing the pump key on the keypad at any time and the reading can then be stored by selecting soft-key 'Store'.
Key 2 – Site Questions	This action enables the operator to update site questions prior to taking a reading.
Key 3 – ID Questions	This action enables the operator to update ID questions specific to sample points prior to taking a reading.
Key 4 – Flow	This action enables the operator to measure internal flow first when taking a reading. Connect the blue hose to the sample point. The yellow hose can be vented a safe distance from the sample point or re-circulated back into the system. Select either soft-key 'Zero Flow', 'Flow Options' or 'Start' to commence internal flow. Select soft-key 'Store' to store and record the reading.
Key 5 – Enter Temperature	This action enables the operator to manually enter a temperature reading if not using a temperature probe prior to taking a gas measurement.
Key 6 – Start Logging	This action enables the operator to leave the analyzer unattended to take samples at a predetermined time. The reading interval and pump run times may be edited prior to commencing the logging cycle.

8.5.1 Configuration of the data logging option



- 1) Connect the gas inlet (white port) to the sample point. The yellow exhaust hose can be vented a safe distance from the sample point; do NOT re-circulate back into the system.
- 2) By selecting 'Next ID' the operator can select the ID which is being sampled at present.
- 3) Once the ID has been chosen the analyzer will commence and complete its clean air purge cycle.
- 4) To gain access to the data logging option the operator will be required to select the 'Special Action' key to obtain the special user options. The data logging option can then be selected via 'Key 6' to configure the logging parameters.
- 5) Once the operator has confirmed the logging parameters, select soft-key 'Start Logging'.
- 6) Once the logging function has been activated the analyzer will carry out a 30 second warm-up (displayed below the temperature read out at the right of the main gas read screen) and begin the first sample.
- 7) If for any reason during the logging cycle the inlet port becomes blocked, the analyzer will sense this as a 'Flow Fail' and the pump will automatically retry until the reading can be obtained. As such care must be taken when positioning the sample tubing to ensure water/moisture ingress does not occur.
- 8) Select soft-key 'Stop Logging' to stop logging if required.

8.5.2 Profiling option

- 1) The 'Logging Mode' center soft-key toggles between 'Logging Mode' and 'Profiling Mode' and pressing it will change the mode to the one the soft-key describes. For example, when on the profiling page the key will display as 'Logging Mode' and when on the logging page the key will display as 'Profiling Mode'.



- 2) To edit the parameter the operator will be required to select 'Key 3' to select the number of reading required. Once the number of readings has been updated press the return key to confirm parameter setting.
- 3) By selecting 'Key 2' the operator can edit the logging interval of their logging preferences and then confirm the amendments by pressing the return key.
- 4) Once the logging parameters are confirmed, commence the logging by selecting the 'Start Logging' key.
- 5) If for any reason during the logging cycle the inlet port becomes blocked, the analyzer will sense this as a 'Flow Fail' and the pump will automatically retry until the reading can be obtained. As such care must be taken when positioning the sample tubing to ensure water/moisture ingress does not occur.
- 6) Select soft-key 'Stop Logging' to stop logging if required.

Select the soft-key 'Exit' to exit this menu and return to the 'Main Gas Read Screen'.

8.6 GEM analyzer in GA mode

The operator may toggle between GEM (a gas extraction monitor) and GA (a landfill gas analyzer) mode of operation if required. From the 'Special Action' menu, select the middle soft-key to toggle between GEM and GA Mode.



✍ Note: For operating instructions on how to use the GA5000 mode of operation, please refer to the GA5000 gas analyzer operating manual.

8.7 The gas flow measurement screen

The GEM5000 gas analyzer enables gas and flow measurements to be recorded by using:

- A flow device i.e. a PITOT tube, Orifice plate, Accu-Flo or anemometer.
- A temperature probe.

The GEM5000 instrument has the extra functionality to measure the calculated calorific value of the gas. The site engineer uses the information recorded by the analyzer to make adjustments to the gas flow for specific boreholes. The initial and adjusted flow rates are recorded.

8.8 How to use an anemometer (optional)



The GEM5000 gas analyzer has the facility to attach an anemometer device enabling the site engineer to measure the flow of gas within an extraction system. The anemometer can be set to display two values; m/s (meters per second) and m³/hr (metres cubed per hour).


It is best practice to take the gas reading first before taking the flow reading with the anemometer attached.

If using a 'borehole ID' the internal pipe diameter can be predetermined in the optional LSGAM software. Once set, the site engineer cannot edit the pipe diameter setting.

If the site engineer is not using a borehole ID or the pipe diameter is not set in LSGAM the operator will be prompted to enter a pipe diameter with a new ID on the analyzer. Select soft-key **'Next ID'** from the Main Gas Read screen, followed by soft-key **'Add'** and add a new borehole location.

In order to use the anemometer it is important to know the internal diameter (ID) of the pipe if you want to calculate the flow in m³/hr (metres cubed per hour). This must be the internal diameter not the outer diameter (OD) i.e. pipe outer diameter minus twice the pipe wall thickness.

For example:

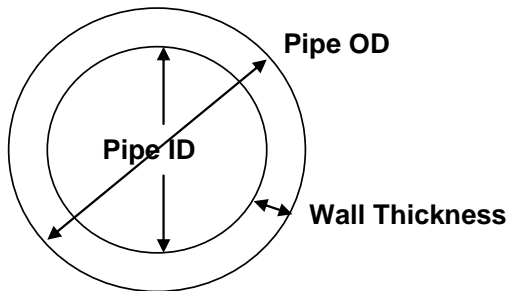

If you do not have any suitable monitoring points you will need to drill (tap of 3/4" BSP pipe thread) a hole in the piping of between 25mm and 30mm in diameter to seat the conical fitting on the anemometer (which is roughly between 20mm to 34mm). When not in use the hole can be re-sealed with a 3/4" BSP male bung.


⚡ Note: When the anemometer is not in use the conical fitting should be placed over the probe to protect it.

The anemometer must fit centrally (the conical fitting must be set on the probe to half the pipe ID before insertion). The arrow on the tip of the probe must point in the direction of the gas flow.

⚡ Note: Use the thumb screw to help align the direction of the probe into the gas stream.

Flow readings are most accurate when there is laminar flow (not turbulent). Turbulence can be caused by a change in pipe direction or restriction. Ideally, upstream you want at least 20 times the pipe ID along the length of the pipe without restriction or bend. Downstream, you want at least five times the pipe ID along the length of the pipe i.e. for a 100mm ID you need 2000mm of clear pipe upstream, 500mm downstream.

Example to show anemometer fitting into the sample point:

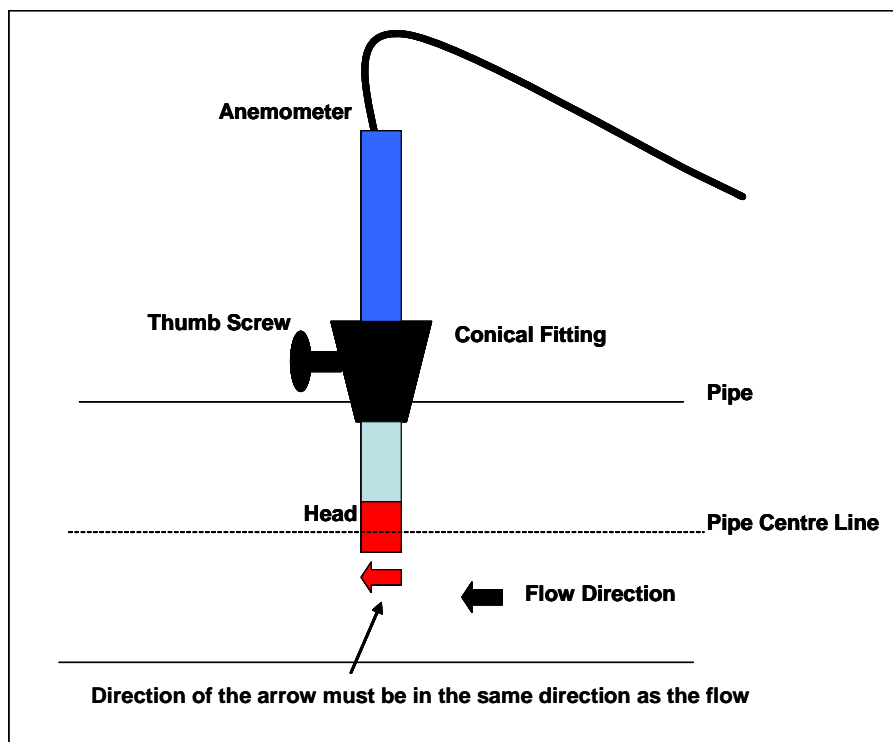

Instructions for use:

- 1) Attach the anemometer to 'Connector C' (refer to section 5.3 – Instrument connection points).
- 2) Place the anemometer into the pipe (sample point) ready to take the reading.
- 3) To take a flow measurement when using an anemometer, follow the instructions displayed on the analyzer. When the reading has stabilized **press the 'Enter' key** to store the reading.

Anemometer cleaning instructions:**General handling tips:**

- Protect the probes against severe vibration.
- Do not kink the connector cable (risk of cable breakage).
- Never allow hard objects to contact rotating impellers.
- Always carry out probe cleaning according to the cleaning instructions.
- Never immerse probes in solvent.
- Never blow probes through with compressed air.
- Allow hot probes to cool slowly, never cool by plunging them in cold water etc.

Cleaning instructions:

- Instrument and probe must be switched off or disconnected prior to cleaning.

Vane probes:

- As the probes are highly sensitive measuring instruments, they must be cleaned with great care.
- Fibres or other foreign bodies can be carefully removed with fine tweezers. When doing so, take care not to bend or otherwise damage the vanes or the spindle.
- The adjustment of the bearing screws must never be changed. This can result in an erroneous measurement.
- Never allow hard objects to contact rotating impellers.
- Cleaning agents that extract the plasticizer from the plastic are never to be used for plastic probes (practically all solvents).

Cleaning the probes – best practice:

✍ Note: Use soapy water.

Cleaning example:

- 1) Carefully, swish the top part of the impeller back and forth in clean soapy water for approximately 10 minutes. Then swish the top part of the impeller back and forth in clean soapy water. If soapy water is used as a cleaning agent it is advisable to wash out the soap solution thoroughly with distilled water.
- 2) After cleaning the probe, rub it dry with a clean, dry cloth.

8.9 How to use a pitot tube (optional)

The GEM5000 gas analyzer enables the site engineer to take gas measurements using a pitot tube. The pitot tube is used for gas extraction systems and the pressure readings are taken in mbar. Gas flow is calculated in the analyzer in m³/hr (metres cubed per hour).



Example of a pitot tube

Fitting a pitot tube to the analyzer:

- 1) It is important to seat the pitot tube into the monitoring point with the tip facing into the gas flow. The pitot tube should also be housed half way down the monitoring pipe. (Please refer to the anemometer instructions, which detail how to calculate the pipe diameter correctly).
- 2) Make sure that the sample tubing attached to the pitot tube fits correctly.
- 3) Attach the sample tube from the top connection of the pitot tube to the '**blue port**' (the differential port) on the analyser making sure that the gas port connector secure into place.
- 4) Attach the sample tube from the side of the pitot tube to the '**white port**' (inlet port/static pressure port) on the analyser making sure that the gas port connector secures into place.
- 5) House the pitot gland correctly onto the monitoring point.
- 6) When taking a gas reading and flow measurement follow the instruction as displayed on the front of the instrument.

✍ Note: Please refer to the following section for a diagram showing how to fit the tubing to the pitot tube.

8.10 How to use an H₂S filter (optional)

8.8.1 Cross gas effects on chemical cells

Measurements of CO are important in landfill management. The GEM5000 analyzer incorporates an improved CO measurement.

Measurements of CO can be affected by two other gases that can be found in landfill gas – hydrogen and hydrogen sulphide.

To reduce the effect of hydrogen, the GEM5000 analyzer uses a technique that is hydrogen compensated. Hydrogen compensation is achievable up to a level of around 2000ppm. Above this level the CO reading will not be compensated for.

In order to assist the operator the GEM5000 instrument also indicates the level of hydrogen present as low, medium or high. If a high hydrogen reading is present then the CO reading may be affected.

The effect of hydrogen sulphide is eliminated by the use of a H₂S filter.

CO measurement

The CO measurement is sensitive to hydrogen sulphide. The presence of hydrogen sulphide can cause the CO reading to elevate (not to be the true value due to the interfering gas). If the presence of hydrogen sulphide is suspected to be causing false CO readings, then it is recommended that the external hydrogen sulphide filter is used while obtaining the CO measurement.

The H₂S filter only needs to be used when you are trying to remove of any possible cross gas effects H₂S might have on other gas channels. Do not use the filter on all boreholes.

When using the H₂S filter you will need to increase the gas sample and clean air purge run-time, as using an H₂S filter decreases the response time of the analyzer.

✍ Note: There is an internal H₂S filter incorporated in the chemical cell that removes the H₂S; however this has a limited life span.

The electrochemical cells used to measure H₂S and CO do suffer from cross-gas effects. Such effects are not accurately specified. However, the following table may be useful as a guide; it represents how many ppm would be read by a cell if 100 ppm of the interfering gas were applied, with no other cross-contaminates being present in the sample.

GEM5000

		Interfering Gas				
		CO	H ₂ S	SO ₂	NO ₂	H ₂
Chemical Cell	CO (H ₂ compensated)	100	0 / ~300*	0	0	<1
	CO	100	<4 / ~300*	0	-20 to +5	<60
	H ₂ S	<4	100	20	<-25	<0.2

*after internal filter depleted.

✍ Note: Other gases could cause cross-gas effects. If you suspect a cross sensitivity problem please contact Technical Support (800) 968-2026 or email landtec_support@qedenv.com

8.9.2 Cross-gas effects on methane, carbon dioxide and oxygen

Methane is measured using dual beam infrared absorption. Analyzers are calibrated using certified methane mixtures and will give correct readings provided there are no other hydrocarbon gases present within the sample (e.g. ethane, propane, butane, etc.). If there are other hydrocarbons present, the methane reading will be elevated (never lower) than the actual methane concentration being monitored.

The extent to which the methane reading is affected depends upon the concentration of the methane in the sample and the concentration of the other hydrocarbons. The effect is totally non-linear and difficult to predict.

Note: The effect can be reduced by using an H₂S filter as it can reduce higher order hydrocarbons. When using the H₂S filter you will need to increase the gas sample and clean air purge run-time, as using an H₂S filter increases the response time of the analyzer.

Carbon dioxide is measured by infrared absorption at a wavelength specific to carbon dioxide. Therefore, the carbon dioxide reading will not be affected by any other gases usually found on landfill sites.

The oxygen sensor is a galvanic cell type and suffers virtually no influence from CO₂, CO, H₂S, NO₂, SO₂ or H₂, unlike many other types of oxygen cell.


The infrared sensors will not be 'poisoned' by other hydrocarbons and will revert to normal operation as soon as the gas sample has been 'purged'.

H₂S filter:



Instructions for use:

The following diagram shows how to modify the standard water trap and sample tubing to fit the H₂S filter.

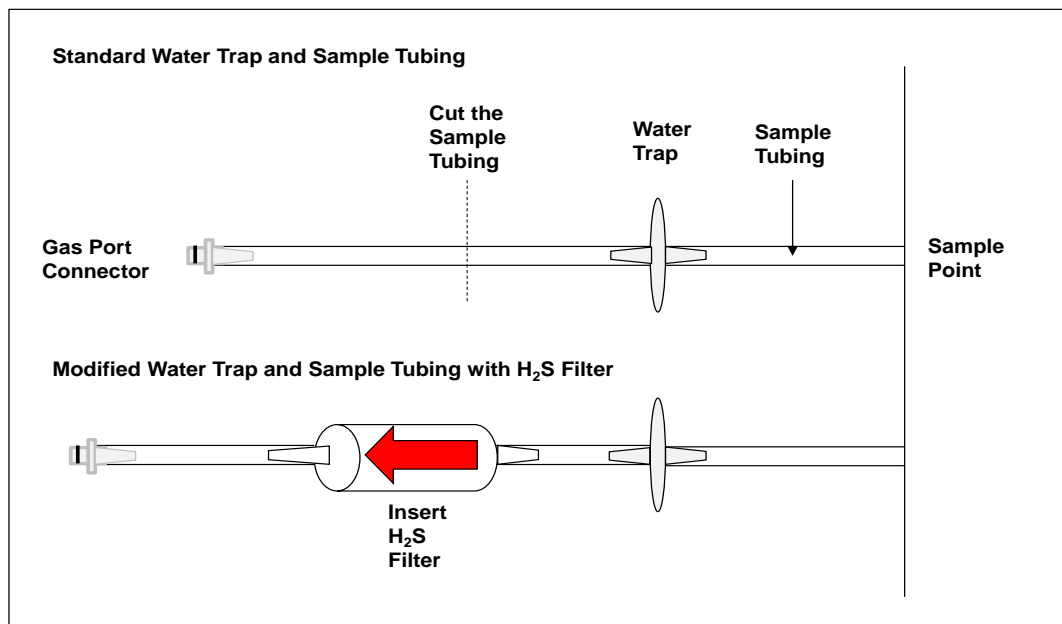


✍ Note: When onsite the site engineer must have an unmodified water trap assembly in addition to the modified water trap with a H₂S filter in order to take readings with and without a filter.

- 1) Once the H₂S filter is fitted follow the instructions as detailed on the front of the gas analyser displayed when taking readings using a H₂S filter.

✍ Note: This is only for analysers fitted with the CO compensated cell.

Fitting a pitot tube to a sample point when using an H₂S filter:

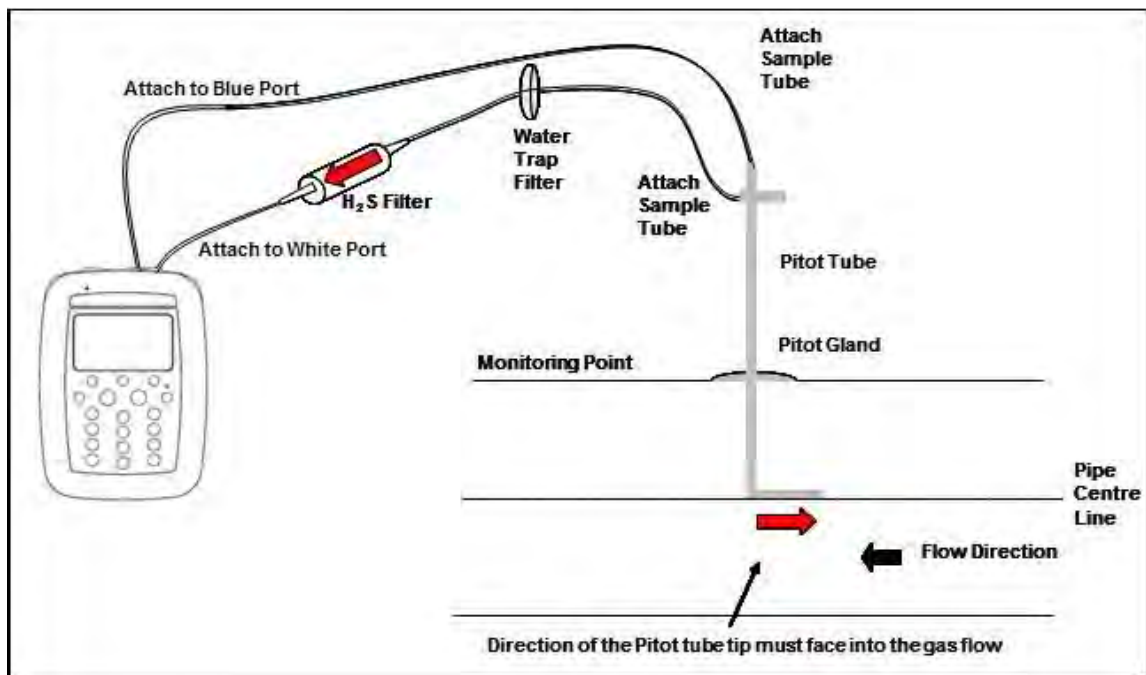

- 2) Make sure the water trap filter is fitted as close as possible to the pitot tube. This will help protect and trap moisture before it reaches the H₂S filter. Make sure that the water trap filter is clean and dry.
- 3) Attach the sample tubing into the analyzer.
- 4) To take flow readings using a pitot tube, please follow the instructions displayed on the front of the instrument. The user will be prompted to complete each step and should follow the instructions on screen.

✍ Note: It is important to fit the pitot tube central and parallel with the pipe.

8.11 How to use a temperature probe (optional)

The temperature probe enables the site engineer to measure the temperature of the gas within a sample point. The GEM5000 gas analyzer uses the temperature of the gas to give more accurate flow measurement readings as part of the instrument calculation.



Instructions for use:

- 1) The temperature probe reading is taken along with the gas measurement reading.
- 2) The analyzer **must be at the 'Main Gas Read Screen'**.
- 3) Attach the temperature probe to 'connector B' (refer to section 5.3 – Instrument connections points).
- 4) Insert the temperature probe into the sample point (borehole) at the same time as you attach the sample tube to the sample point (two sample points are required for the borehole).
- 5) Follow the instructions on the front of the instrument when taking your gas and measurement reading.
- 6) At the point in which the operator **presses 'Enter'** to store the gas reading the temperature is recorded.

✍ Note: Temperature probe readings can be analysed further when downloaded to LSGAM.

8.12 How to identify a borehole using the GPS feature (optional)

An optional GPS feature is available for the GEM5000 gas analyzer. It enables the site engineer to automatically locate borehole IDs using GPS satellite signal from predefined borehole IDs uploaded from LSGAM. The GPS reading data is stored for each measurement reading.

Note: Borehole IDs may be uploaded from LSGAM with or without location information. If location details are not uploaded the location longitude and latitude coordinates can be stored when the borehole is located and downloaded to LSGAM with the reading measurements.

Screen navigation:

- 1) Switch on the analyzer and wait for the self-test warm-up to complete and the analyser will display the 'Main Gas Read Screen'.
- 2) In order to use the navigation function if configured, you must switch 'Navigation - On' on the analyzer. Select the 'Menu' key followed by 'Key 5' to toggle navigation to on. Select the 'Menu' key to exit and return to the 'Main Gas Read Screen'.
- 3) Select the soft-key 'Next ID', then select a borehole ID from the list displayed and press the 'Enter' key to continue.

Warning	<p>Before entering the GPS Navigation Screen for the first time the following health and safety message will be displayed.</p> <p>"Please be aware of the terrain when using this screen. You are responsible for your own safety whilst walking on-site!"</p>
----------------	---

- 4) After reading the user warning message, select the soft-key 'Dismiss'. Use the tracking display to locate the borehole

Note: There is often a wait time frame of between 30 seconds to two minutes while getting a satellite signal. Be aware that heavy rain, trees overhead etc. will give a bad fix.

- 5) Once the operator selects a borehole ID the 'GPS Navigation' screen is displayed.




- 6) If required, select soft-key 'Options' to go to the 'Navigation Options' menu and the following screen is displayed:



Navigation options

- | | |
|-------------|---|
| Key 1 | Key 1 to toggle between 'Meters', 'Feet' or 'Yards' to define the unit of measurement. |
| Key 2 | Key 2 to toggle between 'Manual Scaling' and 'Automatic Scaling' to locate a sample point using a satellite signal. |
| Key 3 | Key 3 to display sample point information: |
| Bearing: | Direction. |
| UTC time: | 'Universal Time Code' received from the satellite and displays GMT. |
| Latitude: | Latitude displays as degrees, minutes, seconds and decimal seconds. The equator is 0. |
| Longitude: | E (East) or W (West) displays the longitude as degrees, minutes, seconds and decimal seconds. The Greenwich meridian defines the zero point. |
| Altitude: | Altitude displays in meters, feet or yards. |
| Satellite: | This is the number of satellites that the system can select. Four satellites will give reasonable position accuracy; eight or more satellites will increase accuracy. |
| Horizontal: | Estimate of horizontal error on the indicated position. The location is accurate to horizontal error 1.6m. |
| Vertical: | Estimate of vertical error on the indicated position. |
| HDOP: | 'Horizontal Dilution of Precision' which measures the accuracy of the indicated position. |

Changing the selected ID

It is possible to change the currently selected ID (identified by green icon ) by pressing the 2 and 8 and keys to move the cursor up and down the list of visible IDs. To change the selection press Enter. Notice that the selected ID moves to the top of the list and its icon turns green.

Changing the scale

You can change the display's scale by using the 4 and 6 keys to zoom in and out.

GPS signal strength:


This icon shows the signal strength the analyzer's GPS module is able to provide. Full, okay and fair strength respectively.



GPS failure - the GPS was unable to get a line of sight lock on enough satellites. Or, it may be that it hasn't had time to get a lock.

- 7) Select soft-key 'Continue' and the operator is returned to the 'Main Gas Read Screen'.

8.13 Taking gas and flow measurement

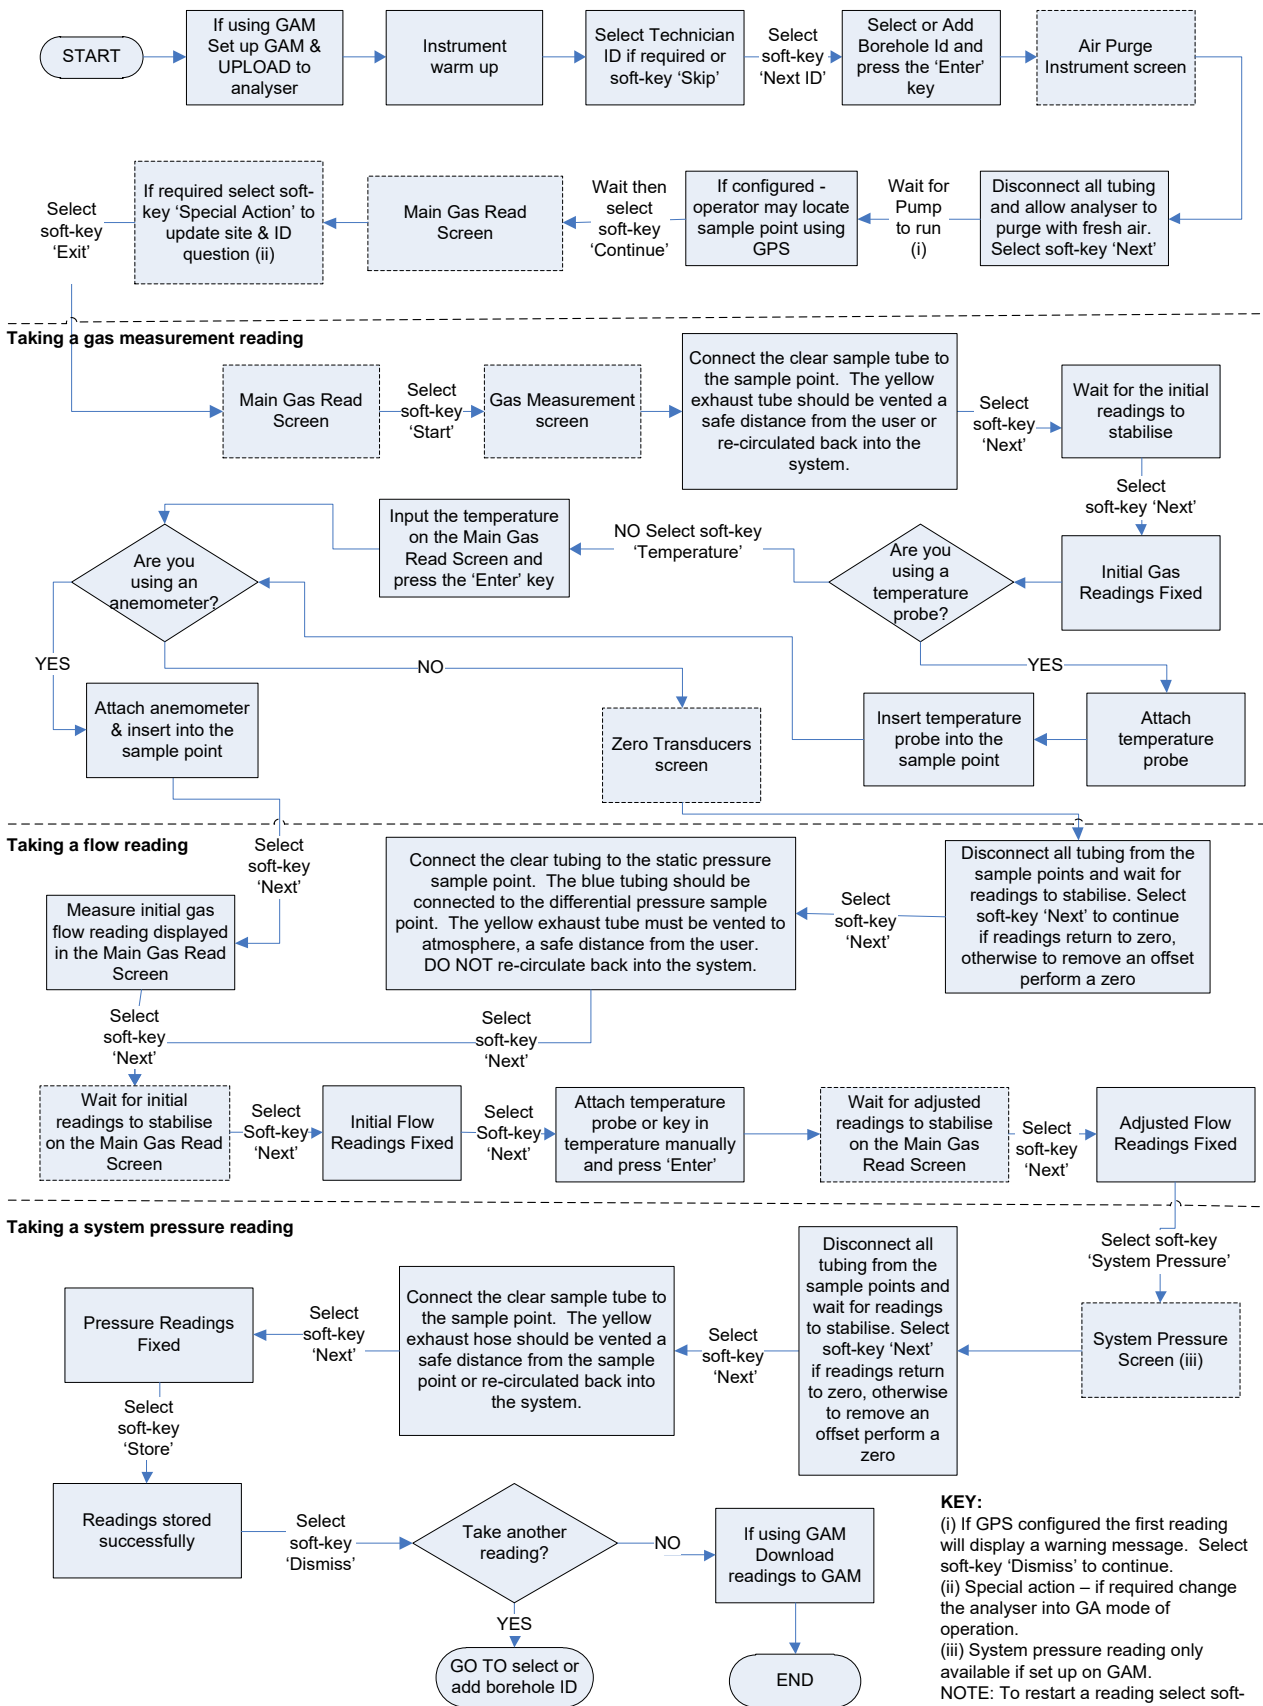

KEY:
 (i) If GPS configured the first reading will display a warning message. Select soft-key 'Dismiss' to continue.
 (ii) Special action – if required change the analyser into GA mode of operation.
 (iii) System pressure reading only available if set up on GAM.
 NOTE: To restart a reading select soft-key 'Special Action' followed by key 1 'Restart Process'.

9.0 Calibration

9.1 Calibration introduction

The GEM5000 gas analyzer is carefully calibrated at manufacture and when returned for service. However, it is sometimes desirable to be able to carry out a calibration process between services.

This section outlines the correct procedures to enable the site engineer to field calibrate the gas analyzer.

✂ Note: This does not replace the factory service and calibration. If this calibration is completed incorrectly it may decrease the accuracy of the gas analyzer.

CH₄, CO₂ and O₂ can be measured by GEM5000 gas analyzer as standard; these channels can be user calibrated. The analyzers have other gas channel options that are specified at manufacture; these too can be calibrated. This section will describe in detail how to calibrate the three standard gas channels plus the CO channel.

The GEM5000 instrument can have a H₂ compensated CO channel. This option requires that H₂ is used in the calibration process and is also set out within this section.

For the other gas channel options contact QED for advice.

Two important terms that are used within this section are 'Zero' and 'Span'.

Zero: The point at which the gas analyzer is calibrated when there is none of the target gases present.

Span: The point at which the gas analyzer is calibrated when a known quantity of the target gas is present.

9.2 Frequency of calibration – best practice

The GEM5000 gas analyzers can be checked against a known concentration of gas, to give confidence that the analyzer is operating as expected at the time and conditions in which it is being used.

It is recommended that the instrument is regularly serviced and calibrated by QED in accordance with the due date on the instrument.

When defining the frequency of user calibration, the following are factors to be considered:

- The frequency of use of the analyzer. (daily?/monthly?)
- The level of confidence and accuracy required for readings to be taken.
- Historical user calibration data.
- Site specific requirements or conditions.
- Historical understanding of expected readings on site.

Zeroing of the gas analyzer should be undertaken at the start of each day's monitoring.

Use historical data to drive your frequency of calibration.

If there is no historical data a good starting point for a daily monitoring round is performing a calibration once every week or every other week.

The results of the calibrations will need to be recorded to monitor over time whether the frequency of calibration needs to be increased or decreased relative to the confidence required.

The confidence required will be driven by the site specific / user requirements.

When undertaking the monitoring with an understanding of the history of the gas levels of that site, a calibration check could be triggered if the readings measured are different to what is expected.

✍ Note: For assistance please contact Technical Support at (800) 968-2026 or email landtec_support@qedenv.com

9.3 Calibration gases

User calibration of a gas analyzer will greatly improve the data accuracy in the range of the calibration gases used. This may cause less accurate readings of concentrations outside this calibrated range. Users should select the correct calibration gas for the expected gas levels on their particular application.

- To improve calibration at lower levels requires the use of gas mixtures 1 and 2.
- To improve higher levels use gas mixture 3.
- For standard CO only 100ppm CO gas is needed.
- For CO (H₂ compensated) both CO 100ppm and H₂ 1000ppm gases are needed.


The following table indicates the different gas mixture canisters used for calibration:

Calibration gas	CH ₄	CO ₂	O ₂
Mixture 1	5%	5%	6%
Mixture 2	5%	10%	0%
Mixture 3	60%	40%	0%


Calibration targets for gas cells are dependent on the gas/range and type of cell fitted. Contact Technical Support for assistance.

These are for general use but other gas concentrations can be used.

✍ Note: The above gases and most other gas concentrations can be supplied by QED. For further information please contact Sales at (800) 624-2026 or email info@qedenv.com

 Warning	Calibration gases can be dangerous. For each gas used the appropriate material safety data sheet must be read and understood before proceeding.
--	--

9.4 Calibration set-up

 Warning	Do NOT attach the gas supply to the gas analyzer before putting the analyzer into the 'Gas Check' screen. Select 'Check Spans' from the 'Operation Settings' menu.
--	--

The regulator supplied with the calibration kit has been configured to deliver a fixed flow.

As the regulator's flow is factory set, it only requires a few turns to open, no adjustment is necessary.

<p>⚠ Warning</p>	<p>Exhaust port</p> <p>When the gas analyzer is being calibrated, there are two possible exits for the gas, via the usual manner out of the exhaust (yellow) port of the analyzer or in cases of over-pressurisation the 1/16" port on the red pressure relief valve located on the regulator.</p> <p>It is recommended that both ports have exhaust tubing attached.</p> <p>The exhaust tubing must emerge in a well-ventilated area. Ensure there are no leaks in the tubing and connections.</p> <p>The calibration of the gas analyzer should be carried out in a safe area with all necessary precautions taken when using potentially dangerous, explosive or toxic gases.</p>
-------------------------	---

⚠ Note: There is also potential for gas to expel from the internal flow (blue) port of the gas analyzer (applies to the GA5000 only).

9.5 Calibration equipment


The diagram below displays the regulator and tubing equipment for user calibration:



- Certified calibration gas, available in either 29 liter, 34 liter or 58 liter gas canisters are supplied with the Landtec calibration kit. Please refer to the Landtec website www.landtecnica.com for further information.
- The regulator supplied with the calibration kit is pre-set for flow and pressure rates that are factory set.
- If you are using a non Landtec supplied regulator, please ensure that it does not supply any greater than 200 mbar pressure.

9.6 Gas analyzer

For the GEM5000 gas analyzer the calibration options can be found by selecting the 'Menu' key followed by soft-key 'Operation Settings'. Select 'Key 2 – Gas Check' then follow the instructions on the analyzer screen by selecting 'Key 2 – Gas Check'.

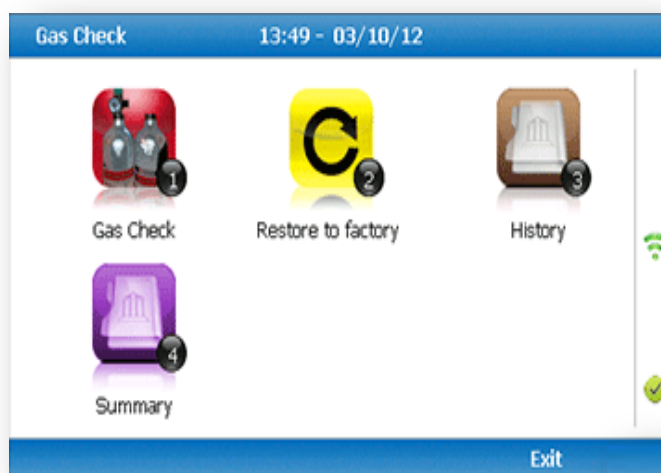


9.7 Calibration processes – best practice

The following process diagrams outline the calibration steps.




- Ensure that you are regulating calibration gas down to below 200 mbar pressure, if **you're not using a** Landtec regulator. The use of a pressure relief valve is also highly recommended.
- When calibrating, it is recommended to use a calibration mixture close to the levels you are trying to measure, i.e. if you are trying to measure gas migration on a closed landfill, we'd recommend calibrating with CH4 5%/CO2 5%.
- In regards to frequency, we would recommend that you perform a fresh air calibration before each monitoring session, and a span calibration typical every 4 – 6 weeks.

9.7.1 Gas Check in fresh air

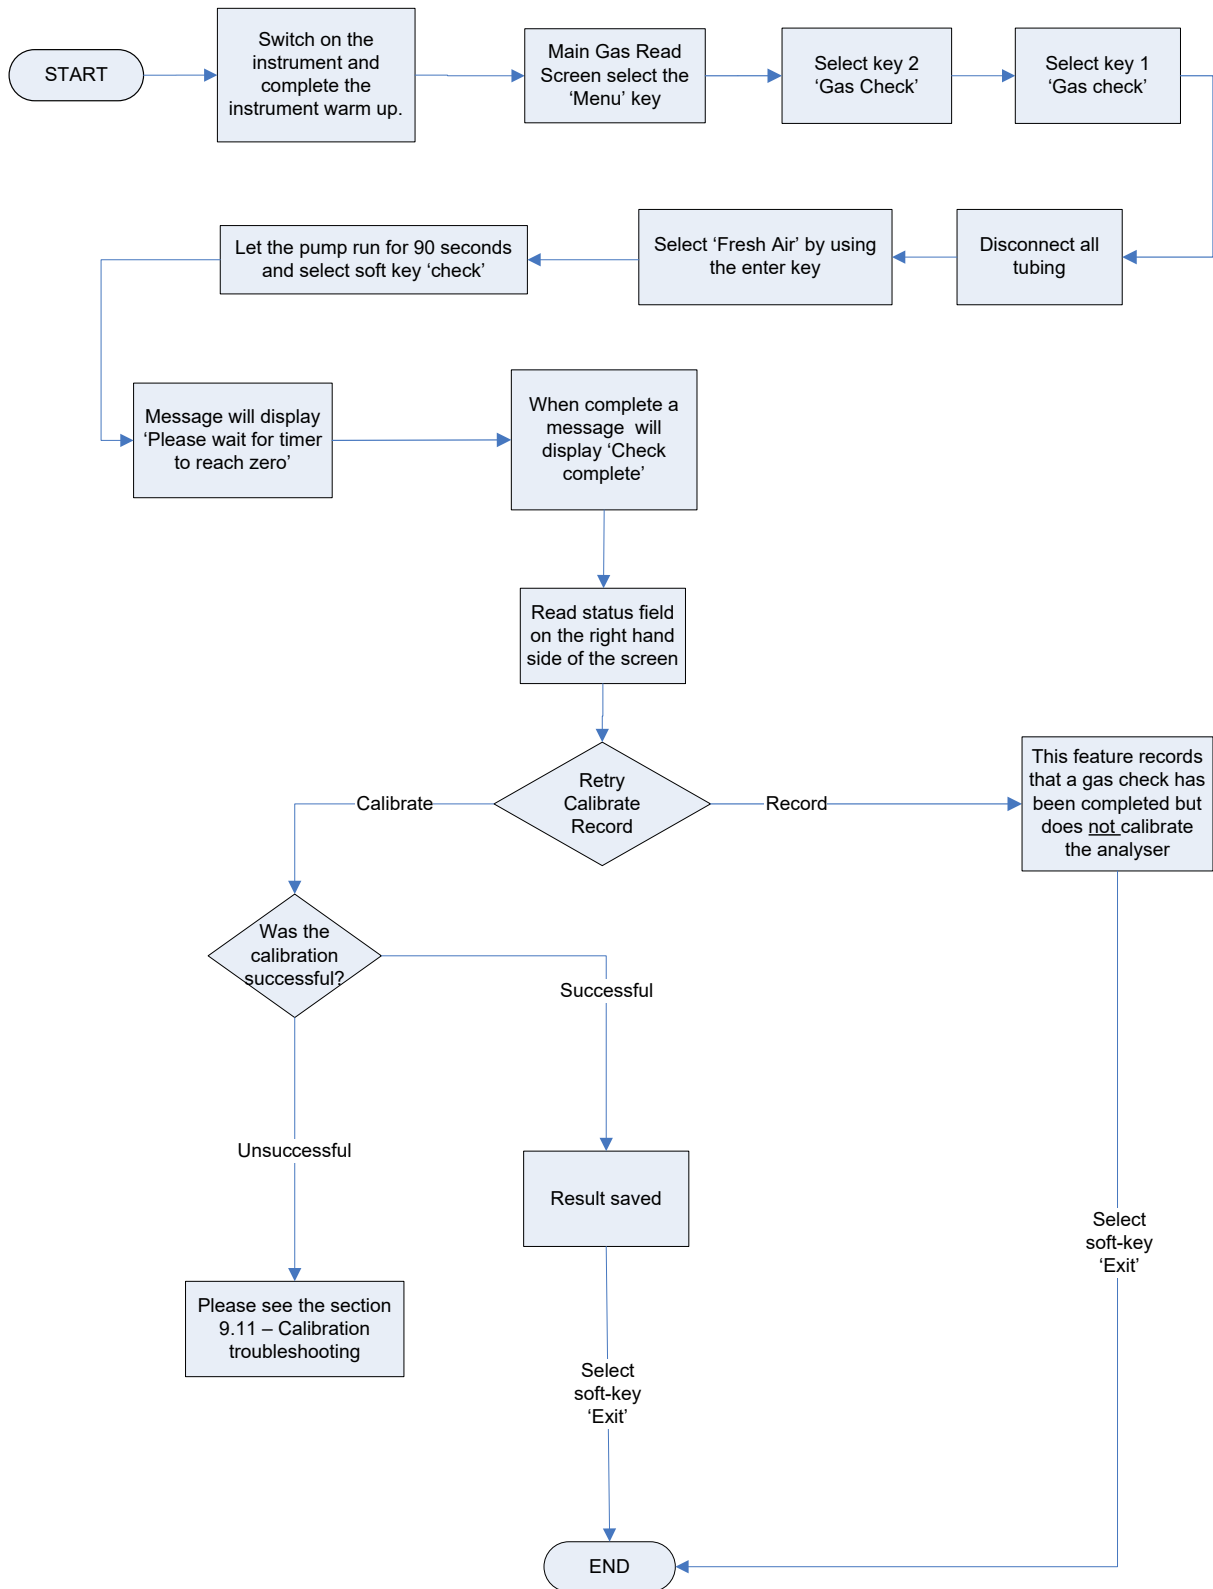

9.7.2 Calibration – mixtures 1, 2, & 3

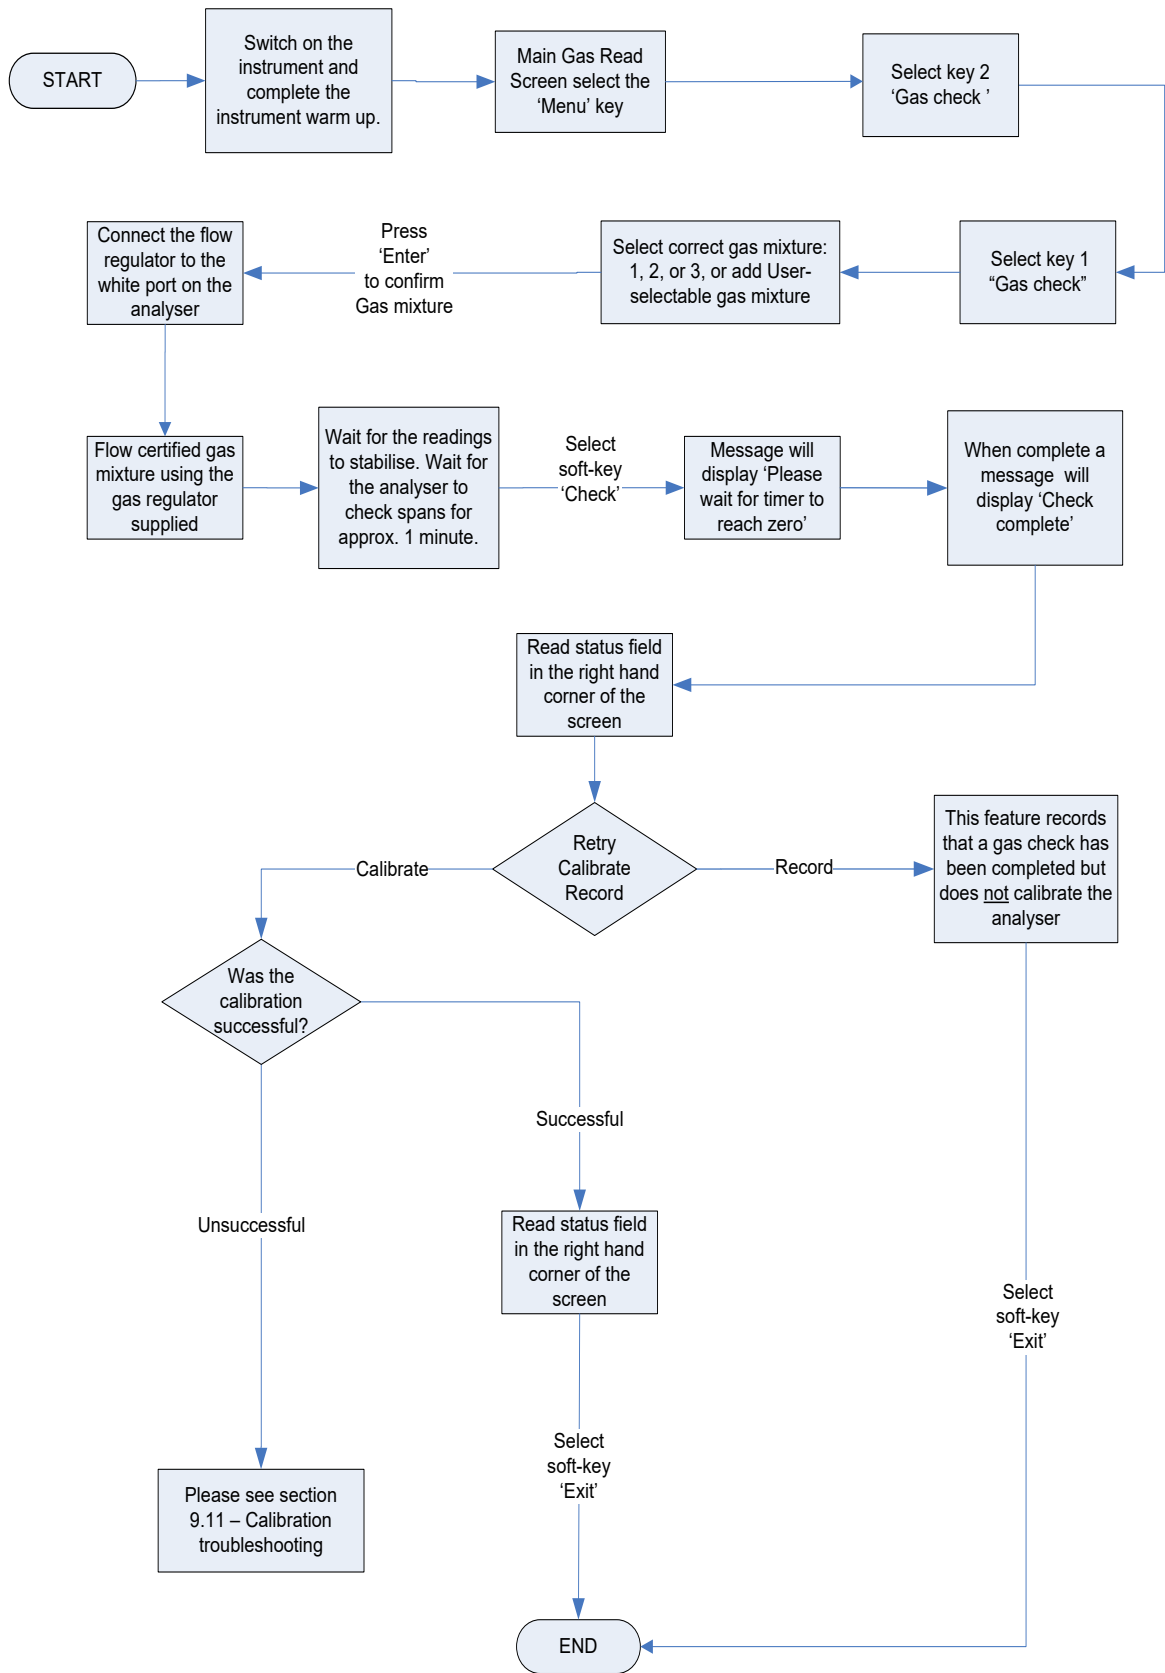

9.8 Restore to factory settings



This option will reset the gas analyzer to all of its factory programmed calibration settings and will clear ALL the user defined calibration points. **It will not affect or remove ID's or readings from the analyzer.**

- 1) Select 'Key 2 - Restore to factory' followed by the soft-key 'Confirm' or 'Cancel'.
- 2) A validation message is displayed 'Reset user calibration?' Press the soft-key 'Confirm' to continue with the factory settings or soft-key 'Cancel' to cancel the operation and return to the Gas Check menu.

9.9 Calibration history

The GEM5000 gas analyzer logs user calibrations in 'History' application. This can be used as an aid to ensuring that gas measurements are valid and accurate. Both good and failed calibration results are recorded for each channel calibrated.

- 1) Select 'Key 3 - History'.
- 2) The operator may view the calibration data stored. Use the soft-key 'Filter' to add a sort filter to the history enquiry.

9.10 Calibration summary

The GEM5000 gas analyzer has the facility to log the history of user calibrations.

- 1) Select 'Key 4 - Summary'.
- 2) The operator may view the calibration data history stored by ID, technician, timestamp, type and calibration result. Use the soft-key 'Exit' to exit and return to the 'Gas Check' menu.

10.0 Problem Solving

This section outlines various warning and error messages which the operator may receive during general operation of the instrument. For further assistance please contact Technical Support at (800) 968-2026 or email landtec_support@qedenv.com

11.0 Warning and error display

When switched on, the instrument will perform a pre-determined self-test sequence taking **approximately 15 seconds**. During this time many of the instrument's working parameters and settings are checked.

If any operational parameters are out of specification or the pre-programmed recommended calibration/service date has passed, errors or warnings may be displayed.

Use the 'Scroll up' and 'Scroll down' keys to move through the list if required.

Only three warnings/errors can be displayed at any time.

To ascertain if more errors have occurred use 'Key 8' – Scroll down' and 'Key 2' - Scroll up' through the list.

Warnings displayed:

All warnings displayed will be prefixed by the word WARNING followed by a relevant description.

There are two types of warning that may be displayed:


1. **General warnings that may not affect the instrument's function and those where the self-test has detected a function that is outside the usual programmed operating criteria**, e.g. battery charge low, memory nearly full.
2. Operational parameters that could affect the performance of the analyzer: Cell out of calibration, CH₄ out of calibration, CO₂ out of calibration.

The most likely reason for the errors is either an incorrect user calibration or sensor failure. If an incorrect user calibration has caused the warning it should be correctable by way of returning the instrument to factory settings, zeroing or carrying out a user calibration as necessary for the relevant function.

12.0 Service

The GEM5000 gas analyzer should be regularly serviced to ensure correct and accurate operation. QED recommends a service and recalibration every **12 months**.

The GEM5000 range is ATEX certified for use in potentially explosive areas. As such it should be serviced only by qualified engineers. Failure to observe this will result in the warranty becoming invalid and could invalidate the ATEX certification.

 Warning	<p>If the GEM5000 is serviced by unqualified engineers the ATEX certification may be invalidated and the instrument may be unsafe for use in a potentially explosive atmosphere.</p>
--	--

User serviceable parts:

There are no user serviceable parts inside the instrument.

The following parts can be user serviced:

In-line water filter	This should be regularly inspected for obstructions, moisture or damage and changed if needed. The instrument should never be operated without the in-line water filter as this may result in water entering the instrument.
Sample tubing	Always ensure that sample tubes are not contaminated or damaged.
Gas port connectors	Periodically check that the O-rings on the gas port connectors are not damaged. A damaged O-ring can let air into the sample gas and result in incorrect readings. If the O-ring is damaged the complete gas port connector should be replaced.
H ₂ S filter material	When the filter material changes color to a <i>light gray</i> color the filter should be replaced.

13.0 Warranty policy

This instrument is guaranteed, to the original end user purchaser, against defect in materials and workmanship for a period of **3 years** from the date of the shipment to the user.

During this period QED will repair or replace defective parts on an exchange basis.

The decision to repair or replace will be determined by QED.

To maintain this warranty, the purchaser must perform maintenance and calibration as prescribed in the operating manual.

Normal wear and tear, and parts damaged by abuse, misuse, negligence or accidents are specifically excluded from the warranty.


✍ Note: Please contact Technical Support at (800) 968-2026 or email landtec_support@qedenv.com for further information.

14.0 Glossary of terms

5000 series	The 5000 series refers to the GA5000, GEM5000 and the Biogas5000 gas analyzers.
Accu-Flo	A flow device used to aid accurate flow measurement.
Analyzer error messages	<p>Operational errors are prefixed on the analyzer by the word ERROR followed by an error code.</p> <p>Refer to the list of standard error codes for more information.</p>
Analyzer warning	<p>Analyzer warnings are prefixed by the word WARNING followed by a relevant description. There are two types of warning messages displayed; general warnings that may not necessarily affect the instrument's function (for example, battery power low) and operational parameters that could affect the performance of the analyser (for example, CH₄ out of calibration).</p>
Anemometer probe	Device for measuring velocity of gas in the pipe. The GEM5000 analyzer can be set to convert into a flow. See also flow measurement.
ATEX certification	The GEM5000 is ATEX certified to zone 1 & 2 areas above ground not in mines.
Auxiliary channel	This refers to the channels where external devices will be connected or displayed.
Backlight	The analyser has a built-in backlight for low ambient light conditions. This can be toggled on/off using the backlight key.
Barometric pressure	The atmospheric pressure at the given location.
Borehole	Typical location from which a gas sample is obtained.
Calibration	The gas analyzer is carefully calibrated against known standards.
Calibration record	The GEM5000 instrument has the facility to log user calibrations as a validation tool.
CH₄	Methane
Chemical cells	A method of gas detection that works on the basis of a chemical reaction with the target gas.
Clean air purge	Process used to clear out gas from the sample tube and analyser prior to taking a new reading.

CO	Carbon monoxide
CO₂	Carbon dioxide
Data logging	Data logging enables the operator to leave the analyzer unattended to take samples at predetermined intervals for a set period of time
Download	Terminology used for the movement of data from the analyzer to the LSGAM application on the PC.
Dual beam infrared absorption	Method of gas detection by measuring how much infrared is absorbed by the target gas.
Event log	<p>Used as an aid to monitoring the use of the analyser. It can also be used as a diagnostic tool.</p> <p>The event log can be viewed via LSGAM. It <u>cannot</u> be viewed on the analyzer screen.</p>
Exhaust port	The usual manner for the gas to exit the analyzer is via the exhaust port located on the top side of the analyzer. This port should have an exhaust tube attached.
Exhaust tube	Clear plastic tubing used to expel gases from the exhaust port.
Factory settings	Default settings preset at time of manufacture or service.
Firmware	Firmware is the term by which the internal analyzer software is known and is not accessible by the client. This firmware is updated to the latest version when the analyzer is returned for servicing.
Flow measurement	Flow can be measured by either gas velocity m/s or volume flow rate m ³ /hr. This measurement of flow relates to the use of the anemometer and not the internal flow measurement technique.
Flow port	For the measurement of gas flow at the sample point.
Landtec Systems Gas Analyser Manager	<p>Also referred to as LSGAM. PC based software which enables the operator to upload and download information to/from the analyser.</p> <p>LSGAM enables operators to maximise the operation of their gas analyzer. It features a simple upload and download facility and is fully compatible with the latest Microsoft™ operating systems.</p> <p>This is optional.</p>

Gas channels	The gases that are analyzed by the instrument.
Gas velocity	The positional rate of change of the gas. Measured using the optional anemometer.
General warnings	Displayed throughout the documentation with a warning symbol. Warning information may affect the safety of operators.
H₂	Hydrogen
H₂S	Hydrogen sulphide
H₂S filter	Filter required for removal of H ₂ S. When the filter material changes color to a light gray color or if H ₂ S values are displayed, then the filter should be replaced.
Hydro-carbons	Organic compound consisting of only hydrogen and carbon.
In-line water filter	The component used to help protect the instrument from water ingress.
LCD display	Liquid Crystal Display
LEL	Lower Explosive Limit. Lower explosive limit of methane in air. 5% methane in air is the point at which it becomes explosive. 100% LEL equates to 5% methane.
m/s	Meters per second – measurement of gas velocity.
m³/hr	Meters cubed per hour – volumetric flow rate measurement.
Main Gas Read Screen	The main analyzer screen for normal operations and all operations are carried out from this screen.
Material data sheet	Document from which information about a certain substance can be obtained.
MCERTS certification	MCERTS is the UK Environment Agency's Monitoring Certification Scheme. The scheme provides a framework within which environmental measurements can be made in accordance with the Agency's quality requirements. The scheme covers a range of monitoring, sampling and inspection activities.
Memory	Location where data and ID information is stored. The analyzer memory should not be used as a permanent storage medium. Stored data should be regularly transferred using the LSGAM download software.

NO₂	Nitrogen dioxide
Operating language	The operator can choose the default operating language for the analyzer. Choices are English, German, Spanish, French and Italian.
PPM	Parts per million
Pump	Used to draw the gas sample from the sample point to the analyzer. Select the pump key  on the analyzer to activate.
ID	The user definable identification tag allocated to a sample point.
Relative pressure	The pressure at the sample point 'relative' to atmospheric (barometric) pressure.
Relative pressure transducer	The internal component used to measure the relative pressure.
Residual N₂	The calculation for the residual N ₂ used on the latest version of the GEM5000 platform is as follows: $\text{Residual N}_2 = \text{Balance} - (\text{O}_2\% \times 3.76)$ Where, Balance = 100% - (CH ₄ % + CO ₂ % + O ₂ %) and 3.76 is the ratio of O ₂ to N ₂ in ambient air (79/21)
Sample tube	The tube used to obtain a sample of gas from the sample point to the analyzer.
Span	The point at which the gas analyzer is calibrated when a known quantity of the target gas is present.
Span multi gas	Term by which the span calibration of the three main gas channels is known. This option must only be used when the calibration gas being used is a combination of CH ₄ CO ₂ O ₂ .
Technician ID	An alpha-numeric code tagged to each gas reading. Facility only available via LSGAM. This is an optional feature.
Temperature probe	External device used to measure the gas temperature at the sample point. This is optional.
Update site data	Enables the operator to answer pre-defined questions relating to the site, environment etc. These questions are defined via LSGAM software.

Upload	Terminology used for the movement of data from the PC via LSGAM software application to the analyzer.
Volume flow rate	The volume of a gas that passes through a given surface per unit of time e.g. m ³ /hr
Warm-up self-test	Pre-determined self-test sequence to test the analyser functions which takes place after the analyzer is switched on.
Warranty	The instrument is under guarantee against defect in materials and workmanship for a period of 3 years from the date of shipment to the operator and is subject to the recommended service and recalibration requirements.
Water trap	Device used to protect the instrument from water or moisture ingress.
Zero	The point at which the gas analyzer is calibrated when there is none of the target gas present.
Zero transducers	This option allows the relative pressure transducer to be zeroed.



Soil Gas

Vapor Intrusion

Property Redevelopment

Ambient Air Monitoring

Indoor Air Quality

Waste-to-Energy



eurofins

Air Toxics

Guide to Air Sampling

Canisters and Bags



www.AirToxics.com

Always Air. Always Accurate.

Eurofins Air Toxics, Inc.
Guide to Whole Air Sampling – Canisters and Bags

Revision 6/27/14

Contents

Section 1.0 Introduction	1
1.1 Whole Air Sampling of VOCs	1
1.2 Choosing Between Canisters and Bags	1
Section 2.0 Canisters and Associated Media	2
2.1 Introduction to Canisters	2
2.2 Associated Canister Hardware	3
Section 3.0 Sampling with Canisters.....	5
3.1 Grab Sampling Using Canisters	5
3.2 Integrated Sampling with Canisters and Flow Controllers	6
3.3 Soil Gas Sample Collection.....	9
Section 4.0 Sampling with Bags	14
4.1 Introduction to Bags.....	14
4.2 Air Bag Sampling.....	15
Section 5.0 Special Sampling Considerations	17
5.1 Special Sampling Configurations.....	17
5.2 Considerations for Sampling at Altitude	18
5.3 Considerations for Soil/Landfill Gas Sampling	18
5.4 Considerations for Sample Cylinder Sampling	19

Section 1.0 Introduction

Eurofins Air Toxics Inc. presents this guide as a resource for individuals engaged in air sampling. Air sampling can be more involved than water or soil sampling due to the reactivity of chemical compounds in the gas matrix and sample interaction with the equipment and media used. Ensuring that air samples are collected properly is an important step in acquiring meaningful analytical results. This guide is not a substitute for experience and cannot sufficiently address the multitude of field conditions. Note that this guide is intended for projects involving whole air sampling of volatile organic compounds (VOCs) in canisters and Tedlar® bags. Eurofins Air Toxics provides the “Guide to Sorbent-Based Sampling - Volatiles and Semi-Volatiles” for other types of sampling.

1.1 Whole Air Sampling of VOCs

There are three general ways to collect compounds in a gas phase sample. A sampler may collect the gas sample in a container, actively pump the vapor through a sorbent tube, solution or filter, or rely on passive sample collection onto a sorbent bed. This guide focuses on collecting a sample in the most common air sampling containers, Summa canisters and bags. The sample may be collected in the container either passively, relying on an evacuated canister to drive the sample collection, or actively using a pump to fill the container. The container is subsequently sealed and transported to the laboratory for analysis. The sample is referred to as a “whole air sample” and the compounds remain in the gas matrix inside the container.

As a general rule, whole air sampling is appropriate when target compounds are chemically stable and have vapor pressures greater than 0.1 torr at 25°C and 760mm Hg (EPA standard ambient conditions). Performance of a given compound in a whole air sample is dependent upon its chemical properties, the matrix of the sample, and the degree of inertness of the sample container.

1.2 Choosing Between Canisters and Bags

Table 1.2 compares the features and performance of Summa canisters and bags. Summa canisters or similarly treated canisters are rugged containers designed to provide superior inertness and extended sample storage times. Evacuated canisters also do not require a sampling pump for sample collection. By contrast, bags require a sample pump, but can be purchased inexpensively in bulk, require little preparation or cleaning, and take up little space prior to use. Unlike canisters, bags are typically not appropriate for ppbv-level VOC measurements due to their background artifacts and short hold-times. Over time, low molecular weight gases can diffuse through the bag material while chemicals with lower vapor pressures can condense on the bag surface thereby compromising analyte recoveries. Call your Project Manager at 800-985-5955 if you have questions regarding the appropriate sampling media.

Table 1.2 Comparison of Canisters to Bags

	Canisters	Bags
Type of Sampling	Passive (vacuum)	Active (pump required)
Media Hold Time	Up to 30 days recommended	Indefinite
Hold Time to Analysis	Up to 30 days	Up to 3 days
Surface Inertness	Excellent	Fair
Cleanliness	Batch or 100% certified to ppbv/pptv levels	Some VOCs present in the ppbv range
Sampling Application	Ambient air, soil/landfill gas	Soil/landfill gas, stationary sources, SVE systems
Rule of Thumb	“ppbv device”	“ppmv device”
Advantages	Inertness, hold time, ruggedness, no pump	Purchase/shipping cost, availability, convenience

Section 2.0 Canisters and Associated Media

This section provides a description of air sampling canisters, practical considerations for sampling, and step-by-step instructions for collecting grab and integrated samples. Photographs illustrate the correct way to assemble the various sampling components. Tables provide detailed information on many operational factors that ultimately influence the quality of the data obtained from a canister sample.

2.1 Introduction to Canisters

An air sampling canister is a container for collecting a whole air sample. A canister may be spherical or cylindrical and is constructed of specially treated stainless steel. The canister is prepared for sampling by evacuating the contents to a vacuum of approximately 29.9 inches of Mercury (in Hg). Opening the stainless steel bellows valve allows the air sample to enter the canister. Flow controllers can be utilized to restrict the flow and allow for collection at a desired flow rate or over a desired range. When the sample has been collected, the valve is closed and the canister is returned to the laboratory. Canisters range in volume from less than 1 liter (L) to 6 L. In general, 6 L canisters are used to collect ambient air samples and samples requiring time integration greater than 2 hours. One liter canisters are typically used for taking high concentration (i.e., greater than 5 ppbv) samples not requiring time integration such as soil vapor.



2.1.1 Summa Canister

A Summa canister is a stainless steel container that has had the internal surfaces specially passivated using a “Summa” process. This process combines an electropolishing step with a chemical deactivation step to produce a surface that is nearly chemically inert. A Summa surface has the appearance of a mirror: bright, shiny and smooth. The degree of chemical inertness of a whole air sample container is crucial to minimizing reactions with the sample

and maximizing recovery of target compounds from the container. Eurofins Air Toxics maintains a large inventory of Summa canisters in 1 and 6 L volumes.

2.1.2 Canister Certification

Eurofins Air Toxics provides two types of canister cleaning certification, batch and 100%, depending upon the requirements of the project. The batch certification process is most appropriate for routine ambient air applications and high concentration applications such as soil vapor and landfill gas monitoring. The batch certification process begins by cleaning a set of canisters using a combination of dilution, heat and high vacuum. The cleaning batch is certified by analyzing a percentage of canisters for approximately 60 VOCs using GC/MS. The batch meets cleaning requirements if the target compound concentrations are below 0.2 ppbv. Alternatively, the 100% certification (i.e., individual certification) process is typically required for ambient and indoor air applications driven by risk assessment or litigation requiring pptv (parts per trillion by volume) sensitivity. If 100% certification is required, canisters are individually certified for a client-specific list of target compounds using GC/MS. When the 100% certified canisters are shipped, the analytical documentation demonstrating that they are free of the target compounds down to the project reporting limits is emailed to the client. When sampling with certified media, it is important to note that all media is certified as a train and must be sampled as such (i.e., a particular flow controller goes with a particular canister and is labeled as such).



Specify whether your project requires batch or 100% canister certification.

2.1.3 Canister Hold Time

Media Hold Time: Unlike water and soil environmental samples, which are collected in single-use, disposable vials and jars, air samples are collected in reusable summa canisters. Eurofins Air Toxics requires that canisters be returned within 15 days of receipt to effectively manage our inventory and to insure canisters meet performance requirements in the field. Evacuated canisters have a finite timeframe before the canisters naturally lose

vacuum during storage. Using canisters beyond 15 days increases the risk of having unacceptable initial vacuum at the start of sampling.

Sample Hold Time: EPA Method TO-15 cites a sample hold time of up to 30 days for most VOCs. Several non-routine compounds, such as bis(chloromethyl)ether, degrade quickly and demonstrate low recovery even after 7 days. Reactive sulfur compounds such as hydrogen disulfide and methyl, ethyl, and butyl mercaptan are not amenable to storage in stainless steel summa canister, and either fused silica lined (FSL) canisters or Tedlar bags are required for sample collection.

2.2 Associated Canister Hardware

Associated hardware used with the canister includes the valve, brass cap, particulate filter and vacuum gauge. (Flow controllers are covered in detail in section 3.2.)

2.2.1 Valve

An industry standard 1/4" stainless steel bellows valve is mounted at the top of the canister. The valve maintains the vacuum in the canister prior to sampling and seals the canister once the sample has been collected. No more than a half turn by hand is required to open the valve. Do not over-tighten the valve after sampling or it may become damaged. A damaged valve can leak, possibly compromising the sample. Some canisters have a metal cage near the top to protect the valve.

To protect the valve and provide secure connections in the field, a replaceable fitting is attached to all canisters. As threads wear and require replacement, new fittings can be installed at the laboratory prior to shipping to the field. You will need a 1/2" wrench to secure the fitting while connecting or removing the required equipment to the canister.

2.2.2 Brass Cap

Each canister comes with a brass cap (i.e., Swagelok 1/4" plug) secured to the inlet of the valve assembly. The cap serves two purposes. First, it ensures that there is no loss of vacuum due to a leaky valve or a valve that is accidentally opened during handling. Second, it prevents dust and other particulate matter from damaging the valve. The cap is removed prior to sampling and replaced following sample collection.



Always replace the brass cap following canister sampling.

2.2.3 Particulate Filter

Particulate filters should always be used when sampling with a canister. Separate filters are provided to clients taking a grab sample, and filters are built into the flow controllers for clients taking integrated samples. The 2 micron filter is a fritted stainless steel disk that has been pressed into a conventional Swagelok adapter. This device has a relatively high pressure drop across the fritted disk and restricts the flow into the canister even when sampling without a flow controller. Table 2.2.3 lists the typical fill time for a grab sample using a 2 micron particulate filter.



Table 2.2.3 Grab Sample Fill Times for Canisters

CANISTER VOLUME	2 micron filter
6 L	<5 minutes
1 L	<1 minute

2.2.4 Fittings

All fittings on the sampling hardware are 1/4" Swagelok, and a 9/16" wrench is used to assemble the hardware. A 1/2" wrench is also required to tighten fittings onto a union connector. Compression fittings should be used for all connections. Never use tube-in-tube connections. It is critical to avoid leaks in the sampling train. Leaks of ambient air through fittings between pieces of the sampling train will dilute the sample and cause the canister to fill at a faster rate than desired. Eurofins Air Toxics can provide the necessary fittings and ferrules if requested.

2.2.5 Vacuum Gauge

A vacuum gauge is used to measure the initial vacuum of the canister before sampling, and the final vacuum upon completion. A gauge can also be used to monitor the fill rate of the canister when collecting an integrated sample. Eurofins Air Toxics provides 2 types of gauges. For grab sampling, a test gauge checks initial and final vacuums only and is not to be sampled through. For integrated sampling a gauge is built into the flow controller and may be used for monitoring initial and final vacuums, as well as monitoring the fill rate of the canister. Both gauges are considered to be rough gauges, intended to obtain a relative measure of vacuum change. Accuracy of these field gauges are generally on the order of +/- 5 in Hg. Individuals with work plans that outline specific gauge reading requirements are strongly encouraged to purchase and maintain their own gauges in the field. In special cases, a laboratory-grade, NIST-traceable vacuum gauge can be provided upon request.



The vacuum gauges that are routinely provided are intended as a rough gauge measurement device (+/-5 in Hg accuracy).

Section 3.0 Sampling with Canisters

There are two basic modes of canister sampling: grab and integrated. A grab sample is taken over a short interval (i.e., 1-5 minutes) to provide a point-in-time sample concentration, while an integrated sample is taken over a specified duration or utilizing a specified flow rate. In both modes the canister vacuum is used to draw the sample into the canister. This is commonly referred to as passive canister sampling. Sections 3.1 and 3.2 detail procedures for grab and integrated sampling, and section 3.3 provides procedures specific to soil vapor collection.

Regardless of the type of canister samples collected, the following rules apply:

- DO NOT use canister to collect explosive substances, radiological or biological agents, corrosives, extremely toxic substances or other hazardous materials. It is illegal to ship such substances and you will be liable for damages.
- ALWAYS use a filter when sampling. NEVER allow liquids (including water) or corrosive vapors to enter canister.
- DO NOT attach labels to the surface of the canister or write on the canister; you will be liable for cleaning charges.
- DO NOT over tighten the valve, and remember to replace the brass cap.
- IF the canister is returned in unsatisfactory condition, you will be liable for damages.
- DO NOT make modifications to the equipment connections and/or use Teflon tape unless approved by the laboratory.
- AND, if you have any questions or need any support, our experienced project management team is just a phone call away at 800-985-5955.



Use a 9/16" and 1/2" wrench to tighten Swagelok connections on the canister sampling train.

3.1 Grab Sampling Using Canisters

The most common hardware configuration used to take a grab sample is to simply attach a particulate filter to the canister inlet. A particulate filter is shown in section 2.2.3 and is used to prevent particulate matter from fouling the valve and entering the canister.



3.1.1 Step-By-Step Procedures for Canister Grab Sampling

These procedures are for a typical ambient air sampling application; actual field conditions and procedures may vary.

Before you get to the field:

1. Verify contents of the shipped package (e.g., chain-of-custody, canister, particulate filter, and gauge – if requested).
 2. Make sure you include a 9/16" and 1/2" wrench in your field tool kit.
 3. Verify the gauge is working properly.
 4. Verify the initial vacuum of canister as described in the following section:
- **Verify Initial Vacuum of the Canister:** Prior to shipment, each canister is checked for mechanical integrity. However, it is still important to check the vacuum of the canister prior to use. Eurofins Air Toxics recommends doing this before going to the field if possible. The initial vacuum of the canister should be greater than 25 in Hg. If the canister vacuum is less than 25 in Hg, ambient air may have leaked into the canister during storage or transport and the sample may be compromised. Contact your Project Manager if you have any questions on whether to proceed with sample collection. If

sampling at altitude, there are special considerations for gauge readings and sampling (see Section 5.2). The procedure to verify the initial vacuum of a canister is simple but unforgiving.

1. Confirm that valve is closed (knob should already be tightened clockwise).
2. Remove the brass cap.
3. Attach gauge.
4. Attach brass cap to side of gauge tee fitting to ensure a closed train.
5. Open and close valve quickly (a few seconds).
6. Read vacuum on the gauge.
7. Record gauge reading on “Initial Vacuum” column of chain-of-custody.
8. Verify that canister valve is closed and remove gauge.
9. Replace the brass cap.



When ready to sample:

1. Confirm that valve is closed (knob should already be tightened clockwise).
2. Remove brass cap.
3. Attach particulate filter to canister.
4. Open valve 1/2 turn (6 L canister normally takes less than 5 minutes to fill).
5. Close valve by hand tightening knob clockwise.
6. Verify and record final vacuum of canister (repeat steps used to verify initial vacuum). For grab samples, the ending vacuum is typically close to ambient pressure (0 in Hg).
7. Replace brass cap.
8. Fill out canister sample tag (make sure the sample ID and date of collection recorded on the sample tag matches what is recorded on the COC exactly).
9. Return canister in box provided.
10. Return sample media in packaging provided.

11. Fill out chain-of-custody and relinquish samples properly (it is important to note the canister serial numbers on the chain-of-custody).
12. Place chain-of-custody in box and retain pink copy.
13. Tape box shut and affix custody seal (if applicable) across flap.
14. Ship accordingly to meet method holding times.



Return all equipment used or unused to the laboratory. Unreturned canisters and associated hardware will result in additional charges as outlined in the media agreement.

3.2 Integrated Sampling with Canisters and Flow Controllers

As an alternative to an “instantaneous” grab sample, an air sample collected at a controlled rate is referred to as an integrated sample. Flow controllers or flow restrictors are devices which provide sample collection at a desired flow rate and/or sampling interval. By using a flow controller at a specified flow rate, air samples can provide information on average compound concentrations over a defined period. For example, an 8- or 10-hour integrated sample can be used to determine indoor air quality in the workplace. Similarly, a 24-hour integrated sample may be collected to determine residential exposure to indoor or outdoor air sources. In addition to using a flow controller for time-integrated sample collection, a flow controller may be required for soil gas collection to restrict the vacuum applied to the soil and pore water and to collect a representative sample with minimal intrusion of ambient air.

Eurofins Air Toxics provides two general types of flow controllers: mass flow controllers and critical orifice devices. Both devices are driven by differential pressure between ambient conditions and vacuum in the canister.

3.2.1 Mass Flow Controller

A mass flow controller employs a diaphragm that actively compensates to maintain a constant mass flow rate over the desired time period. As the differential pressure decreases, the flow rate decreases and the diaphragm responds by opening up to allow more air to pass through to maintain a stable flow rate. Mass flow controllers are calibrated in the laboratory to provide flow rates suitable for durations up to 24 hours. Durations greater than 24 hours are possible, however, performance of the flow controller is less reliable due to the low flow rates required.



3.2.2 Critical Orifice Devices

Eurofins Air Toxics has two types of critical orifice controllers – “capillary column” and “frit pressed”. Both types restrict the flow rate and the canister fill rate decreases as the canister fills to ambient pressure. These controllers are suitable for applications not requiring constant flow rate over the sampling period such as soil vapor collection or at sites in which temporal variability of VOCs is not expected. Critical orifice devices can cover intervals from 0.5 to 12 hours and flow rate from 10 to 250



ml/min. The “capillary column” device (also known as the Blue Body Flow Controller) restricts air flow by forcing the sample to enter a capillary column of minute radius. The flow rate is a function of the length of inert capillary column. The frit pressed device has a critical orifice machined to meet a set flow rate.



3.2.3 Sampling Interval and Flow Controller Setting

When you request canisters and flow controllers from Eurofins Air Toxics, you will be asked for the flow rate (soil vapor) or sampling interval (ambient air), and the flow controllers will be pre-set prior to shipment. The flow rate is set at standard atmospheric conditions (approximately sea level and 25°C). If samples will be collected at elevation or at ambient temperatures significantly different than 25°C, the canister will fill faster or slower depending on sample conditions. If you specify unusual sample conditions at the time of project set-up, we can set the flow controller accordingly. (See Section 5.2 for a discussion of collecting a sample at elevation.) Mass flow controllers should not be utilized for source or process samples in which the collection point is under vacuum or pressure. Please discuss these specific non-standard field conditions with your Project Manager at the time of project set-up.

Table 3.2.3 Flow Rates for Selected Sampling Intervals (mL/min)

Sampling Interval (hrs)	4 min.	0.5	1	2	4	8	12	24
6 L Canister	NA	167	83.3	41.7	20.8	11.5	7.6	3.8
1 L Canister	167	26.6	13.3	6.7	-	-	-	-

Note: Target fill volumes for 6 L and 1 L canisters are 5,000 mL and 800 mL, respectively.

3.2.4 Final Canister Vacuum and Flow Controller Performance

For time-integrated sample collection using a mass flow controller, the final vacuum of a canister should ideally be approximately 5 in Hg or greater. The flow rate will remain constant as the canister fills and will start to decrease as the canister vacuum approaches

5 in Hg. At this point, the differential pressure between the canister and ambient air is not sufficient to maintain the set flow rate. Because of normal fluctuations in the flow rate due to changes in field temperature and pressure, the final vacuum typically ranges between 3 and 10 in Hg.

- **If the residual canister vacuum is greater than 10 in Hg** (i.e., more vacuum), the actual flow rate is lower than the set point and less sample volume is collected. When the canister is pressurized prior to analysis, the pressurization dilution will be greater than normal. This will result in elevated reporting limits.
- **If the residual canister vacuum is near ambient pressure** for a time-integrated sample, the canister filled faster than calibrated. Once the vacuum decreases below 5 in Hg, the flow rate begins to decrease from its set point. This scenario indicates that the sample is weighted toward the first portion of the sampling interval. The sampler cannot be certain the desired sampling interval was achieved before the canister arrived at ambient conditions. Although the actual sampling interval is uncertain, the canister still contains a sample from the site.

Table 3.2.4 Relationship between Final Canister Vacuum, Volume Sampled, and Dilution Factor (6 L Canister)

Final Vacuum (in Hg)	0	2.5	5	7.5	10	12.5	15	17.5	20
Volume Sampled (L)	6	5.5	5.4	5	4	3.5	3	2.5	2
Dilution Factor*	1.34	1.46	1.61	1.79	2.01	2.30	2.68	3.22	4.02

*Canister pressurized to 5 psig for analysis

$$\text{Final Reporting Limit} = \text{Method Reporting Limit} \times \text{Dilution Factor (Canister Pressurization)} \times \text{Dilution Factor (Sample Analysis)}$$

$$\text{Dilution Factor (Canister Pressurization)} = \frac{\text{Final Pressure}}{\text{Receipt Pressure}} = \frac{14.7 \text{ psig} + \text{Final Pressure (psig)}}{14.7 \text{ psig}} \left[\frac{1 - \text{Receipt Vacuum (in Hg)}}{29.9 \text{ in Hg}} \right]$$

3.2.5 Considerations for Integrated Sampling with Canisters

Collecting an integrated air sample is more involved than collecting a grab sample. Sampling considerations include verifying that the sampling train is properly configured, monitoring the integrated sampling progress, and avoiding contamination.

- **Avoid Leaks in the Sampling Train:** A leak in any one of these connections means that some air will be pulled in through the leak and not through the flow controller. (Follow the leak check step #4 in 3.2.6).
- **Verify Initial Vacuum of Canister:** See Section 3.1.1 for instructions on verifying initial canister vacuum. A separate gauge is not necessary as both the mass flow controllers and critical orifice flow controllers have built-in rough gauges.
- **Monitor Integrated Sampling Progress:** When feasible, it is a good practice to monitor the progress of the integrated sampling during the sampling interval. The volume of air sampled is a linear function of the canister vacuum. For example, when using a 24-hour mass flow controller, at a quarter of the way (6 hours) into a 24-hour sampling interval, the canister should be a quarter filled (1.25 L) and the gauge should read approximately 6 in Hg lower than



the starting vacuum (~22 in Hg). More vacuum indicates that the canister is filling too slowly; less vacuum means the canister is filling too quickly. If the canister is filling too slowly, a valid sample can still be collected (see Section 3.2.4). If the canister is filling too quickly because of a leak or incorrect flow controller setting, corrective action can be taken. Ensuring all connections are tight may eliminate a leak. It is possible to take an intermittent sample; the time interval need not be continuous.

- **Avoid Contamination:** Flow controllers should be cleaned between uses. This is done by returning them to the laboratory.
- **Caution When Sampling in Extreme Temperatures:** Field temperatures can affect the performance of the mass flow controllers. Laboratory studies have shown that flow rates can increase slightly with decreasing temperatures. A flow rate increase of approximately 10% is expected when sampling at field temperatures of 5 to 10°C.

3.2.6 Step-by-Step Procedures for Integrated Sampling

These procedures are for a typical ambient air sampling application; actual field conditions and procedures may vary.

Before you get to the field:

1. Verify contents of the shipped package (e.g., chain-of-custody, canister, and flow controller)
2. Make sure you include a 9/16" and 1/2" wrench in your field tool kit.
3. Verify the gauge is working properly
4. Verify the initial vacuum of canister (section 3.1.1)

When ready to sample:

1. Confirm that valve is closed (knob should already be tightened clockwise).
2. Remove brass cap from canister.

3. Attach flow controller to canister. The flow controller is securely attached if the flow controller body does not rotate.
4. Place the brass cap at the end of the flow controller creating an air tight train, and quickly open and close the canister valve in order to check for leaks. If the needle on the gauge drops, your train is not airtight. In this case, try refitting your connections and/or tightening them until the needle holds steady.
5. Once the sample train is airtight remove the brass cap from the flow controller and open the canister valve a ½ turn.
6. Monitor integrated sampling progress periodically.
7. Verify and record final vacuum of canister (simply read built-in gauge).
8. When sampling is complete, close valve by hand tightening knob clockwise.
9. Detach flow controller and replace brass cap on canister.
10. Fill out canister sample tag (make sure the sample ID and date of collection recorded on the sample tag matches what is recorded on the COC exactly).
11. Return canisters and associated media in boxes provided. **Failure to return all of the provided equipment will result in a replacement charge as outlined in the media agreement.**
12. Fill out chain-of-custody and relinquish samples properly (it is important to note the canister serial numbers on the chain-of-custody).
13. Place chain-of-custody in box and retain pink copy.
14. Tape box shut and affix custody seal at each opening (if applicable).
15. Ship accordingly to meet method holding times.

3.3 Soil Gas Sample Collection

Canisters can be used for the collection of soil vapor by attaching the sampling train to the soil gas probe. Typically, a critical orifice flow controller is used to minimize the applied vacuum in order to minimize partitioning of VOCs from the soil or pore water to the soil vapor. Additionally, lower flow rates help to minimize the intrusion of ambient air into the soil vapor probe. In general, time-integration is not required for soil gas samples; however, there may be exceptions to this rule of thumb. For example, some regulatory guidance documents recommend concurrent indoor air and sub-slab soil vapor collection over a

24-hour period. This means that a mass flow controller calibrated for a 24-hour sample would be required for the sub-slab as well as the indoor air sample.

3.3.1 Canister to probe connection – Tubing

Collection of a soil gas sample requires the use of tubing to connect the soil gas probe to the sample train. Teflon FEP tubing is recommended based on its low background and its inertness. Alternative tubing can be used if shown to meet data quality objectives. Please note that Low Density Polyethylene or flexible Tygon tubing is not recommended due to VOC adsorption during sample collection. Teflon tubing is provided by the laboratory upon request at the time of order. A charge based on the length will be assessed. It is important to store the tubing away from VOC sources during storage and transport to the site to minimize contamination.

3.3.2 Canister to probe connection –Fittings

To connect the tubing to the canister sampling train, a Swagelok fitting and a pink ferrule are used. The position of the ferrule is key to ensure the fitting is securely connected to the canister. See the figure below for the correct positioning and connection. The pink ferrule is flexible and cannot be over-tightened.



3.3.3 Leak Check Compounds Considerations

To determine whether ambient air is introduced into soil gas sample, a leak check may be used. Leak check compounds may be liquid or gaseous tracers. Liquid compounds are challenging to use effectively in the field and can be introduced into the sample due to improper handling in the field, erroneously indicating a leak in the sampling train. Liquid tracers such as isopropanol should never be directly applied to connections in the sampling train. Rather, the liquid is carefully applied to a cloth and placed near the connection or on the ground next to the probe. Great care must be used in the field to insure the liquid tracer is not handled during sampling train assembly or disassembly. Even a trace amount of a liquid tracer on a glove used to replace a canister brass cap can contaminate the sample. Liquid leak check compounds can interfere with the analytical runs, and even small leaks may result in analytical dilution and raised reporting limits when measuring ppbv target compound levels.

Gaseous tracers such as helium are typically used with shroud placed over the sampling equipment and/or borehole. To quantify the leak, the concentration of the tracer gas in the shroud should be measured.



Specify the leak check compound planned for your soil gas sampling event and record on the COC.

3.3.4 Step-by-Step Procedures for Soil Vapor Sampling

These procedures are for a typical soil vapor sampling application; actual field conditions and procedures may vary. Please consult your specific regulatory guidance for details.

Before you get to the field:

1. Verify contents of the shipped package (e.g., chain-of-custody, canister, tubing, fittings, and flow controller).
2. Make sure you include a 9/16" and 1/2" wrench in your field tool kit.
3. Verify the gauge is working properly.
4. Verify the initial vacuum of canister.

Prior to vapor collection:

- **Purge tubing adequately.** A long length of tubing has significant volume of "dead air" inside. Without purging, this air will enter the canister and dilute the sample. Consider using a handheld PID/FID to confirm that you have purged the tubing and are drawing sample air through the tubing. A standard rule of thumb is to utilize 3 purge volumes prior to sample collection. However, under certain circumstances, purge volumes of 1 to 10 may be appropriate. Please review your regulatory guidance and your site specific conditions in determining the appropriate purge volumes.
- **Don't sample water.** If moisture is visible in the sample tubing, the soil gas sample may be compromised. Soil gas probes should be at an appropriate depth to avoid reaching the water table. Additionally, subsurface vapor should not be collected immediately after measurable precipitation.

When ready to sample:

1. Confirm that valve is closed (knob should already be tightened clockwise).
2. Remove brass cap from canister.
3. Attach flow controller to canister if needed. The flow controller is securely attached if the flow controller body does not rotate. (Note: The frit-press flow controller and 1 L canister may be pre-assembled by the laboratory.)
4. Place the brass cap at the end of the flow controller creating an air tight train, and quickly open and close the canister valve in order to check for leaks. If the needle on the

gauge drops, your train is not airtight. In this case, try refitting your connections and/or tightening them until the needle holds steady.


5. Once the sample train is airtight remove the brass cap from the flow controller and attach the probe tubing to the flow controller using the pink ferrule and Swagelok nut. (See 3.3.2 for proper positioning of the ferrule.)
6. Once the probe line has been purged and appropriate leak check measures have been implemented, open the canister valve a ½ turn.
7. Verify and record final vacuum of canister (simply read built-in gauge).
8. When canister fills to the desired end vacuum, close valve by hand tightening knob clockwise.

Please note: Some projects require residual vacuum of approximately 5 in Hg at the end of sample collection even if time-integrated samples are not required. The residual vacuum serves to provide a check of the integrity of the canister during transport to the laboratory to insure no leaks occurred during shipment. A field vacuum reading similar to the lab receipt vacuum reading demonstrated that no leak occurred.

9. Detach tubing and flow controller and replace brass cap on the canister.
10. Fill out canister sample tag (make sure the sample ID and date of collection recorded on the sample tag matches what is recorded on the COC exactly).
11. Return canisters and associated media in boxes provided. **Failure to return all of the provided equipment will result in a replacement charge as outlined in the media agreement.**
12. Fill out chain-of-custody and relinquish samples properly (it is important to note the canister serial numbers on the chain-of-custody).
13. Place chain-of-custody in box and retain pink copy
14. Tape box shut and affix custody seal at each opening (if applicable)
15. Ship accordingly to meet method holding times

3.4.4 Collecting Soil Gas Samples with Sampling Manifolds

If required, Eurofins Air Toxics can provide a sampling manifold to assist with leak checking the sampling train, purging the sampling line, and monitoring the vacuum applied to the soil gas bore hole during sample collection. The manifold is shown below:

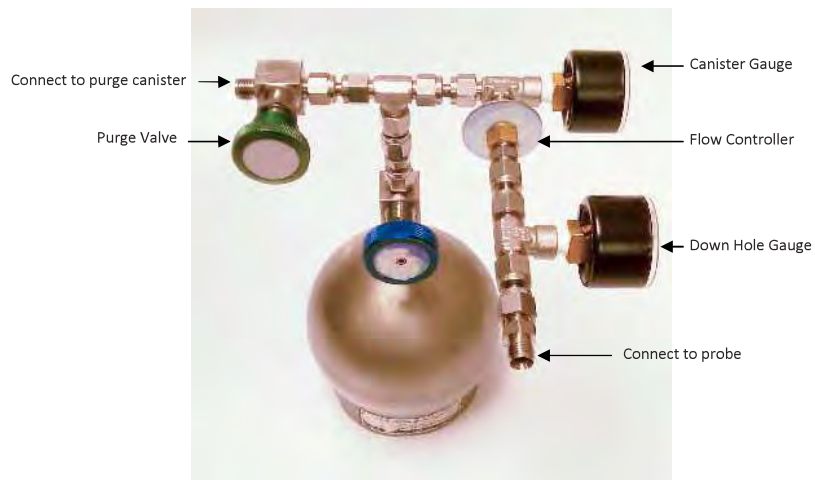

The ‘Down Hole Gauge’, located prior to the flow restrictor, is a vacuum gauge that monitors the vacuum applied to the soil gas probe. Because this is not a flow meter but a measure of pressure/vacuum, the gauge should read at zero if there is sufficient flow from the soil. If the gauge begins to read a vacuum, then the flow is being restricted. Low flow, high vacuum conditions can be encountered when sampling in low permeability soil. The ‘Canister Gauge’, in line after the flow controller and prior to the purge canister, is a vacuum gauge that indicates to the sampler whether or not the canister is filling properly at the expected rate. This setup enables the sampler to evaluate the lithologic conditions at the site and determine if a valid soil gas sample is being taken. Finally, when duplicate

samples are required, the manifold can be used as a duplicate sampling “T” by simply replacing the purge canister with another sample canister.

There are several options to use as a purge vacuum source to attach to the purge valve connection – a Summa canister, sampling pump or sampling syringe. The below instructions assume a Summa canister will be used as a purge volume source since other sources are generally provided by the client.

When ready to sample:

Leak Check Test

1. Confirm that canister valves are closed (knob should already be tightened clockwise).
2. Remove brass caps from both the sample canister and the purge canister. (Unless using certified media, there is no difference between the two).
3. Attach manifold center fitting to sample canister.
4. Attach purge canister to the Purge Valve end of the manifold by attaching provided Teflon tubing and compression fittings.
5. Confirm that there is a brass cap secured at the inlet of the manifold creating an air tight train, make sure the manifold valve above the purge canister is open, and quickly open and close the purge canister valve in order to check for leaks. If the needle on the gauge drops, your train is not airtight. In this case, try refitting your connections and/or tightening them until the needle holds steady.

Purging

6. Once the sample train is airtight remove the brass cap from the manifold inlet, connect the tubing from the sample port using a compression fitting and open the purge canister valve, 1/2 turn.
7. Monitor integrated sampling progress periodically. *Please note, because the purge canister is inline after the flow restrictor the line will not purge faster than at a rate of 167 ml/min.

8. Once the desired purge volume is met close both the manifold valve and the purge canister valve by hand tightening the knobs clockwise.
9. If sampling at multiple locations, the purge canister can be disconnected from the manifold and used to begin purging the next sample location without compromising the sample train.

Sampling

10. The line is now ready to be sampled. Open the sample canister valve and monitor sampling progress periodically.
11. When the sampling is complete close the valve and replace the brass cap on the canister; record final vacuum of canister (simply read built-in gauge).
12. Fill out canister sample tag (make sure the sample ID and date of collection recorded on the sample tag matches what is recorded on the COC exactly).
13. Return canisters in boxes provided and all parts of the soil gas manifold. **Unreturned media will result in a replacement charged assessed as described in the media agreement.**
14. Fill out chain-of-custody and relinquish samples properly (it is important to note the canister serial numbers on the chain-of-custody).
15. Place chain-of-custody in box and retain pink copy.
16. Ship accordingly to meet method holding times.

Section 4.0 Sampling with Bags

This section provides a description of the types of air sampling bags, selecting the right bag for your application, practical considerations for sampling, and step-by-step instructions for collecting a grab sample. Photographs illustrate the correct way to assemble the various sampling components.

4.1 Introduction to Bags

Air sampling bags are containers used to collect whole air samples for landfill gas, soil gas and stationary source applications. Bags can be constructed from various materials which can differ in terms of stability characteristics and cleanliness. In general, air sampling bags are best suited for projects involving analysis of compounds in the ppmv range. They can be used to collect sulfur compounds, but only if the fittings are non-metallic (e.g., polypropylene, Teflon[®], or Nylon).

Air sampling bags are equipped with a valve that allows for filling. Sample collection requires a pressurized sampling port, a low flow rate pump or a lung sampler. The bag expands as the vapor sample is pulled in. When the target volume of the sample is collected, the valve is closed and the bag is returned to the laboratory. Bag materials should be selected based on the specific application. Common air sampling bags include Tedlar film and FlexFoil. Eurofins Air Toxics maintains a limited inventory of air sampling bags in 1 L, 3 L and 5 L volumes.

4.1.1 Tedlar[®] Film

Tedlar[®] is a trade name for a polyvinyl fluoride film developed by DuPont Corporation in the 1960's. This patented fluoropolymer has been used in a wide variety of applications including protective surfacing for signs, exterior wall panels and aircraft interiors. Tedlar[®] film is tough yet flexible and retains its impressive mechanical properties over a wide range

of temperatures (from well below freezing to over 200°F). Tedlar[®] exhibits low permeability to gases, good chemical inertness, good weathering resistance and low off-gassing.

Tedlar[®] bags may be used to collect samples containing common solvents, hydrocarbons, chlorinated solvents, sulfur compounds, atmospheric and biogenic gases and many other classes of compounds. Compounds with low vapor pressures such as Naphthalene are not appropriate for Tedlar bags as recovery is very low even under short sample storage times. Low molecular compounds such as Helium and Hydrogen can diffuse through the Tedlar bag material resulting in poor storage stability.



4.1.2 Tedlar[®] Bag Suppliers and Re-use

Compounds commonly detected from analyzing new Tedlar[®] bags include methylene chloride, toluene, acetone, ethanol, 2-propanol, phenol, and dimethylacetamide. While levels of these common artifacts are typically in the ppbv range, the cleanliness of bags can vary significantly between vendors, and purchasing bags directly from an unknown vendor should be avoided. Once the Tedlar[®] bag is used for sample collection, the surface has been exposed to moisture and possible VOCs. It may irreversibly adsorb many VOCs at the low ppbv level. A series of purges with certified gas may not remove the VOCs from the surface. Consider your data quality objectives to determine whether re-using Tedlar[®] bags is appropriate.

4.1.3 Hold Time for a Tedlar[®] Bag

The media hold time for a Tedlar[®] bag is indefinite if stored out of sunlight in a cool, dry location.

The sample hold time to analysis varies by method and compound. See Table 4.1.3 for recommended sample storage times for commonly requested parameters.

Table 4.1.3 Recommended Maximum Sample Storage Times for Tedlar® Bags

Analytical Method	Chemical Class	Storage Time
ASTM D5504	Suite of sulfur compounds including Reactive Sulfur compounds (Hydrogen sulfide, Methyl mercaptan)	24 hours
ASTM D1946 ASTM D1945	Atmospheric and natural gases: CO, CO ₂ , CH ₄ , C ₂ -C ₅ hydrocarbons (He and H ₂ not recommended)	Up to 3 days
Modified TO-14A, TO-15, TO-3, TO-12	Volatile Organic Compounds (VOCs)	Up to 3 days

4.1.4 FlexFoil Bags

FlexFoil bags are made from an opaque and flexible material with 4-ply construction resulting in high physical strength to minimize rupture and leakage and low permeability to provide good stability for low molecular weight compounds. FlexFoil bags are ideal for target compounds such as Hydrogen and Helium and can be used for the suite of atmospheric and natural gas components. While the reactive sulfur compounds, Hydrogen Sulfide and Methyl Mercaptan, show good stability over 24 hours in FlexFoil bags, other sulfur compounds demonstrate low recovery. Table 4.1.4 summarizes the compounds and the hold times amenable to FlexFoil bags.

Table 4.1.4 Recommended Maximum Sample Storage Times for FlexFoil Bags

Analytical Method	Chemical Class	Storage Time
ASTM D5504	Hydrogen sulfide, Methyl mercaptan only Not recommended for full sulfur list.	24 hours
ASTM D1946 ASTM D1945	Atmospheric and natural gases Full List	Up to 3 days

4.2 Air Bag Sampling

Using a bag to collect an air sample normally involves “active” sampling, unlike an evacuated canister that can be filled “passively” by simply opening the valve. There are two methods commonly used to fill a bag: a pump or a lung sampler.

- Sampling with a Pump:** The most common method for filling a bag is to use a small pump with low flow rates (50-200 mL/min) and tubing to fill the bag. Eurofins Air Toxics, Inc. does not provide pumps but pumps may be rented from equipment providers or purchased from manufacturers such as SKC or Gilian.
- Sampling with a Lung Sampler:** A “lung sampler” may be used to fill a bag. Although a little more complicated than simply using a pump, the main advantage to using a lung sampler to fill a bag is that it avoids potential pump contamination.



A bag with attached tubing is placed in a small airtight chamber (even a 5-gallon bucket can work) with the tubing protruding from the chamber. The sealed chamber is then evacuated via a pump, causing the bag to expand and draw the sample into the bag through the protruding tube. The sample air never touches the wetted surfaces of the pump. Eurofins Air Toxics does not provide lung samplers, but they can be rented from equipment suppliers or purchased by manufacturers such as SKC Inc.

4.2.1 Considerations for Bag Sampling

Some considerations for collecting a bag sample:

- **Fill the bag no more than 2/3 full:** Allow for possible expansion due to an increase in temperature or decrease in atmospheric pressure (e.g., the cargo hold of a plane)
- **Keep the Tedlar® bag out of sunlight:** Tedlar® film is transparent to ultraviolet light (although opaque versions are available) and the sample should be kept out of sunlight to avoid any photochemical reactions
- **Protect the bag:** Store and ship the bag samples in a protective box at room temperature. An ice chest may be used, but **DO NOT CHILL**
- **Fill out the bag label:** It is much easier to write the sample information on the label before the bag is inflated. Make sure to use a ball-point pen, never a Sharpee or other marker which can emit VOCs.
- **Provide a “back-up” bag:** Consider filling two bags per location in the rare occasion that a defective bag deflates before analysis. The “hold” sample does not need to be documented on the Chain-of-Custody and should have an identical sample ID to the original sample indicating that it is the “hold” sample
- **Avoid Contamination:** Care should be taken to avoid contamination introduced by the pump or tubing. Begin sampling at locations with the lowest compound concentrations (e.g., sample the SVE effluent before the influent). Decontaminate the pump between uses by purging with certified air for an extended period; better yet, use a lung sampler. Use the shortest length possible of Teflon® tubing or other inert tubing. **DO NOT REUSE TUBING.** If long lengths of tubing are used, consider purging the tubing with several

volumes worth before sampling. If you are concerned about sampling for trace compounds, you shouldn't be using a Tedlar® bag (see Section 1.2)

- **Don't Sample Dangerous Compounds in a Bag:** Do not ship any explosive substances, radiological or biological agents, corrosives or extremely hazardous materials to Eurofins Air Toxics. Bag rupture during transit to the laboratory is possible and the sampler assumes full liability.

4.2.2 Step-by-Step Procedures for Bag Sampling (Pump)

Note: These procedures are for a typical stationary source (e.g., SVE system) sampling application; actual field conditions and procedures may vary.

Before you get to the field:

1. Verify contents of the shipped package (e.g., chain-of-custody, bag, and tubing/fittings – if requested).
2. Verify pump cleanliness and operation (Eurofins Air Toxics does not provide pumps).

When ready to sample:

3. Purge sample port.
4. Attach new Teflon® tubing from sample port or probe to low flow rate pump.
5. Purge tubing.
6. Fill out bag sample tag.
7. Attach additional new Teflon® tubing from the pump outlet to the bag valve.
8. Open bag valve.
9. Collect sample (FILL NO MORE THAN 2/3 FULL).
10. Close bag valve by hand tightening valve clockwise.
11. Return filled bags in a rigid shipping container (DO NOT CHILL).
12. Fill out chain-of-custody and relinquish samples properly.
13. Place chain-of-custody in box and retain pink copy.

14. Tape box shut and affix custody seal (if applicable) across flap.
15. Ship first overnight or priority overnight to meet method holding times.



Expedite delivery of air sampling bags to the laboratory for analysis.

Section 5.0 Special Sampling Considerations

This section provides recommendations for the collection of field QC samples such as field duplicates. Considerations for sampling at altitude, sampling SVE ports and using sample cylinders are presented.

5.1 Field QC

To measure accuracy and precision of the field activities, project plans often include field duplicates, field blanks, ambient blanks, trip blanks and/or equipment blanks.

5.1.1 Field Duplicate

A field duplicate is a second sample collected in the field simultaneously with the primary sample at one sampling location. The results of the duplicate sample may be compared (e.g., calculate relative percent difference) with the primary sample to provide information on consistency and reproducibility of field sampling procedures. Due to the nature of the gas phase, duplicate samples should be collected from a common inlet. The configuration for collecting a field duplicate includes stainless steel or Teflon® tubing connected to a Swagelok “T”. If integrated samples are being collected and the sample duration is to be maintained, the sample train should be assembled as follows: each canister should have a flow controller attached, then the duplicate sampling T should be attached to the flow controllers. If the collection flow rate from the sample port is to be maintained then the

duplicate sampling T should be connected to the canisters; then the flow controller is connected to the inlet of the sampling T.

Alternatively, if the project objective is to assess spatial or temporal variability, then field duplicates may be deployed in close proximity (ambient air sampling) or samples may be collected in succession (soil vapor).

5.1.2 Field Blank

A field blank is a sample collected in the field from a certified air source. Analysis of the field blank can provide information on the decontamination procedures used in the field. Clean stainless steel or Teflon® tubing and a certified regulator should be used. It is imperative that individually certified canisters (the sample canister and the source canister/cylinder, if applicable) be used to collect a field blank.

5.1.3 Ambient Blank

An ambient blank is an ambient air sample collected in the field. It is usually used in conjunction with soil gas or stationary source (e.g., SVE system) sampling. Analysis of the ambient blank can provide information on the ambient levels of site contaminants. It is recommended that an individually certified canister be used to collect an ambient blank.

5.1.4 Trip Blank

When sampling for contaminants in water, the laboratory prepares a trip blank by filling a VOA vial with clean, de-ionized water. The trip blank is sent to the field in a cooler with new sample vials. After sampling, the filled sample vials are placed back in the cooler next to the trip blank and returned to the laboratory. Analysis of the trip blank provides information on decontamination and sample handling procedures in the field as well as the cleanliness of the cooler and packaging.

When sampling for compounds in air, a trip blank provides little, if any, of the information above. A trip blank canister can be individually certified, evacuated, and sent to the field in a box with the sample canisters. Since the valve is closed and the brass cap tightened, it is questionable if the trip blank canister contents are ever “exposed” to sampling conditions. The trip blank VOC concentrations essentially provide information regarding the cleanliness and performance of the trip blank canister. Results cannot necessarily be applied to the associated field sample canisters accompanying the trip blank. **Eurofins Air Toxics does not recommend collecting a trip blank for air sampling.**

5.2 Considerations for Sampling at Altitude

Sampling at altitudes significantly above sea level is similar to sampling a stationary source under vacuum in that target fill volumes may be difficult to achieve. The figure to the right illustrates the relationship between increasing altitude and decreasing atmospheric pressure. Ambient conditions in Denver at 5,000 ft altitude are quite different from ambient conditions at sea level. Canister sampling is driven by the differential pressure between ambient conditions and the vacuum in the canister.


There is less atmospheric pressure in Denver and 5 L is the maximum fill volume of standard air assuming the canister is allowed to reach ambient conditions (i.e., final gauge reading of 0 in Hg). Theoretically, if you sample high enough (e.g., in space), no sample would enter the canister because there is no pressure difference between the evacuated canister and ambient conditions. To fill a canister to 6 L in Denver, you would need to use an air pump.

Sampling at altitude also affects gauge readings. The gauges supplied by Eurofins Air Toxics, Inc. (see Section 2.2.4) measure canister vacuum relative to atmospheric pressure and are calibrated at approximately sea level. Before sampling at altitude, the gauges should be equilibrated (see Section 3.1). But even after equilibrating the gauge, verifying the initial vacuum of a canister at altitude is misleading. In Denver at 5,000 ft, expect the gauge to read 25, not 29.9 in Hg. You do not have a bad canister (i.e., leaking or not evacuated properly). The canister is ready for sampling and the gauge is working properly.



Rule of Thumb: For every 1,000 ft of elevation, the gauge will be off by 1 in Hg and the fill volume will be reduced by 1/5 L.

If you have questions about sampling at altitude, please call your Project Manager at 800-985-5955.

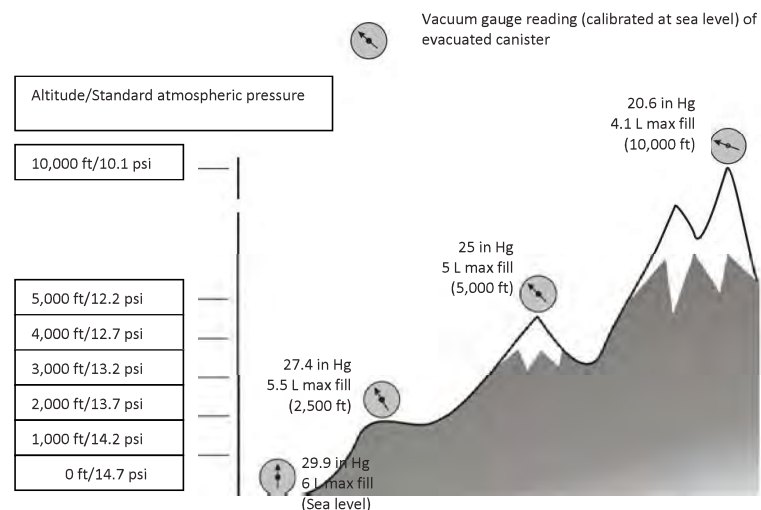

5.3 Considerations for SVE/LFG Collection System Sampling

There are some additional sampling considerations for collecting grab samples (canister or bag) from a Soil Vapor Extraction (SVE) system or landfill gas (LFG) collection system. The general challenge with these samples arises from the need to employ a length of tubing to direct the landfill gas or process air to the canister or bag. Tubing introduces the potential for contamination and diluting the sample.

- **Use inert tubing.** Teflon® tubing is recommended. Tubing with an outer diameter of ¼” works best with the fittings on the particulate filter. (See Section 3.3.1).
- **Do not reuse tubing.**
- **Purge tubing adequately.** A long length of tubing has significant volume of “dead air” inside. Without purging, this air will enter the canister and dilute the sample. Consider using a handheld PID/FID to confirm that you have purged the tubing and are drawing sample air through the tubing.
- **Avoid leaks in the sampling train.** Leaks of ambient air through fittings between pieces of the sampling train (e.g., tubing to particulate filter) will dilute the sample.
- Always use compression fittings for all connections; never use tube in tube connections.
- **Purge the sample port.** A sample port on an SVE system or LFG collection system can accumulate solids or liquids depending upon the location of the port in the process and the orientation of the port. An influent sample port located upstream of a filter or moisture knock-out can be laden with particulates or saturated with water vapor. Heavy particulate matter can clog the particulate filter and foul the canister valve. It is important to prevent liquids from entering the canister. A sample port oriented downward may have liquid standing in the valve. Purge the sample port adequately before connecting the sampling train.
- **Consider the effects of sampling a process under vacuum or pressure.** When collecting a grab sample from a stationary source such as an SVE system or LFG collection system, some sample ports may be under vacuum or pressure relative to ambient conditions. When the sample port is under vacuum, such as the header pipe from the extraction well network, it may be difficult to fill the canister with the desired volume of sample. A vacuum pump may be used to collect a canister grab sample from a sample port under considerable vacuum. See the related discussion on sampling at altitude in Section 5.2. When the sample port is under pressure, such as the effluent stack downstream of the blower and treatment system, you may inadvertently pressurize the canister. Only a DOT-approved sample cylinder should be used to transport pressurized air samples (see Section 5.4). Under no circumstances should a Summa canister be pressurized more than 15 psig. Bleed off excess pressure by opening the valve temporarily while monitoring the canister with a pressure gauge.

5.4 Considerations for Sample Cylinder Sampling

Sample cylinders, also known as “sample bombs”, are DOT-approved, high pressure, thick-walled, stainless steel cylinders with a valve at each end. They were intended for collecting a pressurized sample for petroleum gas applications. Sample cylinders differ from sample canisters in that they do not have a Summa-passivated interior surface and are not evacuated prior to shipment. Sample cylinders are not suitable for analysis of hydrocarbons at ppbv levels. Sample cylinders can be used for analysis of natural gas by ASTM D-1945 and calculation of BTU by ASTM D-3588. Eurofins Air Toxics assumes that clients requesting a sample cylinder have a pressurized process and sample port with a built-in gauge and 1/4” Swagelok fitting to attach to the sample cylinder. Eurofins Air Toxics has a limited inventory of 500 mL sample cylinders that are particularly suited for landfill gas collection systems (i.e., LFG to energy applications). This section provides step-by-step procedures for sampling with a sample cylinder.



Inform the lab during project set up if hazardous samples (e.g. high Hydrogen Sulfide concentrations) will be collected to verify the lab can safely handle the samples.

Step-by-Step Procedures for Sample Cylinder Sampling

These procedures are for a typical stationary source sampling application and actual field conditions; procedures may vary. Follow all precautions in the site Health and Safety Plan when dealing with a pressurized sample port and sample cylinder. Follow required DOT guidelines for packaging and shipping.

1. Verify contents of the shipped package (e.g., chain-of-custody, sample cylinder, particulate filter).
2. Verify that gauge on sample port is working properly.
3. Purge sample port.

4. Remove brass caps on either end of cylinder.
5. Attach particulate filter to upstream valve.
6. Attach filter/cylinder assembly directly to the sample port.
7. Open both valves 1/2 turn.
8. Allow sample air to flow through sample cylinder (approximately 10 L for a 500 mL cylinder).
9. Close downstream valve of sample cylinder by hand tightening knob clockwise.
10. Allow sample cylinder to pressurize to process pressure (max 100 psig).
11. Close upstream valve of sample cylinder and sample port.
12. Detach filter/cylinder assembly from sample port and remove particulate filter.
13. Replace brass caps.
14. Fill out sample cylinder sample tag.
15. Fill out chain-of-custody and relinquish samples properly.
16. Include the chain-of-custody with the samples and retain pink copy.
17. Pack, label, and ship according to DOT regulations.



Follow DOT regulations for packaging and shipping hazardous samples.



Eurofins Air Toxics, Inc.
180 Blue Ravine Road, Suite B | Folsom, CA 95630
Tel | 1-800-985-5955 | Fax | 916-985-1020
www.AirToxics.com

9701 0714



Field Sampling Procedure Using Summa Canisters with RAVEqc Quick-Connect (QT) Fittings

Grab Sample Setup (without flow controller)

- 1) You should have received a female QT vacuum gauge assembly and filter with your canister.
- 2) Place canister in desired location that you wish to sample.
- 3) Pull back on the sleeve of the female QT fitting located on the filter/gauge pair.



- 4) Place the female end of the QT valve over the male QT valve located on the top of the canister then release the sleeve once fully seated. Gently pull up on the filter/gauge pair to make sure they are fully connected to the canister.



- 5) Verify initial vacuum of the canister. The initial vacuum should be **greater than 25 "Hg**.
 - a. Confirm that valve is closed (knob should already be tightened clockwise)

- b. Attach vacuum gauge or flow controller (brass cap will be installed on Swagelok end)
- c. Open and close valve quickly.
- d. Record initial vacuum level ("Hg) on the COC.
- e. If a shut-in test is required, monitor the vacuum reading per project requirements prior to removal of brass cap

Note: Gauges fitted with Quick Connect fittings will hold residual vacuum after disconnecting from the canister. If you are using the same vacuum gauge to check vacuum levels of multiple canisters, you may want to release this vacuum between readings. Using a 9/16" wrench, loosen the brass nut located on the gauge. This will return the gauge to zero. Retighten the brass cap and the gauge will be ready for the next vacuum check.

- 6) To begin sampling, remove the brass nut on the flow controller using a 1/2" wrench to stabilize and 9/16" wrench to turn cap as pictured below.



- 7) Open the canister valve counter clockwise **no more than 1/2 turn** to begin sampling. Attempts to open the valve further can lead to valve damage and sample loss. Each flow controller has been set to a predetermined flow rate.
- 8) When sampling is complete, record the final vacuum on the COC and then close valve by hand tightening clockwise. **Do not use tools to tighten valve.**
- 9) Record final vacuum level on COC. Target final is about 5"Hg.
- 10) Detach flow controller by pulling back the sleeve of the female QT fitting and lifting the filter/gauge pair off of the canister.

- 11) Complete the Chain of custody (COC). Write the serial # or barcode circled below from the base of the canister. This number must be entered exactly as shown onto the COC to ensure no canister discrepancies are present upon receipt by the lab.



- 12) Make sure all canister tags are filled out and match COC. If cans are unused, please write “unused” on tag.
- 13) Notify your Eurofins Air Toxics Project Manager via phone (1-800-985-5955) or email (Airtoxics@EurofinsUs.com) prior to sample delivery if rush TAT analysis is requested.
- 14) Safely pack all sampling media and COC’s in boxes and return to the lab.

Integrated Sampling Setup (with flow controller)


- 1) Connect your flow controller to the canister by pulling back on the sleeve of the female QT fitting.



- 2) Place the female end of the QT fitting over the male QT fitting located on the top of the canister.



- 3) Release the sleeve once fully seated. Gently pull up on flow controller to make sure the fittings are properly connected.

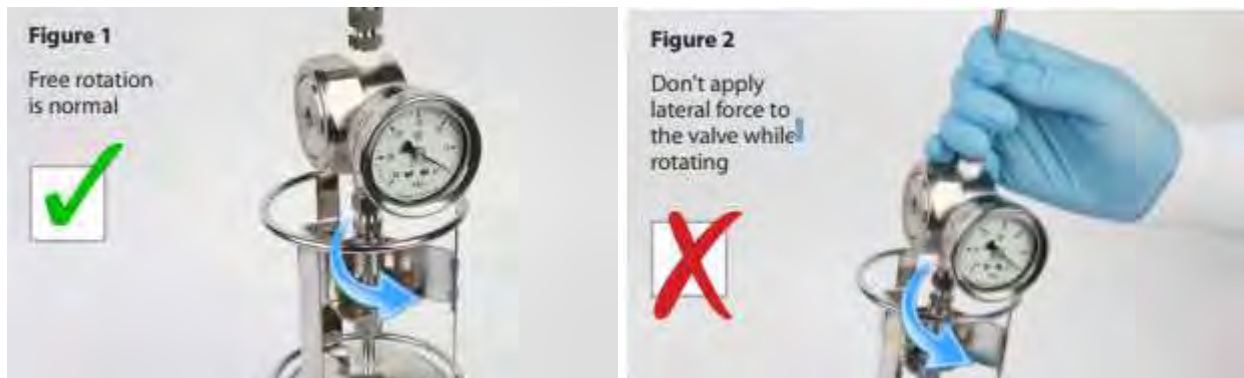

When the male and female QT air valves are connected, the two devices they connect can freely rotate. **This is normal and does not indicate a problem with the connection or the integrity of the seal.** However, applying a lateral force to the valve while rotating may result in the loosening of the threaded cap found on the end of the male QT air valve. This threaded cap has been installed using a specific torque. While this torque should be sufficient to prevent the cap from being unthreaded during normal use, it is strongly recommended that the male QT air valve not be rotated if lateral force is applied.

- 4) Verify initial vacuum of the canister. The initial vacuum should be **greater than 25 "Hg**.
 - a. Confirm that valve is closed (knob should already be tightened clockwise)
 - b. Attach vacuum gauge or flow controller (brass cap will be installed on Swagelok end)
 - c. Open and close valve quickly.
 - d. Record initial vacuum level ("Hg) on the COC.

- e. If a shut-in test is required, monitor the vacuum reading per project requirements prior to removal of brass cap

Note: Gauges fitted with Quick Connect fittings will hold residual vacuum after disconnecting from the canister. If you are using the same vacuum gauge to check vacuum levels of multiple canisters, you may want to release this vacuum between readings. Using a 9/16" wrench, loosen the brass nut located on the gauge. This will return the gauge to zero. Retighten the brass cap and the gauge will be ready for the next vacuum check.

- 5) Attach all tubing, fittings, and/or purge cans to flow controller if necessary.
- 6) To begin sampling, remove the brass nut on the flow controller using a 1/2" wrench to stabilize and 9/16" wrench to turn cap as pictured below.



- 7) Open the canister valve counter clockwise **no more than 1/2 turn** to begin sampling. Attempts to open the valve further can lead to valve damage and sample loss. Each flow controller has been set to a predetermined flow rate.
- 8) When sampling is complete, record the final vacuum on the COC and then close valve by hand tightening clockwise. **Do not use tools to tighten valve.**
- 9) Record final vacuum level on COC. Target final is about 5"Hg.
- 10) Detach flow controller by pulling back the sleeve of the female QT fitting to release the seal. Uncoupled QT fittings act as a closed valve and will not allow air flow. Lift the flow controller off of the canister.
- 11) Complete the COC. Write the serial # or barcode circled below from the base of the canister. This number must be entered exactly as shown onto the COC to ensure no canister discrepancies are present upon receipt by the lab.



- 12) Make sure all canister tags are filled out and match COC. If cans are unused, please write “unused” on tag.
- 13) Notify your Eurofins Air Toxics Project Manager via phone (1-800-985-5955) or email (Airtoxics@EurofinsUs.com) prior to sample delivery if rush TAT analysis is requested.
- 14) Safely pack all sampling media and COC’s in boxes and return to the lab.

Media Handling Rules

Regardless of the type of canister samples collected, the following rules apply:

- 1) ***Do not handle or carry canisters by the valve.*** This can lead to accidental contamination of sample or loss of initial vacuum.
- 2) ***Do not transport canisters with flow controllers attached.***
- 3) ***Do not carry coupled flow controllers and canisters by the flow controller.*** Flow controllers cannot support the weight of a 6L canisters, fittings will bend or even break, maintain upright position during sampling.

Chapter 3. Common Sampling Procedures

3.1. Purpose

This chapter presents specific sampling procedures and items common to the sampling events covered in Chapters 4 – 12. Section 1.5 and Figure 1-1 of this handbook illustrate the relationships among these chapters. Additional references include facility standard operating procedures (SOPs) and special requirements contained in regulatory programs and site permits.

3.2. Preparations for Field Sampling

The success of a field sampling program depends on the level of preparation prior to entering the field. Implementation of the SAP begins with preparing for the field sampling operation. The following preliminary steps are vital to the success of the project:

- **Preliminary Off-Site Evaluation.** Prior to implementing the SAP, the Program Manager and Health and Safety Supervisor should review any Historical Overview and Site Description sections of the SAP. This review may result in the decision for an on-site evaluation to assess the sampling procedures, relevant safety equipment, and PPE.
- **Equipment Verification.** The SAP should specify an equipment list, including sampling equipment, sample containers, and PPE. This list should be reviewed in detail by the entire sampling team and the Health and Safety Supervisor to verify that necessary items are included and appropriate for the site being sampled.
- **Inventory.** The Equipment Technician (however named) shall gather all the specified equipment and containers into one place and verify that it is on hand. Reagents, supplies, and quality control materials shall be checked and verified as appropriate. The designated technician shall notify the Program Manager that equipment preparations are complete.
- **Sign-Over of Materials.** The designated individual shall check the equipment inventory, and sign for custody if required.
- **Staffing and Scheduling.** The Program Manager shall consider the impact of specified sampling requirements on staff and schedule.
- **Screening or Field Measurements.** Sample screening or field testing for pH, dissolved oxygen (DO), sulfite, conductivity, disinfection chemicals, and temperature require additional field time. The need for additional personnel is based on time demands, training requirements and degree of difficulty. Significant field testing requirements may justify the procurement of a field laboratory and a trained field chemist to relieve other team members of this responsibility.
- **Preservation.** Preservation, either chemical or thermal, is required for most water samples. Thermal preservation usually requires icing the samples after collection and storing samples at $\leq 6^{\circ}$ Celsius (C). For chemical preservation, two practices exist for adding preservative: 1) addition of the chemicals to the samples in the field, and 2) addition of the chemicals to the sampling containers prior to sending the containers to the field. Adding the reagents to the sample containers at the time the samples are collected requires the sampler to maintain records of addition and quality of the reagents and to follow proper chemical handling techniques. In some cases it may be advisable to have the laboratory add the reagents to specially labeled sample containers before they are sent to the field. This may reduce the fieldwork required and the possibility of field error resulting from contaminating the preservatives. Addition of the correct amount of preservative can be estimated for samples collected on a routine basis having little to no outside environmental or process effects.

WARNING: When using containers filled with preservative, use caution when filling the bottles to ensure the preservative is not released to the environment and the correct amount of preservative has been added to adequately fix the sample.

- **Time.** Many samples have short holding times prior to analysis. Review the holding time requirements and coordinate the schedule with the laboratory so the samples are analyzed within the required holding times. Holding times are dictated by the regulatory program and data may be invalidated if holding times are not met.

Note: Refer to Appendix B of this handbook for specific information on hold times, preservation, and containers.

3.2.1. Preparing for a Sampling Event

Preparing for a sampling event requires planning and a thorough knowledge of the regulatory program. The key elements for such preparation include:

- **Objectives.** The objectives should be thoroughly understood by all sampling personnel prior to sample collection. Knowledge of the compliance scope, boundaries, geography, and area roads and bridges will facilitate sampling.
- **Map of Study Area.** A map of the study area is essential for sampling. The map should be detailed enough so that sample locations and landmarks are clearly identifiable.
- **Permits and Regulations.** The person collecting samples should have a working knowledge of applicable permits, required monitoring, and other specified conditions. Regulations that potentially impact the sampling area, such as right of entry, should be reviewed by the sample collector.
- **Waste Sources.** When the objective of a project is to determine the nature, extent, or impact of a waste source upon an environmental medium, knowledge of waste source(s) within the area, as well as those sources upstream or upgradient that may impact the area, is essential. This knowledge entails knowing waste source discharge points or areas, type of waste, volume of discharge,

and constituent concentration. When this information is not readily available, it may be necessary to collect background information.

- **Environmental Medium Characteristics.** If the study is of a waterway, the physical characteristics of the waterway should be known prior to sample collection. These important physical characteristics include whether the receiving waterway resembles a lake, reservoir, pond, small stream, or a river. Average and maximum recorded flow, width and depth, type of benthic substrate, and type of predominant aquatic vegetation also should be noted.
- If the study area is limited to land, it is important to have knowledge of the terrain, soils classification, geology, terrestrial vegetation, industrial and residential development, predominant land use, and wildlife.
- **Sampling Information.** A sampler must know the types of samples to be collected, (e.g., water, wastewater, soil, or solid waste). The sampler also must know whether the samples are to be collected nocturnally or during the daytime, and where within the environmental medium the samples are to be collected (including both horizontal and vertical collections) as well as the preferred method of collection.
- **Laboratory Arrangements.** Arrangements must be made with the analytical laboratory to ensure that the laboratory is expecting the samples when they arrive and has a description of the types of samples (e.g., liquid, semi-solid, solid, or biological), an approximation of the number of samples for each sample type, and the analyses requested on each sample type. Arrangements must be made for the appropriate number of sample containers and preservatives where required. Regulations on transportation of samples from the point of collection to the laboratory must be considered, and the COC record must be traceable, as detailed in the SAP.

- **Equipment.** Prior to going to the sampling location, the sampling gear should be examined to ensure that it is appropriate for the task and in good working order. Verify that any preventative maintenance has been completed according to the SOPs. Label, mark, and otherwise identify all equipment, instruments, reference materials, and associated supplies for measurement processes to indicate calibration or standardization status. Expiration dates of reagents and solutions should be checked and verified as to usability. If a boat is required, an appropriate boat, motor, and life jackets must be available, and preliminary boat launch locations should be known before going to the sampling site. All equipment should be examined prior to starting the sampling event.

Note: When in use, sampling equipment should be anchored to prevent loss in the event the rope or equipment slips through the hands of the sample collector.

- **Safety.** The safety of sampling personnel is paramount. During wading operations, a rope should be attached to the sampler and extended to an anchored person on shore. In boating operations, at least two people should be present, one to collect the samples and another to operate the boat motor. Boat personnel are required to wear life preservers and take care to avoid overloading the craft. When collecting samples, beware of snakes, stinging insects, ticks, or other animals that may cause injury to the sample collectors.
- **Personnel Transportation and Lodging.** The Program Manager must consider arrangements for transporting sampling personnel and equipment to the sampling site, and for lodging when the sampling extends beyond a working day.

3.2.2. Preliminary On-Site Evaluation

When sampling for the first time at a new location, a preliminary on-site evaluation should be conducted prior to the sampling event to ensure that all aspects of the sampling process are addressed.

Upon arrival at the site, the Program Manager (or designee) and the Health and Safety Supervisor shall check with facility personnel to determine whether there have been any recent changes at the sampling locations that would influence the SAP or modify the expected hazards.

3.2.3. Preliminary Site Safety Evaluation

After a preliminary hazard analysis, sampling locations should be inspected to develop the Safety Plan or HASP as appropriate to the scope of the project. PPE information specified may not be completely reliable, and additional air monitoring may be required. When air monitoring activities are needed, focus first on identifying conditions that present an acute health hazard, and then evaluate exposure to chemicals such as carcinogens that could create long-term health problems.

If samples are to be collected in a confined spot, testing the air within the space for oxygen content should be a priority. Tests for explosive levels of flammable vapors should be conducted next, followed by testing for the presence of hazardous concentrations of specific toxic agents (depending upon the nature of the space and its contents or previous contents).

Note: Real-time instrumentation is available for making these measurements. Air samples should be collected to evaluate the levels of other chemicals in the air that may require respiratory protection. Some organic chemicals such as gasoline vapors can be monitored with standard field instruments. However, monitoring for carcinogens will normally require the use of a field gas chromatograph or the collection of test samples for laboratory analysis.

In general, the air monitoring program to evaluate worker exposures to toxic chemicals should be designed by an industrial hygienist familiar with the facility and potential hazards to which the field sampling team will be exposed.

Review physical hazards that may be present at the site, such as unstable footing near river embankments, water safety practices, first aid supplies, equipment safety practices, and other physical hazards.

3.2.4. Explosive Safety Evaluation

The possibility of encountering explosive hazards must be considered in all sampling plans. When the presence of energetic materials is suspected from the history of a site, appropriate precautions can be incorporated during the planning stages.

Consideration should also be given to situations that can lead to the formation of unstable materials from constituents that are not originally energetic compounds. Formation of peroxides in ethers and metal picrates are two examples that have been known to create safety hazards.

3.2.5. Preliminary Sampling Evaluation

Sampling locations should be inspected to ensure the information in the SAP is correct. All equipment should be checked prior to mobilization and the day before the sampling event to ensure proper equipment operation, parts, and records are available for the sampling operation. If needed, preventative maintenance should be performed.

Reagents, supplies, reference materials, and consumable materials should be verified as to expiration dates, quality, and applicability to the assigned equipment.

Locate all the sample locations during the on-site evaluation to determine site accessibility with the designated equipment, sample location, and possible background contamination for the contaminants of interest. Electromagnetic interferences, volatile air pollutants from locations off site, weather, and climate may affect the sampling event and should be planned for, as much as practical, to avoid delays in sampling.

3.3. The Sampling Event

A typical sampling event should include the following sequential activities:

- Complete all preparation and preliminary evaluation activities as needed
- Arrive at the sampling site with appropriate equipment, supplies, materials, and sample containers
- Set up equipment, work areas, and safety areas, as described in the SAP

- Collect samples at the locations specified in the SAP or reference procedure
- Immediately following sample collection, ensure that each sample container is labeled as described in the SAP. The sample label must be traceable to the sample number, date/time sampled, sampler's name, preservative, and site name, location or unique project identifier.
- Document the exact location of the collected sample(s) in the field logbook or field notebook (FLB/FN). Also, record in the FLB/FN other observations of environmental conditions that could affect or contribute to knowledge of the sampling area and the environment where the sample is collected. Prevailing weather conditions at the time of sampling should also be recorded.
- Preserve or ice samples as appropriate and record preservation method
- Perform field tests or field screening measurements and record all observations in the FLB/FN
- Complete the COC record and other field records
- Pack and seal the shipping container with collected samples, and transport the shipping container with the COC record and any laboratory required forms to the laboratory. Retain copies of all transmitted forms.
- Return all forms and copies of relevant FLB/FN pages to the Program Manager or designee
- Clean sampling equipment for the next sampling event or storage
- Breakdown all work area and safety areas as required and return the site to the condition found at the start of the sampling event
- Dispose of all waste materials using appropriate procedures.

3.4. Sampling Procedures

The SAP refers to detailed sampling procedures or includes the details of the sampling operation. A standard SOP format should be used to incor-

porate the following items for each type of sampling operation:

- Sampling locations, sample numbers or identifiers
- Type, volume, and number of sample containers to be filled at each sampling location and the records to be maintained
- Contaminants to be measured and special handling procedures to ensure proper collection
- Safety, health, and hazard cautions
- Sampling equipment (construction material, type, etc.) and records to be maintained for status, maintenance, and corrective action
- Step-by-step sample collection procedures (grab, composite, continuous for specified period, etc.)
- Sampling frequency for repeated sampling at the same sample location
- Special sampling requirements (e.g., the collection of initial runoff samples after a rain for contamination)
- Sample handling procedures for each sample container (e.g., screened, filtered, sequence for filling groundwater sample containers, etc.)
- Preservatives required for each sample container and contaminant
- Reagents, supplies and support services quality, verification and validation criteria to ensure materials are used properly
- Equipment decontamination procedures to be used between sample locations and between sampling events
- Recordkeeping requirements, documentation handling, and retention requirements
- Sample, equipment, and materials storage requirements
- Provisions for storage or disposal of wastes generated during field sampling.

3.4.1. Sampling Strategies

See Appendix A for sampler and sampling recommendations and strategies for waste materials. Sampling strategies for drinking water, wastewater,

groundwater and TSCA materials are permit or compliance dependent. The Scope or Purpose section of the sampling procedures should describe the rationale for the sampling strategy to ensure that all personnel involved with the project have an understanding of the sampling event.

3.4.2. Sampling Procedure Checklist

Following is a checklist of the minimum steps to address in SOP format.

- **Sampling Approach**
 - Objective
 - Design of sampling plan
 - Statistics
- **Material to be Sampled**
 - Physical state
 - Volume
 - Hazardous properties
 - Composition
- **Site**
 - Accessibility
 - Waste generation and handling
 - Transitory events, startup, shutdown
 - Maintenance
 - Climate
 - Hazards
- **Equipment**
 - Maintenance
 - Preparation and cleaning
 - Operation
 - Calibration and standardization
- **Sample Handling, Transportation, Storage and Preservation**
 - COC
 - Seals
 - Forms
 - Containers
 - Preservatives, reagents, and supplies
- **QA/QC**
 - Controls on process
 - Audits
 - Training
 - Samples, blanks, duplicates, and spikes
- **Health and Safety**
 - Personnel protection

- Safety procedures
- Emergency procedures
- **Laboratory**
 - Document transfer
 - Sample arrival schedule, transfer
 - Sample preservation, handling and storage
 - Analytical methods and QC
 - Reporting format and schedule.

3.5. Sample Documentation and COC Procedures

Thorough documentation of a sample's custody is required to support sample validity. The documentation must verify that the samples are representative, were collected in accordance with the requirements of the SAP, and are not vulnerable to tampering before being received by the laboratory. The COC begins when the sample is taken and ends when the sample is disposed of. Sample documentation and COC procedures include the following.

- A completed sample collection label attached to all sample containers
- Records of sampling operations written in FLB/FN or related forms as designated for the operation in the SAP. Records include sample type, sample matrix, sampling method, field test methods, and QC procedures. A table may be used to present this information.
- Identification of every sample container on a COC record and all custody transfers documented
- Custody of the samples with all discrepancies in the field operations resolved or duly recorded.

The following should be used to generate the required sample documentation.

Note: EPA's "Field Operations and Records Management System II Lite (FORMS II Lite™)" software is an electronic COC and may also be used to simplify and accelerate the sample documentation process.

3.5.1. Pre-Assigned Sample Numbers

Each sample consists of all of the material collected for analysis at one place, at one time, and of one

matrix, except for composite samples, which may contain components collected at different locations or time.

The Program Manager shall establish a system for assigning a unique sample number to each sample collected in the field. The numbering system will be defined in the SAP, in case additional samples are generated in the field. The number for each sample will be used to identify the sample in the FLB/FN, on the sample container, and on the COC record. The number may be used on other forms and reports presenting measurements, test data, or evaluations.

The sample numbers of field QC samples like a field duplicate should be transparent to the laboratory. The sample numbers should not reveal whether a sample is a blank sample or two field samples are duplicate/split pairs to avoid potential biasing of analytical results.

The sample number provides a common identifying code for all of the analytical results for a single sample. This is particularly useful when the results are entered into a computer database, which should include:

- Sample number
- Sample container number
- COC record number
- Matrix
- Location
- Sample type
- Sample date and time
- Sampler's name
- Parameter
- Analytical result
- QC data
- Compliance limit and
- Data qualifier code (optional).

Results from analysis of trip blanks, field blanks, equipment decontamination blanks, split samples and MS/matrix spike duplicate (MSD) samples may be entered into a computer database. In some testing programs, these results are used to

generate the data qualifier code for the analytical results from test and duplicate samples.

It is recommended that the information associated with each sample number consists of elements describing the sample type, matrix, location, and the time and date of sample collection as required.

Note: If the sampling and analytical data are to be added to an existing database, sample numbers should be consistent with database requirements.

3.5.2. Sample Container Labeling

Sample labels are an important part of proper documentation to reduce the possibility of confusing sample containers, and to provide the necessary handling information. Sample containers should be pre-labeled as much as practical before sample collection. The labels may be protected from the sample matrix with a clear tape covering. For volatile samples, check with the laboratory to ensure that any labels being used do not interfere with their auto-samplers. Sample labels should include sample number, date and time sampled, location, sample type, preservative and the sampler's initials or signature.

Sample numbers may be unique to the sample location, to the sample type or to the container. In some labeling processes, a unique sample number is written on the container label, and all information recorded on the accompanying form(s) is traceable to the unique sample number.

Some number schemes uniquely number each sample container. All data reported for the sample includes the sample container number for traceability to the container measured. This is useful when sample containers are cleaned and lot controlled, and traceability from container preparation, preservation, sampling, and testing is required.

A designated Field Sample Custodian or sampler should label the sample containers when they are filled. Preprinted, adhesive, multiple part labels formatted as shown in Figure 3-1 may be used. Each part includes the unique sample container number that may be pre-numbered to avoid duplication.

Note: Because 40-mL volatile organic analysis (VOA) vials may be stuck in an autosampler, the field sampling team leader needs to contact the laboratory to make sure if applying a clear tape over a sample label of 40-mL VOA vials is acceptable. Use waterproof ink to make label entries. FLB/FN notations should provide an explanation if a pencil was used to fill out the sample container label due to field weather conditions. Because waterproof ink may contain target VOAs such as xylene, toluene, or alcohols as a solvent, great care is needed to prevent VOA samples from contamination by the solvent of waterproof ink or permanent marker.

Figure 3-1. Multiple Part Container Label

PROJECT NAME	
Sample #: XXXXX	
Container #: XXXXX	
Sample #:	_____
Date: _____	Time: _____
Location:	_____
Cont. Size:	_____
Cont. Type:	_____
Matrix:	_____
Type of Sample:	_____
Preservative:	_____
Signature:	_____

3.5.3. FLB/FN

The FLB/FN is the written record of all field data, observations, field equipment calibrations, and sample collection activities. Potential for future legal actions dictates that the FLB/FN be site-specific and that they be hardbound (e.g., ledger, composition book, diary, etc.). All pages (front and back) shall be serially numbered so removal will be apparent. Samplers shall adhere to the following guidelines when using FLB/FN.

- The FLB/FN shall be assigned to the QA/QC Coordinator or designee. Additional log books may be assigned by the Program Manager or designee to the Field Chemist and the Health and Safety Supervisor. The QA/QC Coordinator or designee shall note in each FLB the individual to whom it was assigned. The FLBs may be controlled by the QA/QC Coordinator or the Program Manager.

- Each FLB shall be annotated with the sampling program name or number.
- Key personnel and telephone numbers shall be listed on the first page.
- Entries shall be written in waterproof blue or black ballpoint pen. Avoid felt tip pens. *Do not use pencil.*
- Start a new page at the beginning of each day.
- Entries should be chronological – a time notation should introduce each entry.
- Sketch or obtain a map of the area or facility. Include sketches of layout, structural features, and points of interest or contamination. Include a north arrow and a rough scale. If possible, obtain a site map (reduced if necessary) and permanently place it in the FLB/FN.
- Language should be objective, factual, and free of personal feelings or other inappropriate terminology. Speculation or personal observations may be included if they are clearly identified as such.
- Do not erase or scratch out errors. Draw a single line through the error, then insert corrected material. The person who made the error shall initial and date the correction as well as clearly state the reason for the error.
- Entries or corrections made by individuals other than the person to whom the FLB/FN was assigned shall be signed and dated by the individual making the entry or correction. An explanation for the correction should be noted.
- The last entry for each day should include a short summary of the day's activities, weather conditions and the time the site was left. As appropriate, the last entry for each week should be a summary of the week's activities. Weekly summaries should be thorough and descriptive.
- The FLB/FN shall be signed at the end of each day. Signatures shall be written on a single diagonal line drawn across the blank portion of the page following the day's last entry.
- All FLBs/FNs shall be returned to the individual designated for review and final storage when sampling is completed as described in the SAP.
- FLB/FN entries will contain a variety of information. Information to be entered at the start of each day of sampling includes the following:
 - Date of the sampling event
 - Time sampling started and approximate time for set up of equipment
 - Weather conditions
 - Level of PPE being used
 - Names of field sampling team members and others present during the sampling.
- Fully document all deviations from the SAP or changes in sampling procedures. Problems, delays, or any unusual occurrences such as improper equipment or breakdowns should be included, along with resolutions and recommendations. Summarize the content and conclusions of all relevant meetings, discussions, and telephone conversations in which you are involved. Include the names and affiliations of all personnel involved. Thoroughly document all directives and/or guidance from EPA or other government personnel. Directives that give personnel specific authority to make critical decisions must be documented in the FLB/FN.
- Whenever a sample is collected or a measurement is made, a detailed description of the location must be recorded. The source from which the sample is collected should be clearly identified to maintain traceability and allow another person to locate the exact sampling location. The ability to relocate the sample site ensures duplication of future sampling events. Measurements from permanent features (e.g., center line of road, numbered utility pole, etc.) to the sample point must be made and entered into the FLB/FN. Coordinates on a map, or an accurate site sketch with distance measurements to known locations are other options to ensure the exact location of each sample is recorded.

- Describe the site thoroughly so another person will be able to locate the exact sample location. Note signs of contamination such as oily discharges, discolored surfaces, unusual odors, dead or distressed vegetation including types of plants, if possible. Photographs may be taken to provide evidence of visual observations, record site conditions, and assist with locating the sample site in the future. Photographs taken of sample locations should be noted along with the picture number. Log the record in the FLB/FN to identify which sampling site is depicted in the photograph.

Note: A series of photographs can be identified by taking the first photograph of an informational sign with the sampling program name, number, and the project number on it.

- Each time a sample container is filled and labeled, a copy from the multiple part form of the sample container label or reference number label with all information recorded shall be put into the FLB/FN.
- All equipment used to make measurements must be identified by type, manufacturer, and serial number, along with the date of calibration. Details of field calibration procedures and results shall also be included in the FLB/FN.
- Note decontamination or disposal procedures for all equipment, samples, protective clothing, and personnel decontamination procedures.
- For each delivery or shipment of samples to a laboratory, record the following information in the FLB/FN:
 - Custody procedures and serial numbers
 - Packing and shipping procedures (record air bill numbers)
 - Name, address, telephone number, and contact of the laboratory performing the analysis.

Note: The laboratory address should be the sample receipt address, which may not be the same as the mail receipt address.

3.5.4. Field Notes/Field Sampling Forms

Field notes or field sampling forms are used in addition to or in lieu of field log notes. When field notes are used in lieu of an FLB, the record keeping practices presented in Section 3.5.3 should be followed. The field form provides a place for the sampler to record the information required for the project. Field forms are specially designed for any given project and may be completed one per sample or one per sampling event. The forms include blank lines for recording the information necessary for the project to ensure the proper information is recorded. All blanks must be completed on a field form to ensure proper documentation. The sampler completes the field form for all samples collected including QC samples. An example of a field form for a well sampling activity is presented in Figure 3-2 below.

Note: A review of the regulatory program's specific requirements must be conducted to ensure that all documentation requirements are met. Some programs do not allow the use of loose field forms as the sole documentation vehicle and require hardbound logbooks.

The field form lists the sample number, location, matrix, the type and number of sample containers filled (including QC samples), any chemical preservatives added and checked for each sample container, sampling procedure reference, deviations to the procedures and all field measurements and observations.

The Field Sample Custodian indicates acceptance of the information on the field form by signing and dating the form. In cases where multiple part forms are used for the sample label, for each sample container filled, one part of the multiple part adhesive sample container label is placed on the field form at the appropriate location. The completed field forms are returned to the Program Manager as soon as possible and by the means indicated in the SAP. Deviations or problems encountered during the sampling event must be communicated promptly in writing to the Program Manager or designee. This may be completed by sending the field form by facsimile or other means to communicate the deviations, as

well as allow for continuation of the project and ensure sample holding times are not jeopardized.

Note: The field form becomes part of the permanent project records, but is not usually sent to the laboratory.

3.5.5. Chain of Custody (COC)

An overriding consideration for environmental measurement data is the ability to demonstrate that samples have been obtained from the locations stated and that they have reached the laboratory without alteration. Documentation of security, field handling criteria, shipment, laboratory receipt, and laboratory custody until disposal, provides evidence of proper processing. The degree of custody documentation is dependent on the regulatory program, data use, and needs. Many state programs for sampling wastewater and drinking water do not require “legal custody,” but recommend legal custody whenever data is known to be used for evidence. A review of data use and risk of legal proceedings will dictate the type of custody procedure to be employed. Documentation consists of a COC record that is completed by the Sample Custodian.

3.5.5.1. Field Custody Procedures

The Field Sample Custodian or sampler is personally responsible for the care and custody of the samples until they are transferred or properly dispatched. As few people as possible should handle the samples. A sample is considered to be “in custody” for legal proceedings if it is:

- In a person’s actual possession
- In view after being in physical possession
- Locked up so that no one can tamper with it after having been in physical custody
- In a secured area, restricted to authorized personnel only.

If any one of these is not in place at all times, the COC is broken.

The Program Manager or designee shall review all field activities to determine whether proper custody procedures were followed during the fieldwork and whether additional samples are required. The sampler or Sample Custodian shall notify the Program Manager of any breach or irregularity of COC procedures described in the SAP.

Figure 3-2. Field Form

Sheet <u> 1 </u> of <u> 1 </u>		MICROPURGE/LOW-FLOW SAMPLING LOG								
PROJECT:					WELL ID:					
EPA ID NO:					Well Condition:					
Proj./Task No.					Well Riser Dia. (ID):					
Date:					Screened Interval:					
Weather:					S.W.L. Measuring Pnt:					
Samplers:					Well Bottom Depth:					
Purge Method: Micropurge										
Sample Collection Method:										
Sampling Device:					STATIC WATER LEVEL:					
Tubing:					Initial Purge Volume:					
Pump Intake Depth:					Approximate Pump Throttle Setting:					
Total Recovered Purge Water This Well:										
Groundwater Sample Data:										
Sample ID	Analysis	Primary	QC	MS/MSD	Blank	Sample ID	Analysis	Primary	QC	MS/MSD
Instrumentation/Equipment Data:					Calibration Date:					
Field Test Results:					Hach Kit Tests:					
					D.O.		mg/L			
					Total Iron:		mg/L			
					Ferr. Iron:		mg/L			
					CO2:		mg/L			
Comments:										
Observations: Clarity:					Odor:		Floating Product:		Sheen:	
PURGE WATER DATA TABLES										
Stabilization Parameters	Units	Minutes	Minutes	Minutes	Minutes	Minutes	Minutes	Minutes	Minutes	
Temperature	C									
Sp. Cond.	ms/cm									
D.O.	ppm									
pH										
ORP (Eh)	mV									
Turbidity	NTU									
Clock Time										
Static W.L.										
Flow Rate	ml/min.									
Stabilization Parameters	Units	Minutes	Minutes	Minutes	Minutes	Minutes	Minutes	Minutes	Minutes	
Temperature	C									
Sp. Cond.	ms/cm									
D.O.	ppm									
pH										
ORP (Eh)	mV									
Turbidity	NTU									
Clock Time										
Static W.L.										
Flow Rate										

3.5.5.2. COC Records

From time of collection through final sample disposal, there are many transfers of custody during the course of a sampling program. All sample containers must be accompanied by a COC record to document these transfers. A separate COC record shall be prepared by the Field Sample Custodian or sampler for each sampling event. In some programs, a COC record accompanies each shipping container and includes a pre-numbered COC record. This record lists the sample containers that are in the shipping container, and serves as the packing list for the container. The serial number on the form becomes the identifying number for the shipping package.

Figure 4-3 provides an example of a sample COC record. The example has been used for a wide variety of regulatory programs and meets legal COC requirements. It tracks the samples from sample collection to disposal. All sampling, preservative, and test information is included. The SAP will indicate the individual responsible for completing each section. The following information relates to the numbered blocks:

COC Record—Figure 3-3.

- (1) The **company/command** name and **code** for the source of the funding.
- (2) The **contact name** for the Program Manager or designee indicated in the SAP.
- (3) The **job order number (J.O. #)** is entered to trace the information to the specific job.
- (4) The **signature** of the Program Manager or designee authorizing the funds.
- (5) The **permit number (No.)**, if applicable, for the samples collected. The number is issued by the regulatory agency for specific compliance reporting.
- (6) The **sample ID/location** based on permit designations or actual site location name.
- (7) The **sample taken date and time** are recorded for grabs on the start line only and for


composites on the start date and time and stop date and time.

- (8) The code for **sample type** such as grab, composite flowing and composite time (see Section 18).
- (9) The initials for the **person sampled by**.
- (10) The code for **sample matrix** such as liquid, solid, and gas (see Section 18).
- (11) The code for **preservative** (see Section 18).
- (12) The **# of samples** and **container** type are entered as “4-P” for four plastic containers (See Section 18).
- (13) The **analysis** to be performed - may reference descriptions in the SAP.
- (14) The field reading for **pH** for the sample containers indicated.
- (15) The field reading for **temperature** with the unit of measure for the sample containers indicated. The SAP may indicate the temperature to be recorded in the outfall temperature and not the sample temperature.
- (16) The field reading for **other** required measurements may be entered with the unit of measure. The SOP and name of the test must be indicated on the custody form.
- (17) After the samples are preserved, the **preservation is verified**. The verification is noted per the SAP. This verification may be temperature, pH, or if all is correct an indication is made as “OK.”
- (18) This section of the custody form contains **common codes** to be used by the sampler when completing the custody record. When situations arise that do not match the code designations, alternates may be added for the one time use on the custody form.
- (19) The expected **turnaround** for sample request is placed in this area. The reason is presented to determine if the turnaround time is regulatory, project specific, or based on holding time requirements.

- (20) **Special instructions** or comments may be entered in this space.
- (21) The **regulation applied** to the project is checked.
- (22) The **sample collection/charge, possible sample hazard** and other **comments** relate to the command in charge of sampling, special sample hazards, or to other sample comments. Reference may be made to code or specific sections of the SAP.
- (23) The **delivery order number** is entered.
- (24) The **contract lab** and **contract number (No.)** are entered for testing work performed by a designated contract laboratory.
- (25) The **sample disposal** method and the date completed.
- (26) The signature and **company/command** of the person relinquishing custody (**relinquished by**).
- (27) The signature of the person custody is **received (rec'd) by**.
- (28) The **date/time** custody is transferred.

Figure 3-3. COC Record

CHAIN-OF-CUSTODY RECORD & ANALYSIS REQUEST FORM



PWC ENVIRONMENTAL LABORATORY
 CODE 990 BLDG 2-140
 9142 MARYLAND AVENUE
 NORFOLK, VA 23511-3095
 PH: (0044450951 FAX: (0044450952

ENVIRONMENTAL

LAB USE ONLY

LINE ITEM #	SAMPLE NO	SAMPLE ID/LOCATION	SAMPLE TYPE	ON DATE	AT TIME	TYPE	SAMPLED BY	MATRIX	PRESERVATIVE	# OF SAMPLES/CONTAINERS	ANALYSIS	FIELD READINGS	PRESERVATION		
												PH	TEMPERATURE	OTHER	VERIFIED BY
6			START	7		8	9	10	11	12	13	14	15	16	17
			STOP												
			START												
			STOP												
			START												
			STOP												
			START												
			STOP												
			START												
			STOP												
			START												
			STOP												

CLIENT INFORMATION

COMPANY/COMMAND: 1 CODE: _____

CONTACT: 2 EXT: _____ FAX: _____

PHONE: _____

J.O. #: 3

SIGNATURE: 4

PERMIT NO.: 5

TURNAROUND: 19 (FOR RUSH TURNAROUND STATE REASON BELOW)

SPECIAL INSTRUCTIONS: 20

SAMPLE DISPOSAL: () RETURN TO CLIENT () DISPOSAL BY LAB 25

REGULATION APPLIED:

RCRA ()	HSD ()
SDWA ()	TSCA ()
CWA ()	PHOTO ()
CAA ()	OTHER ()

PRESERVATIVE

1 - COOL TO 4C 5 - HCL, pH=2

2 - HNO3, pH=2 6 - DDBS, NA2S2O3, 4C

3 - H2SO4, pH=2 7 - FIELD FILTER

4 - HNO3, pH=12 8 - NONE

SAMPLING/COLLECTION CHANGE: 22

POSSIBLE SAMPLE HAZARDS: _____

COMMENTS: _____

D.O. NUMBER: 23

CONTRACT LAB: 24

CONTRACT NO.(S): _____

RELINQUISHED BY: 26 COMPANY/COMMAND: _____

RELINQUISHED BY: _____ COMPANY/COMMAND: _____

RELINQUISHED BY: _____ COMPANY/COMMAND: _____

REC'D BY: _____ DATE/TIME: 28

REC'D BY: _____ DATE/TIME: _____

REC'D BY: _____ DATE/TIME: _____

The COC record identifies which pairs of sample containers were collected for the same analysis, and identifies the sample containers that were filled with sample for use as the MS/MSD QC samples. Based on the needs and data use, the COC record may not list any information as to the exact sample location or whether a sample is a field duplicate, field blank, trip blank or an equipment decontamination blank. This information is kept as blind information from the laboratory to ensure objective reporting. When this process is used, records must be maintained that trace the sample collected in the field with the sample as identified to the laboratory. Compliance data for drinking water or wastewater testing do not require blind submissions. The QC sample information is provided to the laboratory to ensure prompt notification when the QC data does not meet the SAP specifications.

Whenever samples are split with a second laboratory or government agency, a separate COC record may be prepared for the second set of samples. The additional set of COC records must be noted. Copies of the original may be sent with the split samples noted, or a separate form may be prepared by copying the appropriate information for the samples onto the additional form. In all cases, the use and need of the additional form should be noted.

Upon completion of the packing of each shipping container, the Field Sample Custodian shall confirm the completeness of the COC record by signing the COC record. If a multiple-part form is used:

- The original copy is put into the shipping container
- The first copy is sent immediately (preferably by fax) to the Program Manager or designee
- The second copy is kept with the FLB/FN or copy of the field form.

If a single part form is used, photo copies should be made for the Program Manager and the FLB.

After the COC record is completed and all samples are packaged and shipped to the appropriate locations, the person relinquishing the samples to

the laboratory or agency shall request the representative's signature acknowledging sample receipt. If the representative is unavailable or refuses to sign, this is noted in the "received by" space.

Field COC terminates upon laboratory receipt of the samples. The laboratory should complete the "received by" sections and if appropriate, the "preservative checks" sections on the COC record and return the original signed record to the Program Manager. If there are any discrepancies between the COC record, the contents of the shipping container, and the SAP or contract requirements provided to the laboratory, the samples in question shall be segregated from normal sample storage, and the laboratory shall immediately notify the Program Manager. In some cases, the laboratory checks the sample submittal and recordkeeping to ensure adherence to the SAP. This added check is often used in drinking water and wastewater testing programs for compliance monitoring. Recordkeeping and information checks should be performed by the laboratory to ensure the samples received meet the requirements of the SAP.

3.5.5.3. Custody Seals (Optional)

Custody seals are narrow strips of adhesive paper used to indicate whether a shipping container has been opened during shipment. The seals are placed along the edges of the most exterior container in which samples are enclosed. It is not always necessary to place seals on individual sample containers in the shipping container.

Paper custody seals should be signed and applied before the shipping container is shipped to the laboratory. The preferred procedure includes use of a custody seal attached to the front-right and back-left of the container. Custody seals are covered with clear plastic tape. Another way to use custody seals, is to put all sample containers with packing and ice in a large garbage bag and seal the garbage bag with a signed custody seal.

3.5.5.4. Custody Transfer

Transfer of custody and shipment procedures are as follows.

- Each sample shipping container shall be accompanied by a properly completed COC record. The original of the record shall be included in the container. The Field Sample Custodian shall keep a copy of the completed form as part of permanent documentation and will send a copy of the COC record to the Program Manager.
- When transferring possession of samples, individuals relinquishing and receiving shall sign, date, and note the time of the transfer. This record documents custody transfer from the Field Sample Custodian to another person, to a mobile laboratory, to the permanent laboratory, or to a secure storage area.
- If the sample container is sent by common carrier, a bill of lading shall be used. Bill of lading receipts shall be sent to the Program Manager for permanent retention. If sent by mail, the package shall be registered with return receipt requested. Commercial carriers and the U.S Postal Service are not required to sign off on the COC record as long as it is sealed inside the package with the sample container and the custody seals remain intact (if used).
- Authorizes the payment for the analyses
- Alerts the laboratory to any anticipated hazards associated with the samples and custody procedures to be followed while the samples are in the possession of the laboratory
- Specifies the reporting requirements and content for the final report from the laboratory
- Instructs the laboratory as to the disposition of the samples after the completion of the analyses.

3.6. Sample Packaging, Handling, and Transportation

The Field Sample Custodian is responsible for the proper field storage, security, packing, and shipping of the samples from the field to the laboratory or designated holding location. The packaging, labeling, and shipment of samples by common carrier are regulated by the DOT and the International Civil Aviation Organization (ICAO)/International Air Transport Association (IATA), when appropriate. Instructions for classification, labeling, and packaging of hazardous materials are contained in DOT regulations (49 CFR 172 and 173, and subsequent Parts). Overnight couriers generally accept materials shipped under these regulations. However, some couriers have additional restrictions for hazardous shipments. EPA also regulates the shipment of hazardous waste and hazardous material by requiring labeling on certain packages.

The procedure for determining whether a sample is hazardous under DOT regulations is complex, as is the determination of the proper shipping name, packaging requirements, and labeling requirements for DOT hazardous materials. A summary of specific requirements are addressed below. Should questions arise, assistance is available from the DOT (1-202-366-4000) and Federal Aviation Administration (FAA) (1-866-835-5322) hotlines.

Samples obtained at sites are classified for shipping purposes as either environmental (non-hazardous) samples or hazardous samples. If a material is being shipped for testing to determine its hazards, a tentative hazard class assignment

3.5.6. Request for Analysis

The Request for Analysis form is often incorporated into the COC record since the chain must accompany the samples. In more complex sampling programs, an additional form may be used to request testing.

When contracting for laboratory services and prior to submitting the samples, the laboratory should be contacted and the following information presented. The Request for Analysis form can be used as a preliminary contact mechanism to ensure that the scope of work is understood. This form:

- Specifies the analyses, procedures, and QC data to be performed on each sample container and the compliance protocols to be followed
- Specifies the laboratory accreditation/certification required to be maintained during the period of the contract

should be made based on knowledge of the material. Samples requiring special packaging or labeling are those containing chemicals that are listed as hazardous materials in:

- 49 CFR 172.101
- CERCLA RQ Hazardous Substances
- DOT CLASS 9 listed in 49 CFR 172.101 Appendix A, Poison DOT Class 6.1 and Flammable Liquids.

Environmental (non-hazardous) samples are those that are not classified as Hazardous Materials under DOT regulations, are packaged in quantities less than the CERCLA RQ, *and* for which a Hazardous Waste Manifest is not required by EPA. These samples require careful packing, but no special shipping procedures. In general, samples of groundwater, surface water (other than leachate or lagoons), and soil may be shipped as environmental samples (non-hazardous) to an analytical laboratory for testing if each of the sample containers contains less than 1 pound of soil or 1 gallon of water, and the entire shipping package weighs less than 66 pounds. Eventual analysis for a hazardous constituent does not necessarily classify a sample as a DOT hazardous material, nor does the classification of a material as a hazardous waste under EPA regulations. DOT regulations forbid the shipping of non-hazardous materials as hazardous. However, if any doubt exists as to whether the sample might be classified as a hazardous material, the sample should be treated as hazardous.

Note: For details on the shipping of non-hazardous waste, refer to *ASTM D6911-03: Standard Guide for Packaging and Shipping Environmental Samples for Laboratory Analysis*. This standard provides guidance in determining the most appropriate procedures for packaging and shipping environmental samples.

The storage and disposal of hazardous waste is regulated by the EPA. Hazardous waste, as specified in 40 CFR 262, is not exempted from EPA manifesting requirements. However, EPA RCRA regulations exempt samples collected for analysis or treatability testing from the RCRA requirements that otherwise apply to hazardous waste (including the requirement for a Hazardous

Waste Manifest). The definitions for these exemptions are:

- **Samples for Analysis.** 40 CFR 261.4(d): Samples of solid waste, water, soil, or air, which are collected for the sole purpose of testing to determine their characteristics or composition, when samples are being sent to the laboratory for testing or are being returned to the collector after testing.
- **Samples for Treatability Testing.** 40 CFR 261.4(e): Samples collected for the purpose of conducting treatability studies when they are being transported to the testing facility provided they meet criteria for the quantity of material, packaging, and permit status of the receiving facility.

3.6.1. Sample Packaging Requirements

The Field Sample Custodian is responsible for the packing and shipping of the samples from the field to the laboratory. Samples shall be properly packaged for shipment and dispatched to the laboratory for analysis with a signed custody record enclosed in the shipping container box or cooler. Shipping containers shall be locked or secured with strapping tape in at least two locations. Shipments that are sent to an on-site laboratory or one in close proximity that does not require the use of a common carrier shall be transferred in accordance with local regulations. Table 3-1 below lists sample packaging procedures that will ensure samples arrive at the laboratory with the COC record intact.

The following major issues must be addressed in preparing environmental samples for shipment to the laboratory by common carrier:

- Compliance with EPA regulations, so the samples are not classified as hazardous waste
- Compliance with transportation regulations, including use of the proper shipping containers, use of warning labels, and completion of the required paper work
- Packing, to assure that the samples do not break or leak during shipping. This includes:

- Using approved containers meeting DOT drop test specification
- Lining coolers or containers with plastic bags
- For glass containers, wrapping each in bubble wrap and placing in a clear plastic resealable food bag
- For plastic containers, placing each in a clear plastic resealable food bag
- Never stacking glass containers or laying glass on its side.

3.6.1.1. Samples Classified as Flammable Liquid

Table 3-2 Column 1 lists packaging procedures that apply to those flammable and combustible liquids that do not meet the definitions of another hazard class except DOT Class 9, and for which exceptions under 49 CFR 173.150 are allowed. This includes Flammable Liquids Not Otherwise Specified (NOS), toluene, gasoline, and many of the other flammable liquids that are commonly encountered on hazardous waste sites.

Note: The DOT definition of “liquid” is different from that used by EPA. For purposes of transportation, liquid means a material that has a vertical flow of over 2 inches (50 mm) within a 3-minute period, or a material having 1 gram or more liquid separation, when determined in accordance with the procedures specified in *ASTM D4359-90, Standard Test Procedure for Determining whether a Material is a Liquid or Solid*, (49 CFR 171.8).

3.6.1.2. Samples Classified as Poison — DOT Class 6

Table 3-2 Column 2 lists packaging procedures that apply to those poisonous liquids and solids for which exceptions under 49 CFR 173.153 are allowed. This includes 1,1,1-trichloroethane,

trichloroethylene, trichlorobenzene, PCB transformer oil, and many of the other poisonous materials commonly encountered.

3.6.1.3. CERCLA Reportable Quantities — DOT Class 9

Table 3-2 Column 3 lists packaging procedures for substances (liquids and solids) where the waste material is not otherwise classified as a DOT Hazardous Material because of hazardous properties *and* for which the entry in Column 8a of 49 CFR 172.101 Table is 155. For the shipment of larger quantities of EPA hazardous waste and DOT Class 9 hazardous substances where the quantity of material in each container *exceeds* the CERCLA RQ and no other DOT Hazardous Material classification applies, the following packaging requirements apply:

- Label each container with a separate container number
- Seal each drum or pail with a Security Seal
- Prepare one COC record for each group of containers that is being shipped at the same time to the same destination. List the container numbers on the COC record.

These shipments may include EPA Hazardous Waste in 5-gallon cans and 55-gallon drums. Most DOT containers are approved. The list of approved containers for packing Groups II and III Class 9 Hazardous Substances are listed in §173.203 for liquids and §173.213 for solids. These lists include steel, aluminum, plastic and fiber drums (solids only). Quantity limitations are shown in 49 CFR 172.101, Column 9.

Table 3-1. Packaging by Common Carrier

Instructions	By Common Carrier	
	Non-hazardous Samples	Hazardous Samples
Secure sample container lids with strapping tape.	1*	1*
Mark the level of material in each sample container with a grease pencil.	2	2
Place each container in a clear plastic resealable food bag so that the sample container label can be read.		3
Place about ½ inch of inorganic cushioning material such as vermiculite in the bottom of a metal can.		4
Place each container in a separate can and fill the remaining volume of the can with an inorganic cushioning material such as vermiculite (do not use plastic foam cushioning material as it could dissolve if the sample container were to leak).		5
Close the can using three clips to secure the lid.		6
Write the sample number on the can lid. Indicate “This Side Up” by drawing an arrow on the can.		7
Put about 1 inch of cushioning material (e.g., vermiculite or plastic foam) in the bottom of a watertight metal or equivalent strength plastic shipping container. If the container is a cooler, seal the drain plug on the inside of the cooler with tape. Also line the inside of the container with a plastic bag.	3	8
Wrap glass bottles and jars in plastic bubble wrap.	4	
Place cans in the container and fill the remaining volume of the shipping container with packing material. Add ice bags if required.		9
Place the sample containers top-up in the shipping container. Arrange the sample containers so that glass containers are surrounded by plastic containers.	5	
Fill the void space around and on top of the sample containers with plastic bags filled with ice cubes or ice chips.	6	
Seal the COC record in a clear plastic resealable food bag and tape it securely to the inside of the shipping container lid.	7	10
Close and lock or latch the shipping container.	8	11

Instructions	By Common Carrier	
	Non-hazardous Samples	Hazardous Samples
If the shipping container used is a picnic cooler, use tape to seal the drain plug.	9	12
After acceptance by the shipper, tape the shipping container completely around with strapping tape at two locations. Secure the lid with tape. Do not cover any labels.		13
Place the laboratory address on the top of the shipping container.		14
For all hazardous shipments, complete shipper's hazardous material certification form.		15
Place a "This End Up" label on the lid and on all four sides of the shipping container.	10	16
Affix the signed and dated custody seals on the front right and back left of the shipping container. Cover the seals with wide, clear tape.	11	17

*Numbers indicate the instructions that must be followed.

Table 3-2. Packaging Not by Common Carrier

Instructions	Flammable Liquid	Poison DOT Class 6.1	DOT Class 9
<p><i>Quantity limitations shipped by cargo aircraft</i> Gross weight of package:</p> <p>Total quantity of flammable liquid:</p> <p>Maximum sample container size:</p>	<p>66 pounds</p> <p>49 CFR 172.101 Table, Column 6b</p> <p>49 CFR 172.101 Table, Column 5 <i>or</i> The flash point of the liquid</p>	<p>66 pounds</p> <p><i>Liquids – 4 liters (1 gallon)</i> <i>Solids – 5 kilograms (11 pounds)</i></p>	<p>66 pounds</p> <p><i>Liquids – 4 liters (1 gallon)</i> <i>Solids – 5 kilograms (11 pounds)</i></p>
Check the caps of all sample containers to assure that they are secure. Tape caps.	1*	1*	1*
Place each sample container in an individual 6-mL plastic bag and secure with a twist tie. The sample identification tag should be positioned to enable it to be read through the bag.	2	2	2
Place sample containers in paint cans in a manner that will prevent bottle breakage.	3	<i>Liquids: 3</i>	
Place vermiculite in the paint can around the samples. The amount of vermiculite used should be sufficient to absorb the sample if a sample container should break.	4		
Secure the lid to the paint can with can clips and label the outside of the can with the sample ID numbers and quantity.	5		
Wrap bubble wrap around each glass sample container and fix with tape.		<i>Solids: 4</i>	3
Package the paint cans in DOT boxes or cooler. Use additional packaging to secure cans.	6		
Seal the drain plug with tape on the inside and outside of the cooler and line		5	4

Instructions	Flammable Liquid	Poison DOT Class 6.1	DOT Class 9
the cooler with a plastic bag. Place the canned or bagged sample containers in the cooler. If plastic bottles are being used, alternate them with any glass container.			
Fill any voids in the cooler with additional packing material.	7	6	5
Place ice contained in bags on top of all sample containers within the cooler. Use as much ice as space will allow.	8	7	6
Place the COC record in a clear plastic resealable food bag and tape to the inside of the cooler lid. Label the outside of the cooler as containing the COC record.	9	8	7
Seal the cooler lid with clear tape or strapping tape. Affix security seals.	10	9	8

*Numbers indicate the instructions that must be followed.

3.6.2. Marking and Labeling

All samples *must be labeled* to prevent misidentification and should include the following information:

- Sample # or ID
- Date of collection
- Collector
- Analysis requested
- Preservative
- Sample location.

Sample labels must clearly link the sample to the field sheet or the COC record and must be written legibly and in permanent ink. In addition, all containers must be labeled and listed on the COC record.

Note: If a three-bottle set is used for VOAs, all three bottles must be labeled and listed on the COC record.

EPA TSCA regulations [40 CFR 761.40(e)] require that a PCB label be put on all containers whose surfaces are in direct contact with material that is over 50 parts per million (ppm) PCBs.

This requirement applies to sample containers as well as pails, drums, and other containers that are in direct contact with the PCB material. The labeling requirement does not apply to containers in which PCB sample containers are shipped.

Although the sample containers must be individually labeled, this requirement is not affected by the quantity of sample or whether the sample is classified as hazardous under RCRA or DOT regulations. For DOT Class 9 and EPA Hazardous Waste the following labeling requirements apply:

- If EPA Hazardous Waste Manifest is required:
 - Hazardous waste
 - liquid, NOS, NA3082
 - solid, NOS, NA3077
- If EPA Hazardous Waste Manifest *is not* required:
 - Environmentally hazardous substances
 - liquid, NOS, UN3082
 - solid, NOS, UN3077

OSHA's Hazard Communication Standard requires all containers of hazardous materials coming in or out of a workplace to be labeled with the contents, appropriate hazard warnings, and the name and address of the manufacturer. OSHA does not specify a standard labeling method, but some commonly used ones are provided by National Fire Protection Association (NFPA), Hazardous Materials Identification System (HMIS), ANSI, and DOT.

3.6.3. Shipping Papers

Ship high hazard samples via overnight courier following the courier's documentation requirements. A special airbill must be completed for each shipment. An EPA manifest must be prepared if the shipping container contains hazardous waste *unless* the samples are exempt. The Hazardous Waste Manifest must bear the handwritten signatures of the generator, transporter, and designated facility. A copy of the manifest must be kept for 3 years by the shipper. The shipping papers must contain the name, address, and handwritten signature of the shipper.

The shipping papers (and Hazardous Waste Manifest if used) must contain a 24-hour emergency response telephone number. This phone number must be monitored at all times while the hazardous material is in transportation, including storage incidental to transportation. The phone must be monitored by a person who is either knowledgeable of the hazards and characteristics of the hazardous material being shipped and has comprehensive emergency response and incident mitigation information for that material, or who has immediate access to a person who possesses such knowledge and information. The emergency response phone number must be entered on the shipping paper immediately following the description of the hazardous material or entered once on a shipping paper if the number applies to all of the hazardous materials and is indicated for emergency response information.

3.7. QA/QC Protocol

QC is a normal part of good field and laboratory practice. QC includes all of the procedures ap-

plied to data collection and generation activities to achieve and maintain the level of pre-established data quality. The desired level of data quality should be based on the intended use of the data. Therefore, the QC protocol should include all technical controls (e.g., sampling and analytical methods, use of field blanks, field duplicate samples, inclusion of performance testing or reference samples, statistical analysis, etc.). The controls start with the regulatory requirements of the data acquisition project and carry through to the ultimate data reporting and completion of all of the documentation of the use of these controls.

QA refers to the procedures used by management to assure that the QC is what is required and that it is being adhered to at any point in the project. QA constitutes the overview and monitoring processes designed to ensure that the quality of the data generated meets the desired levels as established by management. These controls include establishing DQOs based on the intended use of the data, the institution of procedures for formalizing planning documents prior to the initiation of data collection activities, and the use of audits to identify problems in both QC and QA.

The QA/QC protocol is specified in the SAP for each job that involves field sampling. QA/QC requirements are based on the level of data quality required for the project, and may address specific regulatory requirements. The purpose of a QA/QC protocol is to ensure the following:

- The laboratory receives samples that accurately represent the conditions existing at the sample site
- The results of the analysis are traceable to the specific sample location
- Compliance requirements are met.

The methods used to attain this protocol include training of personnel, providing detailed procedures for preparation, collection, marking and handling, packaging, packing, transfer of samples, and validation and verification of the administrative process and sampling techniques.

3.7.1. Decontamination of Sampling Equipment

The SAP should address the extent of decontamination and specify the procedures to prevent sample contamination. Sampling may be performed using separate laboratory cleaned equipment for each sample location. Procedure effectiveness should be checked for each matrix by submitting equipment decontamination blank samples to the laboratory for analysis.

Note: For specific information regarding the decontamination of field equipment, refer to *ASTM D5088-02, Standard Practices for Decontamination of Field Equipment Used at Waste Sites*. This standard describes the decontamination process for field equipment used in the sampling of soils, soil gas, sludges, surface water, and groundwater at waste sites. According to this standard, these practices are applicable only at sites where chemical (organic and inorganic) wastes are a concern, *not* for radiological, mixed (chemical and radiological), or biohazard sites.

3.7.2. Sample Container Cleanliness Requirements

Sample containers are a possible source of sample contamination. The SAP should specify the level of QC for sample containers. Pre-cleaned containers meeting EPA CERCLA cleanliness endurance criteria are available from several suppliers. If these containers are used, the serial number and QA batch number of each one should be recorded in the FLB/FN or on the field form. A review of the cleanliness should be made to ensure all parameters are checked to be below the detection limit of the contaminants to be tested for compliance. Some SDWA and CWA parameters may require laboratory cleaned containers proven to be below the limit of detection for the method.

Note: In no case should an effort be made in the field to decontaminate a sample container. If a container becomes contaminated, it should be replaced, with a note to that effect recorded in the FLB/FN.

3.7.3. Sample Container Type and Size Requirements

The types and sizes of sample containers to be filled for each sample will depend on method requirements and on QC requirements of the SAP. General sample container requirements are shown in Appendix B for different matrices and

analytical parameters. Compliance with specific instructions in the SAP is mandatory. If specified sample containers are not available, permission must be obtained from the Program Manager in writing for the use of other sizes and types of sample containers.

3.7.4. Sample Preservation and Storage Requirements

Special preservation and storage requirements should be specified in the SAP to ensure that samples do not undergo chemical changes from the time they were collected until their analysis by the laboratory. General requirements are specified in Appendix B. The specific requirements of the SAP will govern.

The quality of the reagents, water and materials used for preservation should be verified to ensure these items do not invalidate the reported results. Chemicals used as preservatives may be traced by lot number and quality by maintaining a reagent record keeping system. The water and acid preservatives used for trip and field blanks may be checked prior to use in the field and lot controlled to ensure no contamination is present prior to the material leaving the laboratory.

3.7.5. Sample Holding Time Limits

Even with preservation and special storage procedures, the composition of samples can change over time. The holding time for samples is the time from collection to laboratory preparation or analysis. Holding time limits summarized in Appendix B are method and program requirements. Site-specific holding times specified in the SAP take precedence.

3.7.6. Laboratory and Field Analytical Procedures

Laboratory analytical procedures for each parameter are specified based on the compliance limits, permit limits and data needs stated in the SAP. The SAP or COC record indicates to the laboratory which sample containers are to be analyzed for what parameters and specifies the analytical methods. Based on the DQOs, field testing may require the same level of QC as laboratory testing, and the procedures specified in

the field sampling or test plan must be followed exactly. Any deviations from established test procedures must be entered in the FLB/FN or on the field form and the Program Manager must be informed immediately of sample numbers affected.

3.7.7. QC Samples

Field QC samples are prepared and analyzed to determine whether test samples have become accidentally contaminated, check on the repeatability of the method, and ensure the samples are representative of the site or matrix sampled. A number of different QC samples may be specified. Each of the QC samples checks for a potential problem that can affect data reliability. The recommended frequency for each type of QC sample is summarized in Appendix C.

3.7.7.1. Test Sample

The test sample consists of one or more sample containers filled with material collected at one sampling point within a stated time. Several sampling containers may be required if material collected for analysis for different parameters must be preserved differently or sent to different laboratories. For a specific test sample, all containers are designated by the same sample location number, but may have different sample container numbers or designations to indicate variations made to the samples.

3.7.7.2. Field Duplicates and Split Samples

Field duplicate samples are two separate samples taken from the same source and are used to determine data repeatability based on field sampling and laboratory analysis procedures. Field duplicate samples are as follows:

- Assigned different container numbers
- Specified in the FLB/FN or on the field form
- Distinguished from the test samples on the COC record or field records
- Often submitted blind as to designation so the laboratory data assures objectivity.

Exception: Each test sample collected for a specific organic analysis may consist of two or more containers filled with the same material; these may be given different

container numbers but are designated as the same sample on the COC record. Only one sample container will be analyzed; the other being saved as a backup in case the laboratory must repeat the extraction and/or analysis. Duplicate samples for analysis consist of sets of two containers, with each pair of containers being designated on the COC record.

Field duplicate samples may be submitted to one laboratory for analysis for the same parameters. The comparability of the results provides information on the repeatability of the field sampling and laboratory analysis procedures.

The containers may be submitted to different laboratories for identical analyses to obtain information on inter-laboratory repeatability of field sampling and laboratory analysis procedures. This is a split sample.

Sample heterogeneity may cause major problems with the representativeness of field duplicate or split samples of soil/sediment matrices. Proper sample homogenization in the field will significantly improve the repeatability of the field sampling procedure. (Gy P. 1993, *Sampling for Analytical Purposes*, Wiley, West Sussex. Pitard F. F. 1993, *Pierre Gy's Sampling Theory and Sampling Practice: Heterogeneity, Sample Correctness and Statistical Process Control*, Books Britain, London.)

Typically, both field duplicates and split samples will be collected at a rate of 10% of field samples or at a minimum of one, per analyte, matrix, and sampling technique. More duplicates and split samples may be collected depending on the data quality needs.

3.7.7.3. Equipment Decontamination Blanks

Equipment decontamination blanks, or rinsate blanks, provide information on the levels of cross-contamination resulting from field or laboratory sample preparation actions. These blanks are specified in the SAP and on field sampling forms, and are prepared in the field. An equipment decontamination blank is usually reagent or deionized water that is free of the analyte of interest and is transported to the site, opened in the field, and poured over or through the sample collection device, collected in a sample container,

and returned to the laboratory and analyzed. This serves as a check on sampling device cleanliness. For example:

- **Field Groundwater Equipment Decontamination Blank for Metals Analysis.** Handled by the bailer, use ASTM Type II water, or better. Filter, place in a sample container, and preserve using the same procedures as for the test and duplicate samples.
- **Soil Sampling Equipment Decontamination Blank for Semivolatile Organics.** Rinse the field equipment prior to its use and collect the rinsate for analysis.
- **PCB Wipe Sample Equipment Decontamination Blank.** Use a wipe pad to wipe the sampling template in the same way the pad is handled during the actual wipe sampling of a surface.

One equipment decontamination blank is collected for each type of equipment used during the day or sampling event. Equipment decontamination blanks are assigned container numbers from the same sequence as the test samples, and may not be distinguished from the test samples on the COC record. More blanks may be collected depending on the data quality needs.

3.7.7.4. Field Blanks

Field blanks are prepared and analyzed to check cleanliness of sample containers, environmental contamination, and purity of reagents or solvents used in the field. A sample container is filled with laboratory ASTM Type I or II water, preserved, shipped to the field with clean sample containers, opened in the field to exposure to ambient field air for a time compatible to field sampling process, and is closed and submitted for analysis using the same parameters as the test sample. The reported results will indicate the presence of contamination. Field blanks are most often used when measuring for volatile analytes.

3.7.7.5. Trip Blanks

A trip blank is used with VOA analysis of water. A blank may consist of two 40-milliliter VOA vials filled at the laboratory with laboratory ASTM Type I or II water, transported to the

sampling site and returned to the laboratory without being opened. This serves as a check on sample contamination during sample transport and shipping.

Note: The caps used on VOA vials have Teflon®-lined septa. The Teflon® side of the silicone septum should face the sample. Prior to closing a vial, make sure there is no soil particle or dirt on the sealing surface of the VOA vial to prevent leaks. If a high concentration of volatile chemicals is present in the air in a shipping container, these chemicals can pass through the septum and contaminate the sample.

A trip blank is included in each shipping container used to ship VOA water samples. One VOA trip blank (two vials) is submitted to the laboratory in each cooler or per sampling event. The frequency of collection for trip blanks is specified in the SAP and is based on the data quality needs. Trip blanks are assigned container numbers from the same sequence used for the test samples, and are not designated as blanks on the COC record.

3.7.7.6. Matrix Spike (MS)/Matrix Spike Duplicate (MSD)

Project or compliance QC procedures require that the laboratory spike a portion of the matrix with a predetermined quantity of analyte(s) prior to sample extraction/digestion and analysis. The frequency of performing an MS is dependent on the data quality needs and method requirements.

A spiked sample is processed and analyzed in the same manner as the sample. The result of the analysis of the spike compared with the non-spike sample indicates the ability of the test procedures to recover the analyte from the matrix, and provides a measure of the performance of the analytical method executed by the laboratory.

For an MSD, a second portion of the matrix is spiked, and the recovery of the MSD can be compared with the recovery of the MS.

Depending on the matrix and analysis, additional sample containers may be specified to provide enough material for this laboratory procedure. These sample containers are assigned container numbers from the same sequence as the test samples and are designated MS/MSD materials on the COC record.

The MS/MSD samples are commonly used in CERCLA testing, but are not commonly used in CWA or SDWA testing. MSs are routinely performed by the laboratory as part of its internal QC on randomly chosen samples. If MS data is required for SDWA or CWA reporting requirements, a request must be made to the laboratory to ensure the MS is performed and reported on the appropriate sample. The sample selected for MSs should have the same or similar matrix as the field samples' but without high levels of target analytes.

3.7.8. Field Audits

The SAP will specify who will conduct field audits, along with their frequency and procedures. QA/QC procedures of the sample collection effort must identify and determine the magnitude of error associated with the contamination introduced through the sample collection effort. Audits are perhaps the most effective tool to ensure that the sampling is done correctly. The two factors most likely to influence the magnitude of the sample collection error are collection methods and frequency of sampling.

In general, a field sampling audit provides an independent outside check on the following:

- **Field Records**
 - COC records
 - Sample container labels
 - FLBs or field forms
 - Personnel training records
- **Sampling Procedures**
 - Equipment
 - Sample containers
 - Accuracy of sample location descriptions
 - Comparability of field sampling techniques
 - Collection and preparation of QC samples
 - Sample preservation
 - Equipment decontamination
 - Contaminated waste storage and disposal

- Sample packing, storage, security, and transportation
- Shipping containers, including use of custody seals (if applicable).

3.8. Generic Sampling Equipment List


Equipment specific to each type of media is found at the end of the related chapters. The following is a generic sampling equipment list:

- Map of sampling location(s)
- Sampling SOP
- FLB or field form
- Pens
- Containers
- Preservatives
- Labels
- Markers
- Coolers
- Ice
- Packing material
- Packaging tape
- COC form
- Custody seals (if required)
- Decontamination storage containers, equipment, and materials
- Personal safety equipment, safety test equipment
- Field screening or testing equipment, standards, reagents, and SOP
- Testing field forms or logbooks
- Laboratory instructions (if different from custody form).

Fieldwork Documentation

Document Number	FSOP-001
Revision	1
Department	Ahtna Southwest Operations
Previous Document Number	Original Document
Originally Released	April 1, 2022
Effective Date	October 10, 2022

Approvals

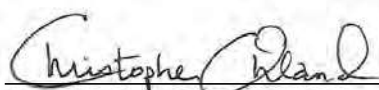

Christopher Ohland
SWE Quality Assurance Manager

October 10, 2022

Date



Bruce Wilcer

October 10, 2022

Date

Project-Specific Modification^[1]

[1] Document project-specific modifications in this section. No other modification to the SOP is authorized.

Revision History

Rev 1, 10/10/2022: Revised to include PFAS- friendly supplies and procedures.

Table of Contents

Table of Contents	3
1.0 Introduction	4
1.1 Purpose	4
1.2 Scope	4
1.3 Roles and Responsibilities	5
1.4 Definitions	6
2.0 Relevant Documents	6
3.0 Equipment List	7
4.0 Procedures	7
4.1 Document Control and Storage	7
4.1.1 Project File	7
4.1.2 Problems in the Field and Variances from Project Plans	8
4.1.3 Field Logbook.....	8
4.1.4 Field Notepads.....	9
4.1.5 Field Forms	9
4.1.6 Electronic Files	10
4.2 Field Logbook	11
4.2.1 Guidelines	12
4.2.2 Entries to Include.....	12
4.2.3 Documentation of Project Variances.....	13
4.2.4 References to Locations.....	14
4.3 Notepads	14
4.4 Field Forms	14
4.5 Field Documentation Data Package	14
5.0 Quality Assurance/Quality Control	15
6.0 Documentation Review	15
7.0 References	15

1.0 Introduction

1.1 Purpose

This SOP provides field personnel with the procedures for:

- Recording real-time, chronological logs of field activities and circumstances in field logbooks/notepads, field forms, and digital/electronic media
- Documenting fieldwork and fieldwork variances
- Ensuring documentation is reviewed, organized, and safely stored until the project closed out

Adequate documentation is necessary to describe the work performed and variances to work plans if any. Attention to detail is vital since field documentation protects our client and Ahtna with secure, legally defensible evidence and has been helpful in administrative, legal, and cost-recovery requirements. For example, field documentation may be used as evidence in legal proceedings to defend procedures and techniques employed during site investigations. Therefore, field documentation must be factual, complete, accurate, consistent, and not contain subjective language. These principles also apply when photographic or videography techniques document site activities. The goal of written, digital, and photographic/video graphics documentation is to represent field activities that accurately portray site conditions or procedures.

1.2 Scope

The scope of this SOP includes data entry and format requirements for various field documentation.

When required by the project, use the PFAS-free equipment, materials, and procedures recommended in this SOP which are indicated by [PFAS Project].

Written records

- Field logbooks
- Field notepads
- Field forms

Digital records

- Audio
- Photographic/video
- Data loggers

Digital data entry using field tablets is described in the EQUIS Collect User Guide.

- **Note:** *It is important to review contracts and Performance Work Statements to identify specific documentation and format requirements applicable to your project.*
- **Note:** *Contracts may contain requirements for field records. The typical language states: "The Contractor shall maintain field records sufficiently to recreate all field activities. The information shall be recorded in a permanently bound notebook with sequentially numbered pages. At the end of each workday, the Contractor shall complete a daily log."*

- **Note:** *Contracts issued by the USACE may contain requirements for the project archive, both ongoing and after completion of the contract.*

1.3 Roles and Responsibilities

Field Team. A Field Team is one or more individuals working together. Each Field Team is responsible for maintaining a field log of their activities, as applicable

Field Team Lead (FTL). The FTL provides direction and oversight of the fieldwork. The FTL is responsible for reviewing and confirming the adequacy of the field documentation during fieldwork as soon as possible and before releasing the daily quality control report. The FTL keeps the Project (PL) informed of field variances or problems encountered in the field.

Project Lead (PL). The PL is responsible for providing adequate resources to the field staff and ensuring that field staff has adequate experience and training to comply with this SOP successfully. The PL is responsible for approving and documenting techniques not described in this SOP but are considered the best methods for the current project. The PL documents changes as a variance to the plans and forwards the variance to the Program Manager (PgM) for approval. The PL is also responsible for confirming the adequacy of the field documentation after fieldwork. An entry confirming which information was reviewed must be added to the post-event field documentation package (Section 5.0).

Program Manager (PgM). For each SWE Program, the PgM is responsible for providing written instruction to their Field Team, which complies with the requirements of this SOP and the client-contracted specifications.

Site Supervisor.¹ The Site Supervisor is responsible for maintaining a project-specific FLB/notepad and field forms of their activities, as applicable, and providing copies to the PL for review.

Safety Representative. The Safety Representative meets the experience and training requirements of USACE EM-385-1-1 (USACE, 2014). The Safety Representative oversees site-specific health and safety activities and ensures compliance with the project requirements. The Safety Representative notifies the FTL of safety deficiencies and incidents and actions to correct those. If the circumstance warrants, the FTL approves those actions and notifies the PL and Site Safety and Health Officer for their approval.

Quality Control Lead (QC Lead). The QC Lead ensures work inspections are performed using the 3-Phases of Quality Control. Method described in the project work plans. The QC Lead notifies the PL of quality deficiencies and actions to correct those. The PL approves those actions or notifies the SWE Field QC Manager for their approval if the circumstance warrants involvement.

SWE Quality Assurance Manager and SWE Field QC Manager report to the SWE Vice-President. When mentioned in this SOP, The “SWE” prefix is shown to distinguish from the QC Lead assignment shown in the project organization chart.

¹ In this context, a Site Supervisor is a person assigned to oversee long-term operations or construction work; the roles and responsibilities are like that of the Field Team Leader.

1.4 Definitions

Field Documentation – The combination of field logbooks/notepads, field forms, digital/electronic forms, and other documentation in the project file.

Field Logbook (FLB) – A portable, bound, weatherproof notebook with consecutively numbered pages.

[PFAS Project]: Use field logbook made of standard/loose plain paper (non-weatherproof), held together by an aluminum or Masonite field clipboard. Alternatively, a spiral-bound notebook with non-weatherproof paper and/or cover can be used.

Field Notepad – An unbound, company notepad containing pre-printed heading block and space (straight-lined, grid lined, or open) for recording information. This can be an alternative to the FLB. The notepad can be paper or electronic (Word, Excel, Access, etc.) as long as a hard copy of the individual sheets is sequentially numbered and maintained in a properly labeled binder/file folder.

Field Forms – Any documentation that preserves an accurate historical record of field activities but is recorded on unbound paper. These forms should be referenced in the FLB. A listing of the most commonly used SWE field forms is provided in Section 2, “Relevant Documents.” Each data entry field should have an entry or indicate that data for that field is not available or not required.

[PFAS Project]: Record of field events will be maintained on loose paper (PFAS-free) secured on Masonite or aluminum clipboards. Plastic clipboards, binders, or spiral hard cover notebooks are not acceptable. Field logbooks are permanently assigned to a specific project.

In addition, Field Form FFRM-004.00 “Daily PFAS Sampling Checklist, must be completed each day of fieldwork when activities may compromise environmental media that is sampled.

Data Loggers – Field equipment providing digital/electronic information to supplement field forms. Examples include water-level transducers for aquifer tests, flow sensors and meters in pump and treat systems, and air monitoring equipment (Section 4.1.7).

Digital/Electronic Files – Any documentation that preserves an accurate historical record of field activities but is recorded electronically through field instruments and digital devices. These records should be referenced in the FLB. Digital/electronic information includes global positioning system (GPS) coordinates, photographs, and videos.

2.0 Relevant Documents

SWE file folder m:\\Environmental\\Quality Control Procedures\\SWE Field Forms\\ has the current, approved form templates.

3.0 Equipment List

[PFAS Project]: Products containing waterproof features (e.g., Post-it-notes, waterproof coated paper) cannot be used on per- and polyfluoroalkyl substances (PFAS) projects.

- Applicable field forms

[PFAS Project]: Work activities will be maintained on loose paper (PFAS-free) secured on Masonite or aluminum clipboards. Plastic clipboards, binders, or spiral hard cover notebooks are not acceptable.

- Bound, waterproof field logbook (FLB; e.g., Rite in the Rain™ or similar) with pre-numbered consecutive pages for field documentation or notepad

[PFAS Project]: Use field logbook made of standard/loose plain paper (non-weatherproof), held together by an aluminum or Masonite field clipboard. Alternatively, a spiral-bound notebook with non-weatherproof paper and/or cover can be used.

- Waterproof, indelible pens/markers in black or blue ink

[PFAS Project]: Ball-point pens: do not use markers, felt pens, or pens with water resistant ink

- Digital camera/video, cell phone, or other devices capable of digital imagery
- Electronic device(s) for recording and storing field-related data (e.g., data loggers and GPS units)
- Batteries and charging blocks

4.0 Procedures

This section describes various mechanisms of recording documentation, including requirements and procedures. Before fieldwork, each project should define project instructions that identify the mechanism for documentation. The instruction is intended to promote procedural consistency, defined roles and responsibilities, and common language across project teams, promoting efficient reviews and cross-team utilization and training. Once established, project staff shall follow the project instruction.

4.1 Document Control and Storage

4.1.1 Project File

While in the field, the fieldwork documentation project file is managed by the FTL and consists of:

- Written records: FLB/notepads, field forms
- Digital/electronic records: photos, videos, GPS records
- Downloads from electronic devices such as data loggers

The PL is responsible for providing the location and details for storage. All field documentation is a part of the project file and should be maintained with safe document handling and archiving procedures. Hardcopy documentation and digital files are official records of fieldwork. Scans of official records are helpful for ease of access to project information and generating reports but are not official records.

The PL is responsible for all forms of field documentation, and scans of paperwork, digital records, and downloads from electronic devices are placed in the m:\ drive project file. All original documents shall be assembled into a data package, submitted to the PL, and archived in the project file. The goal is that all documentation is organized by task/event and stored in a single location.

4.1.2 Problems in the Field and Variances from Project Plans

Variances or problems encountered during the fieldwork that cannot be resolved promptly must be communicated promptly in writing to the FTL /Site Supervisor, who will notify the PL. This may be completed by sending a variance notice by email or other means to promptly communicate the variance or problem and allow for the continuation of the fieldwork. The PL shall provide written approval of recommended solutions or provide an approved alternate solution.

The need for a corrective action addressing variances or problems in the field will be determined by the PL in collaboration with the FTL/Site Supervisor. The PL will notify the PgM and SWE Field QC Manager of any needed corrective action for their concurrence or follow-up.

Documentation of variances to project plans, problems encountered, or corrective actions will be kept in the FLB/notepad or forms.

4.1.3 Field Logbook

Field logbooks can be spiral- or adhesive-bound and are distributed by the PgM or designee. The cover of the FLB is labeled with the project number and name of the Installation/Site(s).

The inside cover of the FLB contains the name, address, phone, and email address of the PgM and a list of projects the FLB is used to record. The information is updated if the project is assigned to another PgM.



The FLB shall be project/task-specific. The Field Team uses the FLB to record details of their responsibility (e.g., sampling, QC, safety, oversight, etc.) and provide them to the FTL/Site Supervisor for their review before submitting daily QC reports (DQCRs).

The FLB records are scanned, and the scan is saved as a PDF file on the Ahtna server in the project folder to create an electronic record for project reports. The PL shall ensure the FLBs are stored safely until project closeout. The field job box could be used for temporary storage.

4.1.4 Field Notepads

Three-ring punched, loose-leaf notepads or individual sheets can be printed on field form SWE-FFRM-001.² Each sheet contains a heading block, and block entries must be filled in on the first page of a new date.

Example Heading Block for Long-Term O&M or Construction

Installation/Site	Sharpe Army Depot/Sitewide	Project Number	05206.000.01.0000
Site Supervisor	Paul Marsden	Date	July 27, 2021
Subject	Telephone Record	Recorded By	Izzy Done

Example Heading Block for Environmental Studies

Project Number	05206.000.01.0000	FTL	Who Dunit
Installation/Site	MOTCO Site 2	Recorded By	Izzy Done
Event Name	1Q 2021 GW Sampling and LF Inspection	Date	July 27, 2021

Notepads (loose-leaf paper) are used by the Field Team to record details of their responsibility (e.g., sampling, plant operations, QC, safety, oversight, etc.) and provided to the FTL/Site Supervisor for their review before submitting DQCRs.

The PL shall ensure the sheets are stored in three-ring binders or another filing system (Section 5.0), labeled with the Installation/Site name, project number, and a descriptive name of the project. If an FLB or field form is also used, a scanned copy of the FLB pages and original copies of the field forms are stored in the binder. The sheets are sequentially numbered and reviewed by the FTL/Site Supervisor. The PL reviews and approves the Site Supervisor’s notepad sheets. The PL is responsible for safely storing the binder or other filing system until project closeout.

The notepad binder will be kept in the site office project file or job box. As soon as possible, the unbound records shall be scanned and saved on the Ahtna server in the m:\\ drive project folder to create an electronic record to ensure document preservation and use in project reports.

4.1.5 Field Forms

SWE-approved field form templates are available at M:\Environmental\Quality Control Procedures\SWE Field Forms\. Activity-specific SOPs reference the field forms that should be used. If preferred, individual sheets can be printed on pre-punched three-hole paper (or punched later). If the printer is capable, use a heavy paper stock for a durable form. Field forms supplement the FLB/notepad and provide a way to record detailed information using a structured format. When new forms are available, they will be posted

² Project-specific format designs may be used. Computer applications such as Microsoft Word or similar may also be used as long as the header information is shown, and printed copies are stored in three-ring binders.

in the template folder. The SWE Technical Writer oversees version control and will notify SWE staff when the form is posted.

Each sheet contains a heading block to enter the Installation/Site name, descriptive activity name, FTL, project number, and QAPP SOP number for the performed activity-specific fieldwork. Depending on the activity, the names of staff assigned with lead roles, weather conditions, date of recorded information, or other information may appear on the form. The heading block entries must be filled-in for each sheet to bind the field form to the project/activity.

Example Field Form Heading Block

Project Number	05108.001.02	FTL	Jared Wilson
Installation/Site	MOTCO/Site 1	SOP No.	FSOP-002
Activity Name	1Q 2021 GW Sampling and LF Inspection	Date	08/06/2021
Field Team (name/organization)	Jared Wilson/Ahtna, Izzy Done/Forever Waiting		
Weather Forecast	Sunny, 65–80°F, SW winds 5–10 mph		

Field forms are used by the Field Team to record details of their responsibility (e.g., sampling, O&M operations, QC, safety, oversight, etc.) and provided to the FTL/Site Supervisor for their review before submitting DQCRs.

The PL shall ensure the sheets are stored in three-ring binders or another filing system (Section 5.0), labeled with the Installation/Site name, project number, and a descriptive name of the project. If an FLB/notepad is also used, a scanned copy of the FLB/notepad pages and original copies of the field forms are stored in the binder. The sheets are sequentially numbered, reviewed, and approved by the PL. As soon as possible, the unbound forms shall be scanned and saved on the Ahtna server in the m:\ folder to create an electronic record to ensure document preservation and use in project reports.

The PL is responsible for safely storing the binder or other filing system until project closeout.

4.1.6 Electronic Files

Photographs and Video

All original digital field documentation (Section 1.4) shall be downloaded as soon as possible to a designated location for project use. Exclude files that are unnecessary due to unusable image quality or content. As soon as possible, the date/time, location, direction (compass point or radial degree), and purpose of the image should be documented before the information is forgotten. The use of metadata and smartphone applications to gather this information can assist. Files can be edited but maintain the original file and save the edited file with a suffix description. Alternately, use field form SWE-FFRM-002 to log photos. This form is helpful for tasks where few pictures will be taken.

The PL is responsible for providing the location and storage details. Files should be uploaded to the project folders and caption descriptions documented as soon as possible after the fieldwork ends.

Data Loggers

Examples of data loggers include equipment used in combination with:

- Water-level transducers for aquifer tests
- Flow sensors and meters in pump and treat systems
- Air monitoring equipment (e.g., particle counters)

The use of data loggers should be recorded in an FLB/notepad or field form and include the type of logger, make, model, S/N, calibration if required, and any input specifications used.

Document data acquisition activities using data loggers (data logging equipment) and related observations in the FLB/notepad. Written notes provide a permanent record of field activities that support digital data temporarily stored on various data loggers.

Specific steps and guidelines for the data acquisition activity being performed should be reviewed in the respective SOP guiding the activity.

The observations and data will be recorded in the FLB/notepad or field form. Because of the variability of features and operation of various data loggers, each field SOP and manufacturer's instructions should be carefully reviewed before beginning field activities.

The PL is responsible for providing the location and details for storage. Files should be uploaded to the project folders as soon as possible after the fieldwork ends. Files should not be edited. If needed, modifications to the captured data should be noted in the project reports. Hardcopy printouts in comma-delimited format (or similar) are recommended should the source file become corrupt.

Global Positioning Systems

GPS data acquisition activities and related observations will be digitally-recorded and later downloaded, and the file saved as described above.

Alternately, the GPS data can be recorded in field documentation to provide a permanent record of field activities supporting digital data that is temporarily stored on the GPS unit. As applicable, observations and data may be recorded in an FLB/notepad or field forms. The field forms will record the survey location identifier (e.g., well/boring location, structural feature) and corresponding coordinates and elevation.

The GPS operator should also be thoroughly familiar with the manufacturer's instructions and SOP for Global Positioning System (FSOP-103) before performing GPS work in the field.

4.2 Field Logbook

The FLB is the written record of all fieldwork elements, such as Ahtna staff, subcontractors, visitors at the site, weather forecast/conditions, field equipment calibrations, construction activities, and sample collection activities. Fieldwork can be recorded on a notepad or forms described in Sections 4.3 and 4.4. When field forms are used, a brief description of the activity is added to the FLB/notepad, and details are added to the form.

4.2.1 Guidelines

Pages 1 and 2 of the FLB should be reserved to provide a signature page and table of contents. The signature page lists the employee’s name, initials, and signature. The printed name and signature bind the employee to their written documentation, and the initial is helpful when limited space is available for writing a full name on subsequent pages. Each initial on page 1 must be unique. Page 2 is not required but helpful to quickly locate information in the FLB. If more space is needed, the back cover pages could be used. An entry for a significant event and the page number that initiates the documentation is typical. Open space on pages 1 and 2 does not need to be lined out, as the list will grow during work execution.

1			2	
Printed Name	Initial	Signature	<u>Table of Contents</u>	
Brittan Carlson	BC	<i>Brittan Carlson</i>	Waste Characterization Well Install	3
Bruce Wilcer	BW	<i>Bruce Wilcer</i>	2Q 2016 GW Monitoring	14
Connor Dunn	CD	<i>Connor Dunn</i>	3Q 2016 GW Monitoring	20
Jay Pu	JP	<i>Jay Pu</i>	Discovery of Alien Spacecraft	26
Sommer Carter	SC	<i>Sommer Carter</i>	4Q 2016 GW Monitoring	32
			2Q 2017 GW Monitoring	39

Field documentation shall adhere to the following guidelines:

- Write entries in blue or black waterproof ballpoint pen (older copier machines do not recognize other colors). Avoid felt tip pens. *Do not use a pencil.*
- List personnel making entries in the FLB and include initials and signatures on the inside cover page.
- Use a table of contents on page 2 (recommended but not required).
- Start a new page at the beginning of each day.
- Entries should be chronological – a time notation should introduce each entry.
- Language should be objective, factual, and free of personal feelings or inappropriate terminology.
- Do not erase or scratch out errors. Draw a single line through the error, then insert the corrected material. The person who corrected it shall initial and date the correction. If an explanation is needed, add that in the next available blank area in the FLB and cross-reference the error and explanation.
- The FLB shall be signed at the end of each day. Signatures shall be written on a single diagonal line drawn across the blank portion of the page following the day’s last entry.
- All FLB shall be returned to the FTL/Site Supervisor for review and safe storage. The FTL/Site Supervisor shall review daily as soon as possible and before the DQCR is released.

4.2.2 Entries to Include

Initial daily entries shall include the following:

- **Date and time:** The time shall be based on military time (i.e., 2100 instead of 9 pm)
- **Field Team Leader:** Name of the Field Team Leader or Site Supervisor
- **Safety Representative:** Name of the task Safety Representative (meets EM 385-1-1 requirements)
- **QC Lead:** Name of the task QC Lead

- **Site Personnel:** Full name, title/role, and affiliation of personnel onsite, including visitors and subcontractors, with arrival and departure time noted
- **Planned Activities:** General description of various work activities for the day
- **Weather:** Weather forecast (temperature, cloud cover, wind speed, and direction). Changing weather that impact site conditions should be recorded throughout the day
- **Notes:** Taken By: Name(s) the FLB/notepad author(s)

The following are examples of ongoing daily entries. Use those and others as applicable:

- When field forms are used, record a brief description of the field activity, then record details on the field form. Do not duplicate information referenced on the field forms in the daily field documentation
- Participation in the Site Safety Tailgate Meeting, details can be added to the Site Safety and Tailgate Meeting form
- Level of personal protective equipment (PPE) and describe upgrade and downgrade of PPE levels
- Type of field instrumentation and calibrations performed, details can be added to the equipment calibration form
- Work start/stop times
- Time and location of activities
- Site physical conditions, changing weather conditions, major task decisions, or other valuable site investigation information and other essential observations
- Level of PPE and describe upgrade and downgrade of PPE levels
- All relevant field observations, major task decisions, or other valuable site investigation information
- Location of work areas if the survey has not been completed
- Survey and location of any sampling points, including swing-tie measurements
- Decontamination times and methods
- All field measurements. If field measurements of this type are being recorded on dedicated field forms, it is not necessary to record in the FLB, but the use of the form should be noted
- Type, amount, method, and location of storing and disposal for investigation-derived waste
- Changes/deviations/variances from the work plan and reason for deviations change/variance.
- Thoroughly document all FTL/Site Supervisor or PL-approved directives, guidance, or potential corrective actions from client and oversight government personnel. Directives that give personnel specific authority to make critical decisions must be documented in the FLB
- Communications with the FTL, Site Supervisor, or PL or client about decisions being made in the field
- Work deficiencies and corrective actions
- Approved work variances
- Persons contacted and topics discussed

4.2.3 Documentation of Project Variances

Thoroughly document all variances from the Performance Work Statements, Work Plans, and QAPP or changes in fieldwork procedures. Problems, delays, or any unusual occurrences such as improper equipment or breakdowns should be included, along with PL-approved resolutions. Summarize the content and conclusions of all relevant meetings, discussions, and telephone conversations that involve you.

4.2.4 References to Locations

This section applies to new locations. Established locations are referred to by the location name or code. Previously established locations are typically shown on site maps/figures.

Whenever an activity (sample collection, field measurement/monitoring, etc.) is performed at a new location (i.e., the location has not been surveyed and shown in a figure), mark the location with a survey stake or similar marker, a detailed description of the location must be recorded in the FLB/notepad or field form and accompanied by a photo, sketch, or point on an attached map as part of the daily field documentation package (sketches with accompanying photographs when appropriate, with north arrow and approximate scale). Record unusual site physical conditions or signs of contamination such as oily discharges, discolored surfaces, unusual odors, dead or distressed vegetation, including types of plants, if possible.

4.3 Notepads

When notepads are used, the requirement and procedures for the FLB (Section 4.2) also apply to the notepad documentation.

4.4 Field Forms

Field forms are used in addition to FLBs/notepads. Field forms are activity-specific and may be completed for each location/sample/well, etc., or one per field event as appropriate. Each form contains a heading block to bind the field form to the FLB/notepad. Field forms augment but do not replace the FLB/notepads. Avoid duplicating information recorded in the FLB/notepad and field form.

The forms include space (check box, table cell, and underlined space) for recording the information necessary for the project to ensure complete and proper information is recorded. Each space must be completed on a field form, and if not needed, then struck out or listing "not applicable." Blank space can be misunderstood as missing information. Version-controlled template files of the forms are stored in the M:\Environmental\Quality Control Procedures\SWE Field Forms.

Field forms may be modified for project-specific use with the SWE Quality Assurance Manager's approval.

All unbound data documentation is a part of the field records and should be maintained with safe document handling and archiving procedures. These records should be recorded in the same manner as notes in the FLB/field notepad using black or blue waterproof, indelible ink, and on weatherproof paper as necessary (projects testing for PFAS cannot use products with fluorinated constituents).

4.5 Field Documentation Data Package

After a short-term, specific event (e.g., well installation, sample collection, landfill inspection, and similar), copies of the FLB pages and hardcopies of loose-leaf documentation and relevant correspondence (emails and phone records) should be organized assembled into an event-based data package. The package should include a cover page listing the Installation/Site, project number, and event description.

The PL is responsible for the safe storage of the data package until project closeout. A copy of the package should be scanned and saved in the m:\ drive project folder. The scan file could replace other scanned files described in the project instructions (Section 4.0).

If the fieldwork is a long-term task such as operating an O&M treatment system, remedial actions (e.g., excavation and disposal), or other qualifying fieldwork, the timeframe for producing the data package should be defined in the PgMs project instructions, but that period should not exceed one per year or end of the contract period.

5.0 Quality Assurance/Quality Control

Conduct the 3-Phases of Quality Control Method described in the project work plans.

Quality Assurance (QA) and QC procedures for field documentation review will be performed by the FTL/Site Supervisor and checked by the PL to ensure the content and level of detail comply with this SOP. The FTL/Site Supervisor can approve variances and fieldwork problems in coordination with the PL. The FTL/Site Supervisor should try to resolve the issue so that work can continue; however, should the variance/incident/problem affect the contracted scope of work or a project decision made from the evaluation of date, the resolution must be coordinated with PgM and SWE Field QC Manager if corrective action is needed. The PgM should notify the SWE Quality Assurance Manager of all corrective actions.

6.0 Documentation Review

The FTL is responsible for the daily review of the fieldwork documentation for compliance with requirements (Section 4.0 "Procedures") and legibility. Errors and omissions should be explained and revisions to an entry signed and dated by the FTL.

The PL is responsible for reviewing and signing approved documents stored in the project file (Section 4.1).

7.0 References

U.S. Department of Defense, 2013. *DoD Environmental Field Sampling Handbook, Revision 1.0*. April.

Sample Management

Document Number	SWE-FSOP-002
Revision	1
Department	Southwest Operations
Previous Document Number	Original Document
Originally Released	October 10, 2022
Effective Date	April 1, 2022

Approvals



Christopher Ohland
SWE Quality Assurance Manager

October 10, 2022
Date



Bruce Wilcer
SWE Field Quality Control Manager

October 10, 2022
Date

Project-Specific Modification^[1]

[1] Document project-specific modifications in this section. No other modification to the SOP is authorized.

Revision History

Rev 1, 10/10/2022: Revised to include PFAS-friendly supplies and procedures.

Table of Contents

Approvals	1
Table of Contents.....	3
1.0 Introduction	4
1.1 Purpose	4
1.2 Scope.....	4
1.3 Responsibilities.....	4
1.4 Definitions.....	5
2.0 Relevant Documents.....	5
3.0 Equipment List.....	6
4.0 Procedures	6
4.1 Sample Custody.....	6
4.2 Proper Sampling Equipment	6
4.3 Sample Collection and Handling	7
4.4 Sample Integrity	8
4.5 Sample Packing.....	9
4.6 Offsite Transport	10
4.7 Laboratory Acknowledgment.....	11
4.8 Document Control.....	11
5.0 Quality Assurance/Quality Control	11
6.0 Documentation Review.....	11
7.0 References	11

1.0 Introduction

1.1 Purpose

The purpose of this standard operating procedure (SOP) is to direct field staff in the proper techniques and documentation requirements to maintain sample custody and the labeling, packaging, and shipping of multimedia samples after they are collected.

Proper sample management from sample collection to laboratory receipt is essential to ensure the legal defensibility of the sample. Sample management is also needed to maintain sample integrity and successfully transport samples to the testing laboratory in an acceptable condition.

1.2 Scope

The scope of this SOP applies to field staff collecting samples. The field staff may be employed by Ahtna or by a subcontractor. Trained environmental professionals will be engaged in or directly supervise the subcontractors' collection and handling of environmental samples.

When required by the project, use the PFAS-free equipment, materials, and procedures recommended in this SOP which are indicated by [PFAS Project].

1.3 Responsibilities

Field Team. A Field Team is one or more individuals working together. The Field Team is responsible for the oversight of and/or collection of groundwater samples as specified in this SOP.

Field Team Lead (FTL). The FTL is responsible for reviewing project work plans to understand the health and safety needs, procedural specifications, and field documentation requirements. The FTL is responsible for reviewing and confirming the adequacy of the fieldwork documentation.

Project Lead (PL). The PL is responsible for providing adequate resources to the field staff and ensuring the Field Team has adequate experience and training to comply with the SOP successfully. The PL is responsible for approving and documenting techniques not described in this SOP but are considered the best methods for the current project.

Safety Representative. The Safety Representative meets the experience and training requirements of USACE EM-385-1-1 (USACE, 2014). The Safety Representative oversees site-specific health and safety activities and ensures compliance with the project requirements. The Safety Representative notifies the FTL of safety deficiencies and incidents and actions to correct those. The FTL approves those actions or, if the circumstance warrants, notifies the PL and Site Safety and Health Officer for their approval.

Quality Control Lead (QC Lead). The QC Lead ensures work inspections are performed using the 3-Phases of the Quality Control method described in the project work plans. The QC Lead notifies the PL of quality deficiencies and actions to correct those. The PL approves those actions or notifies the SWE Field QC Manager for their approval if the circumstance warrants involvement.

1.4 Definitions

Air or Ground Waybill. A shipping document that identifies the sender and addressee, transport carrier, size, and priority of a shipment transported by aircraft.

Chain of Custody. In legal contexts, is the chronological documentation or paper trail that records the sequence of custody, control, transfer, analysis, and disposition of materials, including physical or electronic evidence.

Dangerous Goods. Under the International Air Transport Association (IATA) definition, dangerous goods are articles or substances that can pose a hazard to health, safety, property, or the environment and are shown in the list of dangerous goods in the IATA regulations (IATA 1.0).

Environmental sample. According to the Department of Transportation (DOT) 49 Code of Federal Regulations (CFR) Section 172.101 Appendix A, any sample that has less than reportable quantities of any hazardous constituents.

Excepted Quantity (DOT & IATA Definition). A hazardous substance whose class is permitted on passenger aircraft but in such a small defined amount poses a low risk during transport by aircraft. Hazardous substances that meet the definition of Excepted Quantity may be exempted from documentation, packaging, marking, and labeling requirements typically required when presenting hazardous materials for passenger air transportation. Items shipped as excepted quantities are limited to volumes as specified in IATA Dangerous Goods Regulations, Table 2.6.A and DOT 49 CFR 173.4a.

Hazardous materials. DOT defines a hazardous material as any item or chemical which, when being transported or moved in commerce, is a risk to public safety or the environment and is regulated as such under its Pipeline and Hazardous Materials Safety Administration regulations (49 CFR 100-199), which includes the Hazardous Materials Regulations (49 CFR 171-180).

Sample label. An adhesive paper placed on sample containers or a tag tied to a sample container to designate a sample identification number and other identifying information.

2.0 Relevant Documents

This SOP is intended to be used in conjunction with the following SOPs, and as such, the equipment and materials needed for those activities are not included in this SOP:

Standard Operating Procedures

- SWE-FSOP-001, Field Documentation
- SWE-FSOP-400 Series, various sampling SOPs

Field Forms

- SWE-FFRM-004, Daily PFAS Sampling Checklist
- SWE-FFRM-002, Chain of Custody

3.0 Equipment List

- Gel or bag ice (determine which is appropriate)
 [PFAS Project]: Ice in polyethylene bags
- Bubble wrap and/or foam inserts
 [PFAS Project]: Avoid packing materials that contain PFAS and materials that absorb water, including paper, cardboard, and styrofoam; as they become soggy, they lose cushioning properties.
- Clear, strapping, or duct tape
 [PFAS Project]: Use PFAS-free tape
- Coolers
- Heavy-duty plastic bags
 [PFAS Project]: Use HDPE bags¹
- Plastic zip-top bags (i.e., quart and gallon)
 [PFAS Project]: Use HDPE bags¹
- Air or Ground Waybills
- Sample container labels
- Custody seals for coolers

4.0 Procedures

4.1 Sample Custody

Five aspects of sample custody.

- Use appropriate sampling equipment
- Properly handle and document samples, starting from the time of collection
- Keep samples within temperature controls and safely located until offsite transport
- Properly pack and transport samples from the field site to the laboratory
- Verify laboratory receipt of samples
- Ensure laboratory has a custody program (subcontractor responsibility)

4.2 Proper Sampling Equipment

The supplies needed to collect samples must be made of material that will not release contaminants to the sample or hold contaminants to the sampling equipment. Equipment specifications are described in

¹ [PFAS Project]: LDPE bags may be used for bagging samples if special precautions are taken. LDPE bags should be kept separate from other sampling supplies in the staging area and should not come into direct contact with the sample media. Gloves should be changed after handling LDPE bags.

project work plans. Shipping coolers should be inspected for defects and must be decontaminated before use.

[PFAS Projects]: Surfaces in contact with the sampled media should not contain Teflon® or other PFAS-containing material.

Use new, certified sample containers suitable for the media being analyzed. Containers should be provided by the analytical lab or supplier in the appropriate quantity to accommodate required volumes for the field sample, duplicates, and any amounts required for laboratory QC processes. Certification requirements are specified in the USEPA *Specifications and Guidance for Contaminant Free Sample Containers* (EPA, 1992).

4.3 Sample Collection and Handling

Each person handling the samples must document from whom and when the item was received and to whom and when it was delivered. Documentation of handling samples is part of the custody record, which provides the mechanism for tracking samples from the time of sample collection thru laboratory analysis and disposal.

A sample is considered to be “in custody” for legal proceedings if it is:

- In a person’s actual possession
- In view after being in physical possession
- Locked up so that no one can tamper with it after having been in physical custody
- In a secured area, restricted to authorized personnel only.

If any one of these is not in place at all times, sample custody is broken. The FTL should notify the PL of actions taken and document the PL decision. If corrective action is needed, the Program Manager and SWE Field Quality Control Manager should be notified.

Sampling procedures are described in the SWE-FSOP-400 series of SOPs. The Field Team is responsible for logging the sample collection in field logbooks/notepads or field forms as described in SWE-FSOP-001, “Field Documentation.”

Sample custody begins at the time of sample collection, and its custody is assigned to the Field Team sample custodian. Custody transfers must be documented. Typical transfers include:

- Transfer of samples from contractors, if used, to Ahtna staff
- Transfer of samples to a transporter
- Transfer of samples to the laboratory
- Transfer of samples within the laboratory

When samples are transferred, the transfer is noted in the field logbook/notepad or field form SWE-FFRM-002, “Chain of Custody,” or similar form. The name of the organization/individual and date/time of the transfer and organization/name and date/time of the recipient. For samples shipped by ground or air carrier, the unique airbill number or bill of lading should be recorded.

4.4 Sample Integrity

To reduce the possibility of invalidating the results, all collected samples must be placed in laboratory-supplied containers and labeled (Figure 1).

Sample preservation before laboratory analysis is accomplished by adding the sample into pre-preserved sample containers or adding the preservative after filling the container. Preservation requirements are described in Worksheet# 19/30 of the project Quality Assurance Project Plan (QAPP).



The image shows a rectangular container label with a black border. In the top left corner, the word "Ahtna" is written in a stylized, handwritten font. To its right, the following information is printed in a standard font: "Site: Titan 1A", "Loc Code: MW-11", and "Samp ID: MW-11-NS1-2108". Below this, there are two columns of text: "Lab: TASEA" and "Cont.: glass w/Teflon lined septa 40 ML" in the first column, and "Fil: N" and "Prsv.: HCL" in the second column. Underneath, "Analysis: VOCs SW8260D LL" is printed. At the bottom of the label, there are two blank lines with labels: "Sampler: _____" and "Date/Time: _____".

Figure 1. Example Container Label

With few exceptions (i.e., metal analyses), samples must be cooled as soon as possible after sample collection, and after that, maintained between 0°C–6°C. Samples must be kept in the custodians' possession or stored safely at all times.

Sample containers should be pre-labeled as much as practical before sample collection. Labels should be affixed to the sample container before or at sampling and must adhere firmly to the container. Labels can be further secured by placing clear packaging tape over the label, but not for volatile organic compounds (VOC) or gasoline range organics (GRO) analyses.

Sample containers that are weighed by the laboratory before use should not have any additional labels placed on the container, affecting the weight. For those containers, use the label already provided on the jar. Only one label should be placed on each sample container.

Use the specifications defined in the project work plans. Unless the QAPP specifies otherwise, sample labels should be written in indelible ink and contain, at a minimum, the following information:

- Project number/Site
- Field sample ID
- Container type and preservative
- Filtered (Y/N)
- Laboratory name
- Analysis requested (abbreviated)
- Sampler's organization and initials
- Collection date and time (24-hour clock)

4.5 Sample Packing

The following steps must be followed when packing sample containers for shipment:

1. Choose a cooler with structural integrity that will withstand shipment. Ensure the cooler is large enough to contain all the samples to be shipped along with the appropriate amount of ice. Use a cooler that has been pre-cooled and not one that has been in a hot vehicle or out in the sun. Secure and tape the cooler drain plug with duct tape.

[PFAS Project]: Use ice in polyethylene bags.

2. Be sure that the caps on all sample containers are tight and do not leak but do not overtighten.
3. Fill out a chain of custody (COC) form or use the COC form filled out in the field. The COC should only list the samples and bottles (specific to analyses requested) added to the cooler. Check to ensure that the sample labels are intact, completed with the correct information, and that sample identification matches the COC record exactly. An original signed copy of the COC is sealed in a water proof zip-top bag taped to the lid of the cooler.

[PFAS Project]: The COC record will be placed in a re-sealable plastic zip-lock bag, the bag sealed shut to prevent water intrusion from the bagged wet ice in the cooler, and the bag taped (using PFAS-free tape) to the inside lid of the cooler.

A copy of the COC is kept with the field logbook/notepad or field form.

4. Wrap and package containers sufficiently to prevent cross-contamination or exposure to melt water and ensure that containers remain intact during shipment.

[PFAS Project]: Seal each sample container in a HDPE bag to prevent melt water from getting into the sample or degrading the sample label. Taping the end of bags with Duct tape will provide added protection against melt water.¹

5. Place the containers into the cooler with caps up. No containers should be placed on their sides, as there is significantly less chance of breakage when packed vertically.
6. Use enough ice (double-bagged) to ensure that samples are received by the laboratory at the proper temperature of 0°C–6°C. For temperature-sensitive analyses, it may be necessary to cool the samples in onsite chillers. Refer to the project work plans.

Recommended ice arrangement:

- Place a layer of ice on the bottom of the cooler.
- Place a bag of ice vertically on one end of the cooler, followed by a set of samples. Follow this with another vertical bag of ice and repeat until the cooler is full. Make sure all samples are lined on both sides with ice.
- Place more bags of ice flat on top of the samples.
- Cover this with an insulating layer, such as bubble wrap.

[PFAS Project]: Avoid packing materials that contain PFAS and materials that absorb water, including paper, cardboard, and Styrofoam; as they become soggy, they lose cushioning properties

7. Place a temperature blank in the cooler, and VOC/GRO trip blank is needed.
8. Fill excess space between sample containers and walls of the cooler with additional bubble wrap.
9. Place a signed and dated custody seal on the outside spanning the area where the cooler lid meets the cooler's body.

[PFAS Project]: Custody seals will be pre-printed on PFAS-free paper.

10. Secure the cooler with packing tape over the Custody Seal.

[PFAS Project]: PFAS-free tape will be placed over the seals to ensure that seals are not accidentally broken during shipment.

4.6 Offsite Transport

Samples taken over multiple days should be sent to the laboratory with sufficient time to allow the laboratory to meet holding time requirements. If the requested analyses have a short holding time (less than 48 hours), samples should be delivered to the laboratory for analysis as soon as possible following sample collection: preferably same day or overnight for morning delivery. Notify the laboratory Project Manager when short holding times are anticipated.

Samples can be stored onsite if sample custody is maintained and the samples are placed in transport containers (e.g., cooler or shipping box) for protection from breakage, contamination, and loss and in an appropriate controlled-temperature device (e.g., ice-packed cooler or onsite refrigerator)

Sample coolers are typically transported by a laboratory employee or air carrier. Only reliable services that provide a tracking number should be used when using professional services to transport physical samples. A copy of the shipping receipt and tracking number should be logged in the field logbook/notepad. The package should be addressed to the "Sample Custodian."

Transportation regulations followed by air carriers are airline-specific; some use only IATA, and others allow either IATA or DOT. Ground and vessel transportation is guided by DOT regulations. If shipping by highway or rail, no shipping paperwork is required as stated in 49 CFR 173.4a(h)1. These regulations have requirements to identify, document, label, and package samples if the shipment contains dangerous goods.

- **Note:** *United Parcel Service and Federal Express follow IATA for air shipments and DOT for ground shipments*

The shipper is responsible for identifying, documenting, and packaging samples for air shipment that contains dangerous goods or whether the shipment is exempted for limited quantities. Because most multimedia samples collected for environmental projects returned in preserved containers are exempted, specific procedures are not provided in this SOP. Contact the Field QC Manager if dangerous goods shipment is suspected.

Shipments of the following may contain dangerous goods:

- If the hazardous material has a UN code
- Unknown hazardous waste from drums, sludges, or appears suspicious
- Odor, PID measurements, and physical characteristics indicate a hazard

- Explosives or radioactive materials

Keep in mind that IATA requirements and the FAA and TSA “Prohibited Items List” will not allow shippers to check dangerous goods, in any quantity, as baggage on a commercial flight.

Each sample collected will be recorded on a COC form. Each COC form(s) in a cooler or shipping container should be specific to the samples in the cooler and not samples in multiple/other coolers.

4.7 Laboratory Acknowledgment

Once the samples arrive at the laboratory, the laboratory Sample Custodian checks the shipment for:

- Levels of liquid samples to assess whether leaks have occurred
- Shipment contents match the COC form
- Check the cooler temperature and pH if preserved.

Note: VOC/GRO analyses are checked at the sample analysis time.

The laboratory will provide notification of sample acknowledgment. The notification summarizes the work order, sample login discrepancies and resolution, and discussions between the laboratory Project Manager and the Field Team. The FTL is responsible for reviewing the notification for completeness and accuracy.

4.8 Document Control

Sampling field forms should be completed in their entirety. If an entry is not applicable, indicate “n/a” (not applicable) or line out the entry.

After a task or project, all field documentation, including the field logbook, field datasheets, and electronic data, shall be scanned and placed in the appropriate folder on the server. All original documents shall be submitted to the PL and kept in the project file. See FSOP-001 (Field Documentation).

5.0 Quality Assurance/Quality Control

Conduct the 3-Phases of Quality Control method described in the project work plans.

Verify the laboratory notice of sample acknowledgment.

6.0 Documentation Review

The FTL is responsible for daily review of the field sample management and fieldwork documentation for compliance with requirements (Section 4.0) and legibility. Errors and omissions should be explained and revisions to an entry signed and dated by the FTL.

7.0 References

International Air Transport Association (IATA), 2019. Dangerous Goods Regulations.


Code of Federal Regulations, 49 CFR 173.4a. Excepted Quantities

USEPA Specifications and Guidance for Contaminant Free Sample Containers. EPA540/R-93/051.
(December 1992)

Investigation Derived Waste Management

Document Number	SWE-FSOP-802
Revision	0
Department	Southwest Operations
Previous Document Number	Original Document
Originally Released	April 1, 2022
Effective Date	April 1, 2022

Approvals

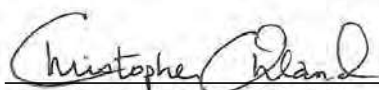

Christopher Ohland
SWE Quality Assurance Manager

April 1, 2022
Date



Bruce Wilcer
SWE Field Quality Control Manager

April 1, 2022
Date

Project-Specific Modification^[1]

--

[1] Document project-specific modifications in this section. No other modification to the SOP is authorized.

Revision History

--

Table of Contents

Table of Contents	3
1.1 Purpose	4
1.2 Scope.....	4
1.3 Responsibilities.....	4
1.4 Definitions	5
2.0 Relevant Documents	5
3.0 Equipment List	5
4.0 Procedures	6
4.1 IDW Staging Area	6
4.2 Soil IDW	6
4.3 Liquid IDW	6
4.4 PPE and Disposable Investigation Equipment.....	7
4.5 Waste Profiling.....	7
4.6 Labeling	7
4.7 Disposal of IDW	8
4.8 Document Control.....	8
5.0 Quality Assurance/Quality Control	9
6.0 Documentation Review	9
7.0 References	9

1.0 Introduction

1.1 Purpose

The purpose of this standard operating procedure (SOP) is to direct field staff in the proper techniques, and documentation for handling, labeling, tracking, and disposing of investigation derived waste (IDW) encountered or generated during environmental field activities. This SOP gives descriptions of equipment, field development procedures, field data collection, and personnel responsibilities.

1.2 Scope

The scope of this SOP is to describe procedures for projects that generate IDW.

Materials that may become IDW include but are not limited to:

- Personal protective equipment (PPE) includes disposable coveralls, gloves, booties, respirator canisters, splash suits, and other non-soil, solid wastes
- Disposable equipment and items include plastic ground and equipment covers, aluminum foil, conduit pipe, disposal samplers (e.g., bailers), tubing, and others
- Soil cuttings/spoils from boreholes/trenches and other soil wastes generated during sampling
- Drilling mud or water used or generated during drilling
- Groundwater obtained through well development or well purging
- Cleaning fluids such as spent solvents and wash water
- Packing and shipping materials
- Sediment from surface water bodies (rivers, lakes, ponds)
- Wash and rinse waste from decontamination activities

These types of IDW may require classification as non-hazardous or hazardous waste and should be containerized, stored, profiled, transported, and disposed of appropriately according to regulatory and client-specific requirements. Review project-specific work plans and waste management plans to confirm appropriate procedures for each site.

1.3 Responsibilities

Field Team. A Field Team is one or more individuals working together. The Field Team is responsible for the oversight of IDW as specified in this SOP.

Field Team Lead (FTL). The FTL is responsible for reviewing project work plans to understand the health and safety needs, procedural specifications, and field documentation requirements. The FTL is responsible for reviewing and confirming the adequacy of the fieldwork documentation.

Project Lead (PL). The PL is responsible for providing adequate resources to the field staff and ensuring the Field Team has adequate experience and training to comply with the SOP successfully. The PL is responsible for approving and documenting techniques not described in this SOP but are considered the best methods for the current project.

Safety Representative. The Safety Representative meets the experience and training requirements of USACE EM-385-1-1 (USACE, 2014). The Safety Representative oversees site-specific health and safety activities and ensures compliance with the project requirements. The Safety Representative notifies the

FTL of safety deficiencies and incidents and actions to correct those. The FTL approves those actions or, if the circumstance warrants, notifies the PL and Site Safety and Health Officer for their approval.

Quality Control Lead (QC Lead). The QC Lead ensures work inspections are performed using the 3-Phases of Quality Control method described in the project work plans. The QC Lead notifies the PL of quality deficiencies and actions to correct those. The PL approves those actions or notifies the SWE Field QC Manager for their approval if the circumstance warrants involvement.

1.4 Definitions

Field Documentation – The combination of field logbooks/notepads, field forms, digital/electronic forms, and other documentation in the project file.

Field Forms – Any documentation that preserves an accurate historical record of field activities but is recorded on unbound paper. These forms should be referenced in the FLB. Each data entry field should have an entry or indicate that data for that field is not available or not required.

Field Logbook (FLB) – A portable, bound, weatherproof notebook with consecutively numbered pages.

Field Notepad – A unbound notepad or loose-leaf paper with consecutively numbered pages.

Investigation Derived Waste (IDW). Waste that is generated in the process of investigating or examining a contaminated site.

Personal Protective Equipment (PPE). Personal health and safety equipment is used to protect the individual from contaminant exposure and physical injury.

2.0 Relevant Documents

This SOP focuses on the IDW management task and applications and should be used in conjunction with other applicable SOPs and forms, including the following:

2.1.1 Standard Operating Procedures

- SWE-FSOP-001, Field Documentation
- SWE-FSOP-801, Equipment Decontamination

3.0 Equipment List

The following materials and equipment may be needed for IDW management:

- Bound field logbook (FLB) with consecutive page numbers and waterproof, indelible pens/markers
- PPE as outlined in site-specific Accident Prevention Plans (APPs)
- Decontamination equipment and supplies (e.g., wash/rinse tubs, brushes, Liquinox™, plastic sheeting, paper towels, sponges, garden-type water sprayers, large plastic bags (minimum 0.85 mil), potable water, distilled water, and deionized water)
- Department of Transportation (DOT)-rated 55-gallon drums or other approved containers for containing soil cuttings, decontamination water, and formation water
- Drum/bung wrench and drum funnel

- Heavy equipment forklift or vehicle with drum grappler (as necessary)
- Photoionization detector (PID)
- Vendor-supplied roll-off bin(s), with liners if applicable
- Laboratory-supplied sample containers
- Wood pallets (as necessary)
- Non-porous (e.g., stainless steel) trowels
- Field notebook/notepad and waterproof permanent marking pens
- Waste manifests
- Secondary containment materials (i.e., spill containment platform/pallet with drain, absorbent pads)

4.0 Procedures

The procedures below are provided for managing non-liquid and liquid IDW generated during field activities.

4.1 IDW Staging Area

Identify an onsite area for staging drums, bins, and other storage containers. The area should be large enough to allow temporary storage and safe access to the drums and bins of IDW. If IDW is left onsite without supervision, then the area must be secured from unauthorized access and containers labeled appropriately. Hazardous IDW may not be accumulated for more than 90 days.

4.2 Soil IDW

Place IDW (soil cuttings/spoils generated during drilling, trenching, soil sampling, or other) into DOT-rated 55-gallon drums, appropriately-sized containers/bins, or stockpiles at the point of generation. In most cases, mixing the cuttings from several borings or sampling locations is permissible to fill the containers or entire stockpiles but must be confirmed in advance by the PL/FTL. Ask the FTL whether potentially hazardous solids should be segregated from non-hazardous.

When drums or containers are full or daily activities are completed, the drum lids and rings will be fastened. Full drums or containers will be transported to the designated IDW accumulation area regularly to avoid the accumulation of drums or containers at investigation sites for extended periods.

Waste profiling analyses will be performed before disposal (Section 4.5). Each project may have unique waste profiling, storage, and disposal—review project-specific work plans and coordinate activities between the PL and client.

Unless approved, hazardous soil cuttings and excavation spoils must not be used to fill boreholes, test pits, or excavations. Place soil cuttings/spoils on plastic sheets or containerize them when generated; dispose of the plastic sheets with the used PPE or soil cuttings.

4.3 Liquid IDW

Contain liquids in DOT-rated drums or appropriately-sized watertight containers at the point of generation. Mixing the water from several sampling locations, decontamination water, process water,

and other IDW sources may be permissible to fill the drums but should be confirmed in advance with the PL or FTL. Ask the FTL whether potentially hazardous liquids should be segregated from non-hazardous.

When drums or containers are full or daily activities are completed, the drum lids and rings will be fastened. Full drums or containers will be transported to the designated IDW accumulation area regularly to avoid accumulating drums or containers at investigation sites for extended periods. All drums or containers will be labeled appropriately at the end of each day's activities. Perform waste profiling before disposal (Section 4.5). Each project may have unique requirements for waste profiling, storage, and disposal—review project-specific plans and coordinate activities with the PL or FTL.

4.4 PPE and Other Consumable Supplies

Inspect equipment and PPE (e.g., plastic sheets, screens, coveralls, boot covers, or other) to determine proper disposal procedures. If there is no evidence of contamination, materials can be disposed of with regular trash.

Decontaminate and discard PPE and other used supplies in plastic bags and sealed in metal barrels for final storage, transport, and disposal. Decontamination procedures consist of brushing off or using small amounts of water to scrub off potential gross contamination (see SWE-FSOP-801, Equipment Decontamination).

4.5 Waste Profiling

Waste profiling requirements will be coordinated by the PL with the client and disposal facility. At a minimum, a representative sample of the solid and aqueous IDW will be collected and analyzed for all chemicals of potential concern. When approved by the PL, generator knowledge is an acceptable alternative to laboratory testing. The PL will also coordinate with the client, disposal facility, and waste transporter to manage the completion of the waste manifest and ensure that an adequate number of manifests are available for the amounts and types of material to be disposed of. An example manifest is provided in Attachment 1.

Waste manifests are signed by the client or client's representative (usually identified on the manifest as the "owner" and/or "generator"). Field personnel are not allowed to sign manifests under any circumstances.

4.6 Labeling

Apply a label immediately after adding soil or groundwater to drums or soil to bins. If the waste generated has not been profiled, apply a "Pending Analysis" label (Figure 1). Add the contents, date(s) of generation, the origin of materials, address of generation, and contact information to the label. Because drum and container labels may be exposed to the elements, it is essential to use waterproof markers to fill in the information on labels and possibly clear packaging tape over the labels to preserve the information.

Once the material has been profiled, remove the "Pending Analysis" label and add the appropriate "Non-Hazardous" (Figure 2) or "Hazardous" label (Figure 3). Add the shipper, address, date(s) of generation, contents, and contact information to the label.

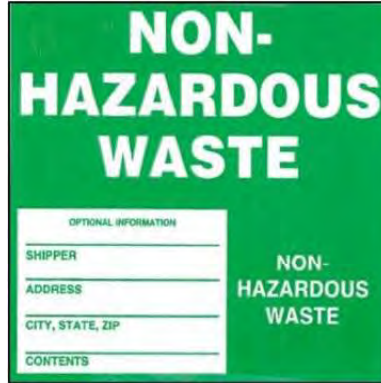


Figure 1 – Label: Pending Analysis

Figure 2– Label: Non-Hazardous

Figure 3– Label: Hazardous

4.7 Disposal of IDW

Soil and groundwater IDW will be placed in drums or appropriately configured bins and stored in a designated hazardous/non-hazardous waste storage area, the location and use of which will be coordinated with the client. Manifesting and disposal of IDW during field activities will be coordinated with the client before the initiation of field activities. As applicable, field activities that generate IDW will be conducted consistent with sustainable practices (e.g., reducing the volume of routine waste or IDW generated by decreasing materials consumption).

4.8 Document Control

The FTL is responsible for documenting or reviewing field team documentation of IDW management, including collection, sampling, labeling (if applicable), staging, and ultimate disposition of IDW. Disposition may include manifesting the waste and transportation offsite or releasing the waste to the client for ultimate disposal. The information entered in field documentation concerning IDW should include the following:

- Project Name
- Names of personnel
- Site location
- Type of activities
- Date waste generated
- Boring, well, or site number(s)
- Matrix
- Type of container(s)
- Estimated volume
- Disposition of contents
- Comments (field evidence of contamination [e.g., PID reading, odors])
- Any variance to procedures described in this SOP

After completing a task or project, all field documentation, including the field logbook, field datasheets, and electronic data, shall be scanned and placed on the server in the appropriate folder. All original documents shall be submitted to the PL and kept in the project file. See FSOP-001 (Field Documentation).

5.0 Quality Assurance/Quality Control

Conduct the 3-Phases of Quality Control method described in the project work plans.

Quality Assurance (QA) and Quality Control (QC) procedures for IDW field documentation review will be performed by the PL and QC Manager to confirm that content and level of detail comply with the applicable planning documents. Identification of errors and corrections made during QA/QC reviews will follow documentation requirements described in SWE-FSOP-001 (Fieldwork Documentation).

6.0 Documentation Review

The FTL is responsible for reviewing hazardous waste characteristics, ensuring the disposal facility is licensed to receive the IDW, and reviewing waste manifests and bills of lading.

The FTL is responsible for the daily review of fieldwork documentation for compliance with requirements (Section 4.0) and legibility. Errors and omissions should be explained and revisions to an entry signed and dated by the FTL.

7.0 References

None cited.

Attachments

**Attachment 1.
Uniform Hazardous Waste Manifest**

Please print or type. (Form designed for use on elite (12-pitch) typewriter.) **A7 2002939203-001 SC PPW 12/9/2008** Form Approved: OMB No. 2050-0039

UNIFORM HAZARDOUS WASTE MANIFEST	1. Generator ID Number	2. Page 1 of 1	3. Emergency Response Phone	4. Manifest Tracking Number			
5. Generator's Name and Mailing Address		Generator's Site Address (if different than mailing address)					
Generator's Phone:							
6. Transporter 1 Company Name			U.S. EPA ID Number				
7. Transporter 2 Company Name			U.S. EPA ID Number				
8. Designated Facility Name and Site Address			U.S. EPA ID Number				
Facility's Phone:							
9a. HM	9b. U.S. DOT Description (including Proper Shipping Name, Hazard Class, ID Number, and Packing Group (if any))	10. Containers No.	Type	11. Total Quantity	12. Unit Wt./Vol.	13. Waste Codes	
14. Special Handling Instructions and Additional Information							
Contract retained by generator confers agency authority on initial transporter to add or substitute additional transporters on generator's behalf for purposes of transportation efficiency, convenience, or safety							
15. GENERATION'S/OFFEROR'S CERTIFICATION: I hereby declare that the contents of this consignment are fully and accurately described above by the proper shipping name, and are classified, packaged, marked and labeled/placarded, and are in all respects in proper condition for transport according to applicable International and national governmental regulations. If export shipment and I am the Primary Exporter, I certify that the contents of this consignment conform to the terms of the attached EPA Acknowledgment of Consent. I certify that the waste minimization statement identified in 40 CFR 262.27(a) (if I am a large quantity generator) or (b) (if I am a small quantity generator) is true.							
Generator's/Offeror's Printed/Typed Name				Signature		Month Day Year	
16. International Shipments		<input type="checkbox"/> Import to U.S.		<input type="checkbox"/> Export from U.S.		Port of entry/ext: _____	
Transporter Signature (for exports only):				Date leaving U.S.: _____			
17. Transporter Acknowledgement of Receipt of Materials							
Transporter 1 Printed/Typed Name				Signature		Month Day Year	
Transporter 2 Printed/Typed Name				Signature		Month Day Year	
18. Discrepancy							
18a. Discrepancy Indication Space		<input type="checkbox"/> Quantity		<input type="checkbox"/> Type		<input type="checkbox"/> Residue	
		<input type="checkbox"/> Partial Rejection		<input type="checkbox"/> Full Rejection			
				Manifest Reference Number: _____			
18b. Alternate Facility (or Generator)				U.S. EPA ID Number			
Facility's Phone:							
18c. Signature of Alternate Facility (or Generator)				Month Day Year			
19. Hazardous Waste Report Management Method Codes (i.e., codes for hazardous waste treatment, disposal, and recycling systems)							
1.		2.		3.		4.	
20. Designated Facility Owner or Operator: Certification of receipt of hazardous materials covered by the manifest except as noted in Item 18a.							
Printed/Typed Name				Signature		Month Day Year	

EPA Form 8700-22v (Rev. 3-05) Previous editions are obsolete.

Source Test Protocol

**Former Fort Ord
Monterey, CA**

Thermal Treatment Unit (TTU)

Prepared For:

Ahtna Global, LLC
9699 Blue Larkspur Lane, Suite 203
Monterey, California, 93940
Attn: Eric Schmidt

Prepared By:

BEST ENVIRONMENTAL
339 Stealth Court
Livermore, CA 94551
Phone (925) 455-9474
Fax (925) 455-9479
Email: bestair@best-enviro.com

Date Issued: April 15, 2024

Source Test Information

General Information

Source Owner: US Army
Source Location: Former Fort Ord
Operable Unit 2 (OU2) Landfill
Monterey Bay, CA
Contact: Eric Schmidt, Ahtna Environmental, Inc.
Phone: (831) 582-1348

Source Description: Thermal Treatment Unit
Test Parameters & Limits: NOx: 0.06 lbs/MMBtu
CO: 0.4 lbs/MMBtu
THC: 0.03 lbs/MMBtu
NMOC: 98% DRE
SOx: 2000 ppm
Fuel Sulfur: 50 grs/100 scf

Source Testing Firm: **BEST ENVIRONMENTAL**
339 Stealth Court
Livermore, CA 94551
Phone: (925) 455-9474
Email: bestair@best-enviro.com
Contact: Bobby Asfour

Proposed Testing Date(s): April 18, 2024
Test Start Time: ~10:00 A.M.

Analytical Laboratories: **Eurofins/Air Toxics Ltd. (VOC's, Fixed Gases & Sulfur)**
180 Blue Ravine Road
Suite B
Folsom, CA 95630
Phone: (800) 985-5955 x 1039

1.0 Introduction:

Annual source testing of the TTU is conducted to demonstrate that the TTU operates efficiently and meets air quality regulations for emissions. The TTU remedy is being performed under CERCLA (42 USC 9601 et seq.) as amended by SARA. As such, the MBARD does not have jurisdiction and a permit for operating the TTU and exhaust stack is not required; however MBUAPCD Rule 207 and Rule 1000 are identified as applicable or relevant and appropriate requirements in the OU2 Landfills ROD (Army, 1994) and the substantive permit requirements were met during the reporting period. Meeting these objectives will require NO_x, CO and THC/NMOC emission testing to be performed at the exhaust outlet of the TTU. The TTU fuel testing is required for NMOC, speciated VOCs, Total Sulfur as H₂S & composition (including fixed gases & BTU/HHV).

2.0 Emission Source Information:

Ahtna Environmental (Ahtna) operates one TTU at the former Fort Ord Landfill. The TTU is used as a control device for removing the landfill gas created by the underground solid waste. The TTU stack will be equipped with proper sampling ports that meet and/or exceed the minimum location criteria of 2 stack diameters downstream from the burners and 0.5 diameters upstream from the stack exit. The sample ports will be accessed using a 40-foot boom-lift.

The TTU inlet gases will be accessed with a sample tap located downstream of the flame arrestor.

The flare will be operated at a flow rate of ~95 SCFM and an operating set point of ~1,650 deg-F during the testing. The quality of the landfill gas is ~36% (by volume) methane.

Description	Limits
Thermal Treatment Unit	NO _x 0.06 lbs/MMBtu CO 0.4 lbs/MMBtu SO ₂ 2000 ppmv Inlet total sulfur 50 grains/100scf THC 0.03 lbs/MMBtu & DRE ≥ 98%

3.0 Source Testing Program Description:

Triplicate 40-minute test runs will be performed at the TTU outlet for O₂, NO_x, CO, THC, CH₄ & NMOC. Two samples of the TTU inlet gas (landfill gas) will be collected and analyzed for fixed gases (O₂, CO₂, N₂ & C₁-C₆+), BTU/HHV, speciated VOC and Sulfur compounds (AP-42 Table 2.4-1). A single outlet sample will be collected and analyzed for speciated VOC. For each test run the stack volumetric flow rate will be calculated from the corrected meter fuel flow, BTU/HHV and stack oxygen concentration. During each test run all relevant operating data (gas flow and operating temperature) will be monitored and recorded.

A mass balance calculation will be used to determine the outlet SO₂ emission rate according to EPA Method 19.

Overview of Sampling-Flare

Parameter	Location	Methods	Duration	# of Runs
NO _x , CO and O ₂	Exhaust	EPA 7E, 10 & 3A	40 mins	3
THC, CH ₄ & NMOC	Exhaust	EPA 25A	40 mins	3
Speciated VOCs	Exhaust	EPA Method TO-15	grab	1
Flow Rate	Exhaust	EPA 19	40 mins	3
Speciated VOCs	Inlet	EPA Method TO-15	grab	2
Speciated Sulfurs	Inlet	ASTM D-5504-98	grab	2
Fuel analysis (BTU, O ₂ , CO ₂ , N ₂ , C ₁ -C ₆ + & NMOC*)	Inlet	ASTM D-1945-96	grab	2
Fuel Flow Rate	Inlet	Metering System	40 mins	3

All laboratory gas samples will be collected into silco lined summa canisters and shipped by Ahtna personnel.

4.0 Source Testing Procedures:

This section is intended to provide an overview of the sampling strategy and does not attempt to summarize the sampling procedures, which are described in detail in the reference methods.

EPA Method 1 (Traverse points), EPA Method 3A, 7E and 10 (O₂, NO_x, and CO), EPA Method 25A (THC/NMOC), and EPA Method 19 will be used to determine outlet emission rates. A single sample of the exhaust will be collected and analyzed using EPA Method TO-15 (speciated organic compounds). Two LFG samples will be collected and analyzed using ASTM D-1945 (O₂, CO₂, N₂, C₁-C₆+ & BTU/HHV), EPA Method TO-15 (speciated organic compounds) and ASTM D-5504 (speciated inorganic compounds).

Outlet VOC analysis may consist of continuously analyzing total hydrocarbons (THC) at the exhaust with a FID analyzer. If applicable an integrated outlet sample will be collected at the exhaust and will be sent to a lab for methane and ethane analysis. The appropriate calibration checks will be performed prior and throughout the sampling. VOC will be assumed equal to THC or total non-methane/non-ethane hydrocarbons.

Exhaust SO_x emissions will be calculated using mass balance calculations based on the measured inlet total sulfur content as allowed by EPA Method 19.

EPA Method 1. This method is used to determine the duct or stack area and appropriate traverse points that represent equal areas of the duct for sampling and velocity measurements. The point selection is made based on the type of test (particulate or velocity), the stack diameter and port location distance from flow disturbance.

For the Continuous Emission Monitoring procedures (EPA Methods 7E, 3A, & 10), a sample is extracted from the exhaust stack conditioned and analyzed by continuous monitoring gas analyzers in a test van. The sampling system consists of a stainless steel sample probe, heated Teflon sample line, glass-fiber particulate filter, glass moisture-condensation knockouts, Teflon sample transfer tubing, diaphragm pump and a stainless steel/Teflon manifold and flow control system. A constant sample and calibration gas supply pressure of 5 PSI is provided to each analyzer to avoid pressure variable response errors. The entire sampling system is leak checked before and after the sampling program. The BE sampling and analytical system is checked for linearity with zero, mid and high span calibrations, and is checked for system bias at the beginning and end of each test run. System bias is determined by pulling calibration gas through the entire sampling system. Individual test run calibrations will use the calibration gas that most closely matches the stack gas effluent. The calibration gases will be selected to fall approximately within the following instrument ranges; 80 to 90 percent for the high calibration, 40 to 60 percent for the mid range and zero. An additional low NO_x calibration gas in the 20 to 30 percent range may also be used. Zero and calibration drift values and system bias will be determined for each test run.

The reference method system and test results will meet the following criteria:

Parameter	Limits
System Criteria	
Instrument Linearity	± 2% Calibration Span
System Bias	± 5% Calibration Span
Calibration Gas	± 2% Value
NO _x converter efficiency	> 90%
Test Criteria	
Instrument Zero Drift	± 3% Calibration Span
Instrument Span Drift	± 3% Calibration Span

A 12-point traverse will be performed through the two available sample ports according to EPA Method 7E.

EPA 25A (THC by FID) is an accepted method for the determination of THC. A flame ionization detector (FID) total hydrocarbon continuous monitor is used for the sampling. The sampling and calibrations are performed through an all heated sample line connected directly to the THC analyzer without the removal of moisture. The FID in the analyzer is heated to 185 °C. The calibration gases are selected to fall within the following instrument ranges; 80 to 90 percent for the high calibration, 45 to 55 percent for the mid range calibration, 25 to 35 percent for the low range calibration and zero. Zero and mid calibration drift values are determined for each test run. A methane cut can be performed by passing stack gas through activated charcoal to determine stack methane concentration. Bag samples will be collected through activated charcoal during each run and analyzed at the end of each run with the THC analyzer.

EPA Method 25A will meet the following QA/QC method requirements:

System Criteria

Instrument Linearity ≤ 5% Calibration Gas Conc.

Test Criteria

Instrument Zero Drift ≤ 3% Span Range

Instrument Span Drift ≤ 3% Span Range

The following continuous monitoring analyzers or equivalents will be used:

<u>Parameter</u>	<u>Make Model</u>	<u>Principle</u>
NO _x	CAI 600CLD	Chemiluminescence
O ₂	CAI 100P	Paramagnetic
CO	TECO 48i	GFC/NDIR
THC/CH ₄	CAI 300M	Flame Ionization Detector

The following expected concentrations and calibration ranges are proposed. Certain gases and instrument ranges may be changed depending on availability and stack concentrations at the time of testing.

Anticipated Emissions & Test Van Measurement Ranges

	<u>Expected</u>	
NO _x	15 ppm	Range 0-50 ppm
O ₂	12.5%	Range 0-25%
CO	<10 ppm	Range 0-50 ppm
THC/CH ₄	<10 ppm	Range 0-100 ppm (as methane)

Anticipated Calibration Gas Concentrations

	<u>Low Range</u>	<u>Mid Range</u>	<u>High Range</u>
NO _x	N.A.	22.5 ppm	45 ppm
O ₂	N.A.	12.5%	21.0%
CO	N.A.	25 ppm	45 ppm
THC/CH ₄	25.0	45	85

All calibration gases are EPA Protocol #1 rated or are traceable to the National Institute of Standards and Technology. Calibration gas certificates will be included in the final test report. The analyzer data recording system consists of a digital strip chart and a computer Data Acquisition System (DAS).

EPA Method 19 is used to determine stack gas volumetric flow rates using oxygen-based F-factors. F-factors are ratios of combustion gas volumes generated from heat input. The heating value of the fuel in BTU per cubic foot is determined from lab analysis of the fuel gas samples using ASTM D-1945/3588 gas chromatography analytical procedures. Total fuel consumption for the flare is monitored on the systems control panel. During each test run gas readings and samples were taken and used for determining the stack flow rate. The total cubic feet per hour of fuel multiplied times the BTU/cf provides million BTU per hour (MMBtu/hr) heat input. The heat input in MMBtu/hr is multiplied by the F-factor (DSCF/MMBtu) and adjusted for the measured oxygen content of the source to determine volumetric flow rate. The flow rates are used to determine stack emission rates.

EPA Method TO-15 & D-5504 analysis is used to determine concentrations of Organic and inorganic compounds including Non-methane Organic Compounds (NMOC) and sulfurs compounds. Inlet gases are filled into tedlar bags in triplicate corresponding to the test program. The bags are labeled respectively then sent to a laboratory and analyzed for NMOC and speciated compounds using GC/MS (gas chromatography/mass specrometer) within 72 hours and GC/SCD (gas chromatography/Sulfur Chemiluminescence Detector) within 24 hours for sulfur.

EPA Method ASTM D-1945 & D-3588 analysis is used to determine the composition of gaseous fuels (e.g. Methane, fixed gases & BTU Content). Inlet gases are filled into a tedlar bag, the bag is labeled respectively then sent to a laboratory and analyzed for fixed gases, methane and C₁-C₆ using GC/FID (gas chromatography/flame ionization detector). Each compound has calorific values that are used to calculate the combustion factors.

5.0 Project organization/key personnel:

The table below lists the positions and responsibilities of the personnel potentially assigned to this project.

Project Organization

Name	Position	Responsibilities
Bobby Asfour	Project Manager	Project Overview, Collection of all field data and operational data, Data reduction and Report Writing
Edward hernandez	Source Test Technician	Sample collection, Chain of Custody
Eurofins-Air Toxics Inc.	Lab Supervisor	Receipt of Samples, Sample analysis, Lab report production

The Project Manager is the primary person responsible for the outcome of this project. He leads the sampling team in the field, interacts with the client during testing and is responsible for gathering all data necessary for completing the report. Upon the completion of the fieldwork, he completes any Chain of Custody documentation and submits samples to the laboratory for analysis. He then reduces the data and prepares the report.

The Source Test Technicians are responsible for performing the actual field emissions tests. They are responsible for performing the emissions tests as per the approved test methods.

The Laboratory Supervisor is responsible for receipt, analysis and disposition of samples. He is also responsible for all laboratory method specific QA/QC procedures.

BE is an approved independent contractor for the California Air Resources Board (CARB), which is a national leader in the development and implementation of progressive emissions monitoring and documentation programs. BE is also affiliated with the Air and Waste Management Association (AWMA), Professional Environmental Marketing Association (PEMA), Source Evaluation Society (SES) and Air Pollution Training Institute (APTI).

6.0 QA & QC Procedures:

QA/QC Program: All quality assurance and quality control procedures will be followed as prescribed in the appropriate methods and Ahtna Quality Assurance Project Plan Former Fort Ord, California, Volume 1 Appendix D, Draft Final Revision 1 Operable Unit 2 Landfills.

Adherence to QA/QC procedures during field test preparation and field sampling will be the responsibility of the QA/QC Officer and/or Project Manager. This test program would include all QA/QC procedures specified in the test methods (equipment calibration, field data recording, contamination control and record keeping). Analytical QA/QC protocol will be the responsibility of the Analytical Liaison (Ahtna), and the laboratory manager and QA/QC coordinator assigned to this program by the laboratory Ahtna has subcontracted. Any deviations from stated protocols not mentioned herein would be discussed with the appropriate individuals prior to implementation.

Chain of Custody: A sample is considered to be under a person's custody if (1) in a person's physical possession, (2) in view of the person after he has taken possession, (3) secured by that person that no one can tamper with the sample, or (4) secured by that person in an area which is restricted to authorized personnel. The following steps are taken to ensure sample identification and integrity:

- 1) Sample labels (identity, #, date, time)
- 2) C.O.C. seals (with sample #)
- 3) Field sample log book and field notes
- 4) C.O.C. record and analysis request sheet
- 5) Shipping papers (Courier, Fed. Ex.)
- 6) Receiving/Log-in (signed receipt of samples and their condition)

Once the sample has been received in the laboratory and the status of the sample integrity has been determined, the lab QA/QC supervisor is responsible for care and custody. The lab should be prepared to testify to the possession and security of the sample until analysis is complete.

In addition to the QA/QC procedures mentioned, BE uses EPA Protocol or 1% NIST Traceable calibration gases.

7.0 Source Test Report:

Data reduction/reporting procedures: All data reduction is performed using Excel spreadsheet programs developed by BE. The report will be written by a senior project manager and will be reviewed by his peers. All supporting documentation, field data sheets, lab reports, lab and field QA/QC reports, emission calculations, etc., will be included in the final report. Calculations are contained in the referenced methods and in the APCD/AQMD source Test Procedure Guidelines where applicable. The expected date for a final report is approximately two weeks after the analytical work is completed. The analytical turn around time is approximately two to three weeks.

Tabular results summary will be presented showing the following:

- NO_x, ppmvd, lbs/hr, lbs/MMBtu
- CO, ppmvd, lbs/hr, lbs/MMBtu
- VOC, ppmvd, ppmvd @ 3% O₂, lbs/hr, lbs/MMBtu, DRE
- THC & CH₄, ppmvd, lbs/hr, lbs/MMBtu
- SO_x, ppmvd, lbs/hr (Calculated from Fuel Sulfur)
- Fuel Total Sulfur, ppmvd, grains/100scf
- LFG Flow Rate, scfm, MMBtu/hr
- Stack Flow Rate, DSCFM

All ancillary information will be included with the report; process information, field data sheets, strip charts, calculations, equipment calibrations, chain of custody information, laboratory analytical results.

Submitted by,



Bobby Asfour
Sr. Project Manager

Attachments:

Calculations and Nomenclature
Sample System diagrams
Report table of contents-Example
Example Tabulated Data
Stack Images
Site Map and Regional Map
Site Plan

Attachment B

Analytical Laboratory Information

1. Certificate of Accreditation, ISO/IEC 17025:2017 and DoD ELAP, Certificate Number ADE-1451 (Eurofins)
2. ORELAP Approval to Perform Analyses on Environmental Samples in Air, Certificate Number CA300005-017 (Eurofins).
3. South Coast Air Quality Management District, Reference #03LA0606 (Atmospheric Analysis and Consulting)
4. State of California, California Air Resources Board, Approved Independent Contractor Certification (Best Environmental)

SOP No.	SOP Title	Author Organization
SOP#6 Rev 50*	Analysis of Volatile Organic Compound in SUMMA™ Polished Canisters, EPA Method TO-15 and Modified EPA Method TO-14A SOP #6	Eurofins
SOP #50 Rev. 31	Sample Receiving/Login Procedures	Eurofins
SOP #54 Rev. 28	Analysis of Natural Gases by Modified ASTM D1945	Eurofins
SOP #63 Rev 25	Sample Tracking, Transmittal and Custody Procedures	Eurofins
A.5504.07*	Standard Operating Procedure, Determination of Sulfur Compounds in Natural Gas and Gaseous Fuels by Gas Chromatography and Chemiluminescence 3/15/2023	Atmospheric Analysis and Consulting
LAB.103	Sample Login Using Labtrack 3/18/2024, Revision 3	Atmospheric Analysis and Consulting
LAB.107	Sample Receiving, Shipping and Disposal 3/18/2024, Revision 12	Atmospheric Analysis and Consulting

*SOP available upon request



CERTIFICATE OF ACCREDITATION

The ANSI National Accreditation Board

Hereby attests that

**Eurofins Environment Testing Northern
California, LLC
180 Blue Ravine Road, Suite B
Folsom, CA 95630**

Fulfills the requirements of

ISO/IEC 17025:2017

and

**U.S. Department of Defense (DoD) Quality Systems Manual
for Environmental Laboratories (DoD QSM V5.4)**

In the field of

TESTING

This certificate is valid only when accompanied by a current scope of accreditation document.

The current scope of accreditation can be verified at www.anab.org.

Jason Stine, Vice President

Expiry Date: 27 April 2026

Certificate Number: ADE-1451



This laboratory is accredited in accordance with the recognized International Standard ISO/IEC 17025:2017. This accreditation demonstrates technical competence for a defined scope and the operation of a laboratory quality management system (refer to joint ISO-ILAC-IAF Communiqué dated April 2017).



SCOPE OF ACCREDITATION TO ISO/IEC 17025:2017

and

**U.S. Department of Defense (DoD) Quality Systems Manual for
Environmental Laboratories (DoD QSM V5.4)**

Eurofins Environment Testing Northern California, LLC

180 Blue Ravine Road, Suite B

Folsom, CA 95630

Heidi Hayes

(916) 605-3341

TESTING

Valid to: **April 27, 2026**

Certificate Number: **ADE-1451**

Environmental

Air and Emissions		
Technology	Method	Analyte
GC/FID/dual TCD	ASTM D1945 Mod	Acetylene
GC/FID/dual TCD	ASTM D1945 Mod	Carbon Dioxide
GC/FID/dual TCD	ASTM D1945 Mod	Carbon Monoxide
GC/FID/dual TCD	ASTM D1945 Mod	Ethane
GC/FID/dual TCD	ASTM D1945 Mod	Ethylene
GC/FID/dual TCD	ASTM D1945 Mod	Helium
GC/FID/dual TCD	ASTM D1945 Mod	Hydrogen
GC/FID/dual TCD	ASTM D1945 Mod	Isobutane
GC/FID/dual TCD	ASTM D1945 Mod	Isopentane
GC/FID/dual TCD	ASTM D1945 Mod	Methane



ANSI National Accreditation Board

Air and Emissions		
Technology	Method	Analyte
GC/FID/dual TCD	ASTM D1945 Mod	n-Butane
GC/FID/dual TCD	ASTM D1945 Mod	Neopentane
GC/FID/dual TCD	ASTM D1945 Mod	Nitrogen
GC/FID/dual TCD	ASTM D1945 Mod	n-Pentane
GC/FID/dual TCD	ASTM D1945 Mod	Oxygen
GC/FID/dual TCD	ASTM D1945 Mod	Propane
GC/FID/dual TCD	ASTM D1946 Mod	Carbon Dioxide
GC/FID/dual TCD	ASTM D1946 Mod	Carbon Monoxide
GC/FID/dual TCD	ASTM D1946 Mod	Ethane
GC/FID/dual TCD	ASTM D1946 Mod	Ethylene
GC/FID/dual TCD	ASTM D1946 Mod	Helium
GC/FID/dual TCD	ASTM D1946 Mod	Hydrogen
GC/FID/dual TCD	ASTM D1946 Mod	Methane
GC/FID/dual TCD	ASTM D1946 Mod	Nitrogen
GC/FID/dual TCD	ASTM D1946 Mod	Oxygen
GC/FID	TO-3 Mod	TPH(GRO)
GC/FID	TO-3 Mod	TPH(JP4)
GC/MS	TO-15 (Full Scan/SIM)	1,1,1-Trichloroethane
GC/MS	TO-15 (Full Scan/SIM)	1,1,2,2-Tetrachloroethane
GC/MS	TO-15 (Full Scan/SIM)	1,1,2-Trichloroethane
GC/MS	TO-15 (Full Scan/SIM)	1,1-Dichloroethane
GC/MS	TO-15 (Full Scan/SIM)	1,1-Dichloroethene
GC/MS	TO-15 (Full Scan)	1,2,4-Trichlorobenzene



ANSI National Accreditation Board

Air and Emissions		
Technology	Method	Analyte
GC/MS	TO-15 (Full Scan)	1,2,4-Trimethylbenzene
GC/MS	TO-15 (Full Scan/SIM)	1,2-Dibromoethane (EDB)
GC/MS	TO-15 (Full Scan/SIM)	1,2-Dichlorobenzene
GC/MS	TO-15 (Full Scan/SIM)	1,2-Dichloroethane
GC/MS	TO-15 (Full Scan)	1,2-Dichloropropane
GC/MS	TO-15 (Full Scan/SIM)	1,2-Dichlorotetrafluoroethane (Freon 114)
GC/MS	TO-15 (Full Scan)	1,3,5-Trimethylbenzene
GC/MS	TO-15 (Full Scan)	1,3-Butadiene
GC/MS	TO-15 (Full Scan/SIM)	1,3-Dichlorobenzene
GC/MS	TO-15 (Full Scan/SIM)	1,4-Dichlorobenzene
GC/MS	TO-15 (Full Scan)	1,4-Dioxane
GC/MS	TO-15 (Full Scan)	2,2,4-Trimethylpentane
GC/MS	TO-15 (Full Scan)	2-Butanone (MEK)
GC/MS	TO-15 (Full Scan)	2-Chlorotoluene
GC/MS	TO-15 (Full Scan)	2-Hexanone
GC/MS	TO-15 (Full Scan)	2-Propanol
GC/MS	TO-15 (Full Scan)	3-Chloropropene
GC/MS	TO-15 (Full Scan)	4-Methyl-2-pentanone (MIBK)
GC/MS	TO-15 (Full Scan)	Acetone
GC/MS	TO-15 (Full Scan)	alpha-Chlorotoluene
GC/MS	TO-15 (Full Scan/SIM)	Benzene
GC/MS	TO-15 (Full Scan)	Bromodichloromethane
GC/MS	TO-15 (Full Scan)	Bromoform



ANSI National Accreditation Board

Air and Emissions		
Technology	Method	Analyte
GC/MS	TO-15 (Full Scan)	Bromomethane
GC/MS	TO-15 (Full Scan)	Butane
GC/MS	TO-15 (Full Scan)	Butyl Benzene
GC/MS	TO-15 (Full Scan)	Carbon disulfide
GC/MS	TO-15 (Full Scan/SIM)	Carbon tetrachloride
GC/MS	TO-15 (Full Scan/SIM)	Chlorobenzene
GC/MS	TO-15 (Full Scan)	Chlorodibromomethane
GC/MS	TO-15 (Full Scan/SIM)	Chloroethane
GC/MS	TO-15 (Full Scan/SIM)	Chloroform
GC/MS	TO-15 (Full Scan/SIM)	Chloromethane
GC/MS	TO-15 (Full Scan/SIM)	cis-1,2-Dichloroethene
GC/MS	TO-15 (Full Scan)	cis-1,3-Dichloropropene
GC/MS	TO-15 (Full Scan)	Cyclohexane
GC/MS	TO-15 (Full Scan)	Cumene
GC/MS	TO-15 (Full Scan/SIM)	Dichlorodifluoromethane (Freon 12)
GC/MS	TO-15 (Full Scan)	Ethanol
GC/MS	TO-15 (Full Scan/SIM)	Ethylbenzene
GC/MS	TO-15 (Full Scan)	Hexachlorobutadiene
GC/MS	TO-15 (Full Scan)	Methylene Chloride
GC/MS	TO-15 (Full Scan/SIM)	m,p-Xylene
GC/MS	TO-15 (Full Scan/SIM)	Naphthalene
GC/MS	TO-15 (Full Scan)	n-Heptane
GC/MS	TO-15 (Full Scan)	n-Hexane



ANSI National Accreditation Board

Air and Emissions		
Technology	Method	Analyte
GC/MS	TO-15 (Full Scan)	Nonane
GC/MS	TO-15 (Full Scan)	n-Pentane
GC/MS	TO-15 (Full Scan)	n-Propylbenzene
GC/MS	TO-15 (Full Scan)	Octane
GC/MS	TO-15 (Full Scan/SIM)	o-Xylene
GC/MS	TO-15 (Full Scan)	p-Ethyltoluene
GC/MS	TO-15 (Full Scan)	Propylene
GC/MS	TO-15 (Full Scan)	sec-Butylbenzene
GC/MS	TO-15 (Full Scan)	Styrene
GC/MS	TO-15 (Full Scan)	tert-Butyl Alcohol
GC/MS	TO-15 (Full Scan)	tert-Butyl Benzene
GC/MS	TO-15 (Full Scan/SIM)	tert-Butyl methyl ether (MTBE)
GC/MS	TO-15 (Full Scan/SIM)	Tetrachloroethylene
GC/MS	TO-15 (Full Scan)	Tetrahydrofuran
GC/MS	TO-15 (Full Scan/SIM)	Toluene
GC/MS	TO-15 (Full Scan/SIM)	trans-1,2-Dichloroethene
GC/MS	TO-15 (Full Scan/SIM)	trans-1,3-Dichloropropene
GC/MS	TO-15 (Full Scan/SIM)	Trichloroethene
GC/MS	TO-15 (Full Scan/SIM)	Trichlorofluoromethane (Freon 11)
GC/MS	TO-15 (Full Scan/SIM)	Trichlorotrifluoroethane (Freon 113)
GC/MS	TO-15 (Full Scan)	Vinyl Acetate
GC/MS	TO-15 (Full Scan/SIM)	Vinyl chloride
GC/MS	TO-17 (WMS/RAD130) Mod	1,1,1-Trichloroethane



ANSI National Accreditation Board

Air and Emissions		
Technology	Method	Analyte
GC/MS	TO-17 (WMS/RAD130) Mod	1,1,2,2-Tetrachloroethane
GC/MS	TO-17 (WMS/RAD130) Mod	1,1,2-Trichloroethane
GC/MS	TO-17 (WMS/RAD130) Mod	1,1-Dichloroethane
GC/MS	TO-17 (WMS/RAD130) Mod	1,1-Dichloroethene
GC/MS	TO-17 (WMS/RAD130) Mod	1,2,4-Trimethylbenzene
GC/MS	TO-17 (WMS/RAD130) Mod	1,2-Dichlorobenzene
GC/MS	TO-17 (WMS/RAD130) Mod	1,2-Dichloroethane
GC/MS	TO-17 (WMS/RAD130) Mod	1,3,5-Trimethylbenzene
GC/MS	TO-17 (WMS/RAD130) Mod	1,3-Dichlorobenzene
GC/MS	TO-17 (WMS/RAD130) Mod	1,4-Dichlorobenzene
GC/MS	TO-17 (WMS/RAD130) Mod	2-Butanone (MEK)
GC/MS	TO-17 (WMS/RAD130) Mod	4-Methyl-2-pentanone (MIBK)
GC/MS	TO-17 (WMS/RAD130) Mod	Benzene
GC/MS	TO-17 (WMS/RAD130) Mod	Carbon tetrachloride
GC/MS	TO-17 (WMS/RAD130) Mod	Chlorobenzene
GC/MS	TO-17 (WMS/RAD130) Mod	Chloroform
GC/MS	TO-17 (WMS/RAD130) Mod	cis-1,2-Dichloroethene
GC/MS	TO-17 (WMS/RAD130) Mod	Cyclohexane
GC/MS	TO-17 (WMS/RAD130) Mod	Ethyl Acetate
GC/MS	TO-17 (WMS/RAD130) Mod	Ethylbenzene
GC/MS	TO-17 (WMS/RAD130) Mod	m,p-Xylene
GC/MS	TO-17 (WMS/RAD130) Mod	n-Heptane
GC/MS	TO-17 (WMS/RAD130) Mod	n-Hexane
GC/MS	TO-17 (WMS/RAD130) Mod	o-Xylene



ANSI National Accreditation Board

Air and Emissions		
Technology	Method	Analyte
GC/MS	TO-17 (WMS/RAD130) Mod	Propylbenzene
GC/MS	TO-17 (WMS/RAD130) Mod	tert-Butyl methyl ether (MTBE)
GC/MS	TO-17 (WMS/RAD130) Mod	Tetrachloroethylene
GC/MS	TO-17 (WMS/RAD130) Mod	Toluene
GC/MS	TO-17 (WMS/RAD130) Mod	trans-1,2-Dichloroethene
GC/MS	TO-17 (WMS/RAD130) Mod	Trichloroethene
GC/MS	TO-17 (WMS) Mod	Vinyl chloride
Preparation	Method	Type
Extraction of sorbent media	Eurofins Air Toxics SOP # 100	Solvent Extraction


Note:

1. This scope is formatted as part of a single document including Certificate of Accreditation No. ADE-1451.

Jason Stine, Vice President



Oregon Environmental Laboratory Accreditation Program

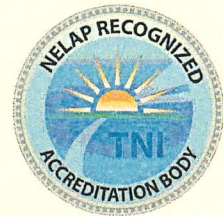

NELAP Recognized

**Eurofins Environment Testing Northern
California, LLC**

CA300005

180 Blue Ravine Road, Ste. B

Folsom, CA 95630

IS GRANTED APPROVAL BY ORELAP UNDER THE 2016 TNi STANDARDS, TO PERFORM
ANALYSES ON ENVIRONMENTAL SAMPLES IN MATRICES AS LISTED BELOW :

Air	Drinking Water	Non-Potable Water	Solids & Chem. Waste	Tissue
-----	----------------	-------------------	----------------------	--------

Chemistry

AND AS RECORDED IN THE LIST OF APPROVED ANALYTES, METHODS, ANALYTICAL TECHNIQUES, AND
FIELDS OF TESTING ISSUED CONCURRENTLY WITH THIS CERTIFICATE AND REVISED AS NECESSARY.

ACCREDITED STATUS DEPENDS ON SUCCESSFUL ONGOING PARTICIPATION IN THE PROGRAM AND
CONTINUED COMPLIANCE WITH THE STANDARDS.

CUSTOMERS ARE URGED TO VERIFY THE LABORATORY'S CURRENT ACCREDITATION STATUS IN
OREGON.

Oregon State Public Health Laboratory
ORELAP Program Manager
7202 NE Evergreen Parkway, Suite 100
Hillsboro, OR 97124

EFFECTIVE DATE : 05/13/2024

EXPIRATION DATE : 10/17/2024

Certificate No : CA300005 - 020





Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation



Euofins Environment Testing Northern California, LLC
180 Blue Ravine Road, Ste. B
Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description
Air	40 CFR Part 50 Appendix J				FR	10000507	Reference Method for the Determination of Particulate Matter as PM10 in the Atmosphere
		3950	Particulates <10 um				
	ASTM D1945			03	2010	30024443	Natural Gas by Gas Chromatography
		4938	2-Methylbutane (Isopentane)				
		4942	2-methylpropane (Isobutane)				
		4323	Acetylene				
		3755	Carbon dioxide				
		3780	Carbon monoxide				
		4747	Ethane				
		4752	Ethene				
		1767	Helium				
		1772	Hydrogen				
		4926	Methane				
		5007	n-Butane				
		5028	n-Pentane				
		5029	n-Propane				
		9511	Neopentane				
		1843	Nitrogen				
		3895	Oxygen				
	ASTM D1946-90				2006	30024465	Reformed Gas by Gas Chromatography
		3755	Carbon dioxide				
		3780	Carbon monoxide				
		4747	Ethane				
		4752	Ethene				
		1767	Helium				
		1772	Hydrogen				
		4926	Methane				
		1843	Nitrogen				
		3895	Oxygen				
	EPA 325B			2013		10277437	Sorbent Tubes Coupled with Thermal Desorption and GC/MS
		9318	1,3-Butadiene				
		4375	Benzene				
		4765	Ethylbenzene				
		5240	m+p-xylene				
		4855	n-Hexane				



Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation



Euofins Environment Testing Northern California, LLC
 180 Blue Ravine Road, Ste. B
 Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description	
Air	EPA 325B	5005	Naphthalene	2013		10277437	Sorbent Tubes Coupled with Thermal Desorption and GC/MS	
		5250	o-Xylene					
		5100	Styrene					
		5140	Toluene					
	EPA TO-12	3860	Non-methane organics	1988		10248201	Non-Methane Organic Compounds by GC/FID	
		EPA TO-13A	5795	2-Chloronaphthalene	1999		10248405	Polycyclic Aromatic Hydrocarbons in Ambient Air by GC/MS
			6385	2-Methylnaphthalene				
			5500	Acenaphthene				
			5505	Acenaphthylene				
			5555	Anthracene				
			5575	Benzo(a)anthracene				
			5580	Benzo(a)pyrene				
			5590	Benzo(g,h,i)perylene				
			5600	Benzo(k)fluoranthene				
			5585	Benzo[b]fluoranthene				
			5855	Chrysene				
			5895	Dibenz(a,h) anthracene				
			6265	Fluoranthene				
			6270	Fluorene				
			6315	Indeno(1,2,3-cd) pyrene				
			5005	Naphthalene				
			6615	Phenanthrene				
			6665	Pyrene				
		EPA TO-14A	5160	1,1,1-Trichloroethane	1999		10248609	Volatile Organic Compounds with SUMMA canister and GC/MS
			5110	1,1,2,2-Tetrachloroethane				
			5185	1,1,2-Trichloro-1,2,2-trifluoroethane (Freon 113)				
			5165	1,1,2-Trichloroethane				
			4630	1,1-Dichloroethane				
			4640	1,1-Dichloroethylene				
			5155	1,2,4-Trichlorobenzene				
			5210	1,2,4-Trimethylbenzene				
			4585	1,2-Dibromoethane (EDB, Ethylene dibromide)				



Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation



Eurofins Environment Testing Northern California, LLC
180 Blue Ravine Road, Ste. B
Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description
Air	EPA TO-14A				1999	10248609	Volatile Organic Compounds with SUMMA canister and GC/MS
		4695	1,2-Dichloro-1,1,2,2-tetrafluoroethane (Freon-114)				
		4610	1,2-Dichlorobenzene				
		4635	1,2-Dichloroethane (Ethylene dichloride)				
		4655	1,2-Dichloropropane				
		5215	1,3,5-Trimethylbenzene				
		9318	1,3-Butadiene				
		4615	1,3-Dichlorobenzene				
		4620	1,4-Dichlorobenzene				
		4735	1,4-Dioxane (1,4-Diethyleneoxide)				
		4836	1-Propene (Propylene)				
		4410	2-Butanone (Methyl ethyl ketone, MEK)				
		4860	2-Hexanone (MBK)				
		4542	4-Ethyltoluene				
		4995	4-Methyl-2-pentanone (MIBK)				
		4315	Acetone				
		4375	Benzene				
		5635	Benzyl chloride				
		4395	Bromodichloromethane				
		4400	Bromoform				
		4450	Carbon disulfide				
		4455	Carbon tetrachloride				
		4475	Chlorobenzene				
		4575	Chlorodibromomethane				
		4485	Chloroethane (Ethyl chloride)				
		4505	Chloroform				
		4705	cis & trans-1,2-Dichloroethene				
		4645	cis-1,2-Dichloroethylene				
		4680	cis-1,3-Dichloropropene				
		4555	Cyclohexane				
		4625	Dichlorodifluoromethane (Freon-12)				
		4750	Ethanol				
		4765	Ethylbenzene				
		4835	Hexachlorobutadiene				
		4895	Isopropyl alcohol (2-Propanol, Isopropanol)				



Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation



Euofins Environment Testing Northern California, LLC
180 Blue Ravine Road, Ste. B
Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description
Air	EPA TO-14A				1999	10248609	Volatile Organic Compounds with SUMMA canister and GC/MS
		4900	Isopropylbenzene (Cumene)				
		5240	m+p-xylene				
		4950	Methyl bromide (Bromomethane)				
		4960	Methyl chloride (Chloromethane)				
		5000	Methyl tert-butyl ether (MTBE)				
		4975	Methylene chloride (Dichloromethane)				
		4825	n-Heptane				
		4855	n-Hexane				
		5090	n-Propylbenzene				
		5005	Naphthalene				
		5250	o-Xylene				
		5100	Styrene				
		5115	Tetrachloroethylene (Perchloroethylene)				
		5120	Tetrahydrofuran (THF)				
		5140	Toluene				
		4700	trans-1,2-Dichloroethylene				
		4685	trans-1,3-Dichloropropylene				
		5170	Trichloroethene (Trichloroethylene)				
		5175	Trichlorofluoromethane (Fluorotrichloromethane, Freon 11)				
		5235	Vinyl chloride				
		5260	Xylene (total)				
			EPA TO-15				1999
		5160	1,1,1-Trichloroethane				
		5110	1,1,2,2-Tetrachloroethane				
		5185	1,1,2-Trichloro-1,2,2-trifluoroethane (Freon 113)				
		5165	1,1,2-Trichloroethane				
		4630	1,1-Dichloroethane				
		4640	1,1-Dichloroethylene				
		5180	1,2,3-Trichloropropane				
		5155	1,2,4-Trichlorobenzene				
		5210	1,2,4-Trimethylbenzene				
		4570	1,2-Dibromo-3-chloropropane (DBCP)				



Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation



Euofins Environment Testing Northern California, LLC
180 Blue Ravine Road, Ste. B
Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description
Air	EPA TO-15				1999	10248803	VOCs collected in Canisters by GC/MS
		4585	1,2-Dibromoethane (EDB, Ethylene dibromide)				
		4695	1,2-Dichloro-1,1,2,2-tetrafluoroethane (Freon-114)				
		4610	1,2-Dichlorobenzene				
		4635	1,2-Dichloroethane (Ethylene dichloride)				
		4655	1,2-Dichloropropane				
		5215	1,3,5-Trimethylbenzene				
		9318	1,3-Butadiene				
		4615	1,3-Dichlorobenzene				
		4620	1,4-Dichlorobenzene				
		4735	1,4-Dioxane (1,4-Diethyleneoxide)				
		4836	1-Propene (Propylene)				
		5220	2,2,4-Trimethylpentane				
		4410	2-Butanone (Methyl ethyl ketone, MEK)				
		4535	2-Chlorotoluene				
		4860	2-Hexanone (MBK)				
		4938	2-Methylbutane (Isopentane)				
		4942	2-methylpropane (Isobutane)				
		4542	4-Ethyltoluene				
		4910	4-Isopropyltoluene (p-Cymene)				
		4995	4-Methyl-2-pentanone (MIBK)				
		4315	Acetone				
		4340	Acrylonitrile				
		4355	Allyl chloride (3-Chloropropene)				
		4357	alpha-Methylstyrene				
		4375	Benzene				
		5635	Benzyl chloride				
		4385	Bromobenzene				
		4390	Bromochloromethane				
		4395	Bromodichloromethane				
		4400	Bromoform				
		4450	Carbon disulfide				
		4455	Carbon tetrachloride				
		4475	Chlorobenzene				
		4575	Chlorodibromomethane				



Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation



Euofins Environment Testing Northern California, LLC
180 Blue Ravine Road, Ste. B
Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description
Air	EPA TO-15				1999	10248803	VOCs collected in Canisters by GC/MS
		4577	Chlorodifluoromethane (Freon-22)				
		4485	Chloroethane (Ethyl chloride)				
		4505	Chloroform				
		4705	cis & trans-1,2-Dichloroethene				
		4645	cis-1,2-Dichloroethylene				
		4680	cis-1,3-Dichloropropene				
		4555	Cyclohexane				
		4595	Dibromomethane (Methylene bromide)				
		4625	Dichlorodifluoromethane (Freon-12)				
		4627	Dichlorofluoromethane (Freon 21)				
		4750	Ethanol				
		4755	Ethyl acetate				
		4765	Ethylbenzene				
		4835	Hexachlorobutadiene				
		4895	Isopropyl alcohol (2-Propanol, Isopropanol)				
		4900	Isopropylbenzene (Cumene)				
		5240	m+p-xylene				
		4950	Methyl bromide (Bromomethane)				
		4960	Methyl chloride (Chloromethane)				
		4990	Methyl methacrylate				
		5000	Methyl tert-butyl ether (MTBE)				
		4965	Methylcyclohexane				
		4975	Methylene chloride (Dichloromethane)				
		5007	n-Butane				
		4435	n-Butylbenzene				
		4825	n-Heptane				
		4855	n-Hexane				
		5026	n-Nonane				
		5027	n-Octane				
		5028	n-Pentane				
		5090	n-Propylbenzene				
		5005	Naphthalene				
		5250	o-Xylene				
		4440	sec-Butylbenzene				



Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation



Euofins Environment Testing Northern California, LLC
180 Blue Ravine Road, Ste. B
Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description				
Air	EPA TO-15	5100	Styrene		1999	10248803	VOCs collected in Canisters by GC/MS				
		4420	tert-Butyl alcohol								
		4445	tert-Butylbenzene								
		5115	Tetrachloroethylene (Perchloroethylene)								
		5120	Tetrahydrofuran (THF)								
		5140	Toluene								
		4700	trans-1,2-Dichloroethylene								
		4685	trans-1,3-Dichloropropylene								
		5170	Trichloroethene (Trichloroethylene)								
		5175	Trichlorofluoromethane (Fluorotrichloromethane, Freon 11)								
		5225	Vinyl acetate								
		5230	Vinyl bromide (Bromoethane)								
		5235	Vinyl chloride								
		5260	Xylene (total)								
		EPA TO-15							1999	10248858	VOCs collected in Canisters by GC/MS SIM
		GC/MS SIM									
				5160				1,1,1-Trichloroethane			
				5110				1,1,2,2-Tetrachloroethane			
				5185				1,1,2-Trichloro-1,2,2-trifluoroethane (Freon 113)			
				5165				1,1,2-Trichloroethane			
		4630	1,1-Dichloroethane								
		4640	1,1-Dichloroethylene								
		4585	1,2-Dibromoethane (EDB, Ethylene dibromide)								
		4695	1,2-Dichloro-1,1,2,2-tetrafluoroethane (Freon-114)								
		4610	1,2-Dichlorobenzene								
		4635	1,2-Dichloroethane (Ethylene dichloride)								
		4615	1,3-Dichlorobenzene								
		4620	1,4-Dichlorobenzene								
		4375	Benzene								
		4455	Carbon tetrachloride								
		4475	Chlorobenzene								
		4485	Chloroethane (Ethyl chloride)								
		4505	Chloroform								



Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation



Eurofins Environment Testing Northern California, LLC
180 Blue Ravine Road, Ste. B
Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description		
Air	EPA TO-15 GC/MS SIM				1999	10248858	VOCs collected in Canisters by GC/MS SIM		
		4645	cis-1,2-Dichloroethylene						
		4625	Dichlorodifluoromethane (Freon-12)						
		4765	Ethylbenzene						
		4795	Ethylene oxide						
		5240	m+p-xylene						
		4960	Methyl chloride (Chloromethane)						
		5000	Methyl tert-butyl ether (MTBE)						
		5005	Naphthalene						
		5250	o-Xylene						
		5115	Tetrachloroethylene (Perchloroethylene)						
		5140	Toluene						
		4700	trans-1,2-Dichloroethylene						
		4685	trans-1,3-Dichloropropylene						
		5170	Trichloroethene (Trichloroethylene)						
		5175	Trichlorofluoromethane (Fluorotrichloromethane, Freon 11)						
		5235	Vinyl chloride						
			EPA TO-17				1999	10312206	Determination of Volatile Organic Compounds in Ambient Air Using Active Sampling Onto Sorbent Tubes
				4640	1,1-Dichloroethylene				
				4735	1,4-Dioxane (1,4-Diethyleneoxide)				
		6380	1-Methylnaphthalene						
		6385	2-Methylnaphthalene						
		5500	Acenaphthene						
		5505	Acenaphthylene						
		5555	Anthracene						
		4375	Benzene						
		4505	Chloroform						
		4645	cis-1,2-Dichloroethylene						
		4765	Ethylbenzene						
		6265	Fluoranthene						
		6270	Fluorene						
		5240	m+p-xylene						
		5005	Naphthalene						



Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation



Euofins Environment Testing Northern California, LLC
 180 Blue Ravine Road, Ste. B
 Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description		
Air	EPA TO-17	5250	o-Xylene		1999	10312206	Determination of Volatile Organic Compounds in Ambient Air Using Active Sampling Onto Sorbent Tubes		
		6615	Phenanthrene						
		6665	Pyrene						
		5115	Tetrachloroethylene (Perchloroethylene)						
		5140	Toluene						
		4700	trans-1,2-Dichloroethylene						
		5170	Trichloroethene (Trichloroethylene)						
		5235	Vinyl chloride						
		5260	Xylene (total)						
		EPA TO-17 Modified			2	1999		10312217	Hydrocarbons in Ambient Air Using WMS Passive Sampling Tubes
				5160	1,1,1-Trichloroethane				
		5110	1,1,2,2-Tetrachloroethane						
		5165	1,1,2-Trichloroethane						
		4630	1,1-Dichloroethane						
		4640	1,1-Dichloroethylene						
		5210	1,2,4-Trimethylbenzene						
		4610	1,2-Dichlorobenzene						
		4635	1,2-Dichloroethane (Ethylene dichloride)						
		5215	1,3,5-Trimethylbenzene						
		4615	1,3-Dichlorobenzene						
		4620	1,4-Dichlorobenzene						
		4410	2-Butanone (Methyl ethyl ketone, MEK)						
		4995	4-Methyl-2-pentanone (MIBK)						
		4375	Benzene						
		4455	Carbon tetrachloride						
		4475	Chlorobenzene						
		4505	Chloroform						
		4645	cis-1,2-Dichloroethylene						
		4555	Cyclohexane						
		4755	Ethyl acetate						
		4765	Ethylbenzene						
		5240	m+p-xylene						
		4960	Methyl chloride (Chloromethane)						



Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation



Euofins Environment Testing Northern California, LLC
180 Blue Ravine Road, Ste. B
Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description		
Air	EPA TO-17 Modified	5000	Methyl tert-butyl ether (MTBE)	2	1999	10312217	Hydrocarbons in Ambient Air Using WMS Passive Sampling Tubes		
		4825	n-Heptane						
		4855	n-Hexane						
		5090	n-Propylbenzene						
		5005	Naphthalene						
		5250	o-Xylene						
		5100	Styrene						
		5115	Tetrachloroethylene (Perchloroethylene)						
		5140	Toluene						
		4700	trans-1,2-Dichloroethylene						
		5170	Trichloroethene (Trichloroethylene)						
		5235	Vinyl chloride						
		EPA TO-3				1984		10312400	Method for the Determination of Volatile Organic Compounds in Ambient Air Using Cryogenic Preconcentration Techniques and Gas Chromatography With Flame Ionization and Electron Capture Detection
		9408	Gasoline range organics (GRO)						
		Modified EPA TO-17 Passive RAD130 Tube				2		1999	60032351
5160	1,1,1-Trichloroethane								
5110	1,1,2,2-Tetrachloroethane								
5165	1,1,2-Trichloroethane								
4630	1,1-Dichloroethane								
4640	1,1-Dichloroethylene								
5210	1,2,4-Trimethylbenzene								
4610	1,2-Dichlorobenzene								
4635	1,2-Dichloroethane (Ethylene dichloride)								
5215	1,3,5-Trimethylbenzene								
4615	1,3-Dichlorobenzene								
4620	1,4-Dichlorobenzene								
4410	2-Butanone (Methyl ethyl ketone, MEK)								
4995	4-Methyl-2-pentanone (MIBK)								
4375	Benzene								
4455	Carbon tetrachloride								



Oregon

Environmental Laboratory Accreditation Program

ORELAP Fields of Accreditation




Euofins Environment Testing Northern California, LLC
180 Blue Ravine Road, Ste. B
Folsom, CA 95630

ORELAP ID: CA300005
EPA CODE: CA00933
Certificate: CA300005 - 020

Issue Date: 5/13/2024 Expiration Date: 10/17/2024

As of 5/13/2024 this list supersedes all previous lists for this certificate number.

MATRIX	Reference	Analyte Code	Analyte	Revision	Rev. Date	Method Code	Description
Air	Modified EPA TO-17 Passive RAD130 Tube			2	1999	60032351	The Determination of Hydrocarbons in Air Via RAD130 RADIELLO Passive Sample Tubes
		4475	Chlorobenzene				
		4505	Chloroform				
		4645	cis-1,2-Dichloroethylene				
		4555	Cyclohexane				
		4755	Ethyl acetate				
		4765	Ethylbenzene				
		5240	m+p-xylene				
		5000	Methyl tert-butyl ether (MTBE)				
		4825	n-Heptane				
		4855	n-Hexane				
		5090	n-Propylbenzene				
		5005	Naphthalene				
		5250	o-Xylene				
		5100	Styrene				
		5115	Tetrachloroethylene (Perchloroethylene)				
		5140	Toluene				
		4700	trans-1,2-Dichloroethylene				
		5170	Trichloroethene (Trichloroethylene)				
		5235	Vinyl chloride				

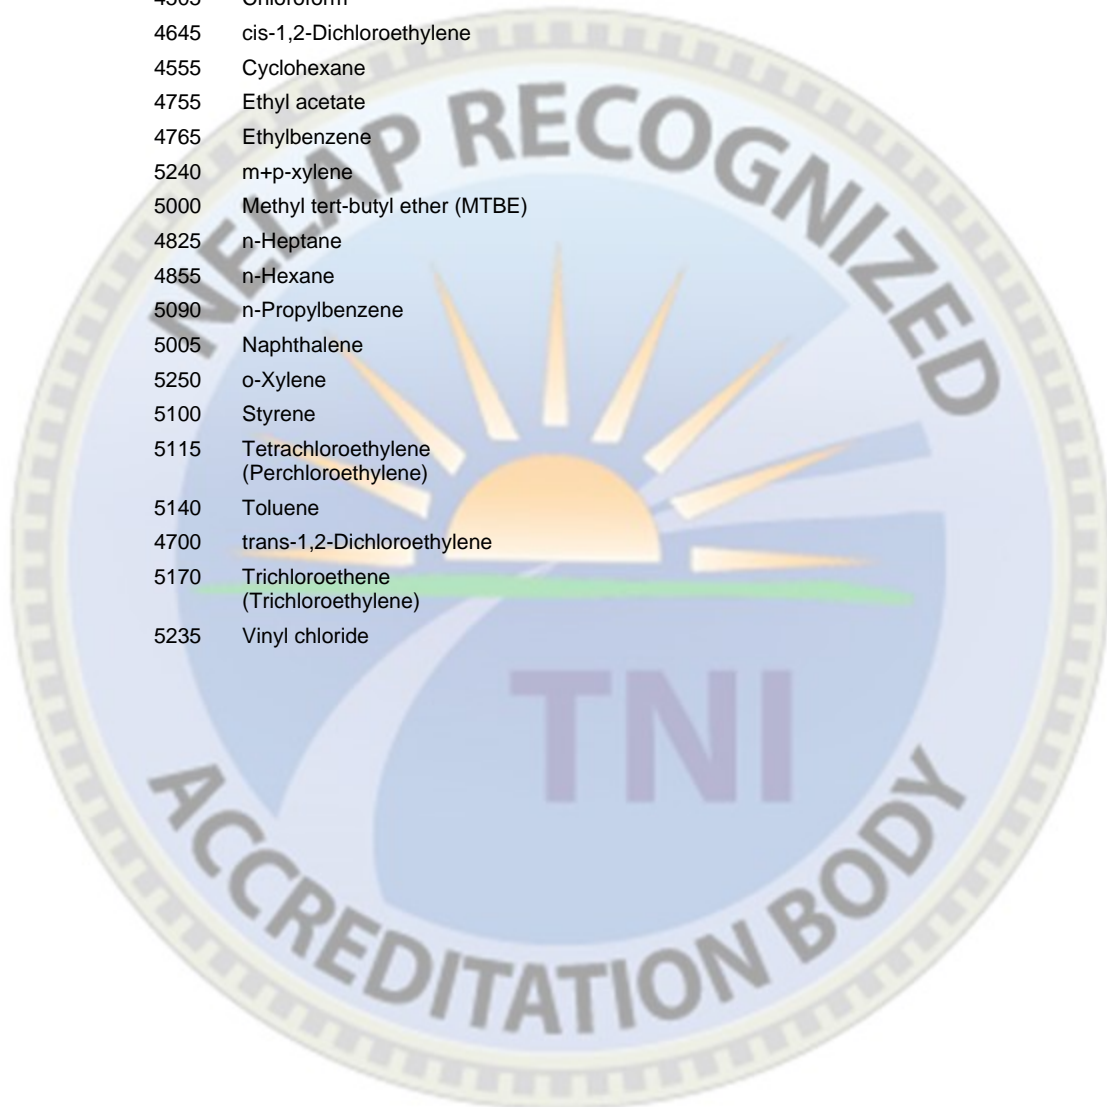



South Coast
Air Quality Management District

21865 Copley Drive, Diamond Bar, CA 91765-4178
(909) 396-2000 • www.aqmd.gov

November 30, 2023

Dr. Sucha S. Parmar
Atmospheric Analysis & Consulting
2225 Sperry Ave.
Ventura, CA 93003

Subject: LAP Approval Notice
Reference # 03LA0606

Dear Dr. Parmar:

We completed our review of the renewal application you submitted for approval under the South Coast Air Quality Management District's Laboratory Approval Program (LAP). We are pleased to inform you that your firm is approved for the period beginning November 30, 2023, and ending November 30, 2024 for the following methods, subject to the requirements in the LAP Conditions For Approval Agreement:

South Coast AQMD Method 307-91
South Coast AQMD Method 25.1 (Analysis)
South Coast AQMD Method 25.3 (Analysis)

Thank you for participating in the LAP. Your cooperation helps us to achieve the goal of the LAP: to maintain high standards of quality in the sampling and analysis of source emissions. You may direct any questions or information to LAP Coordinator, Colin Eckerle. He may be reached by telephone at (909) 396-2476, or via e-mail at ceckerle@aqmd.gov.

Sincerely,

D. Sarkar

Dipankar Sarkar
Program Supervisor
Source Test Engineering

DS:CE

231130 LapRenewal.doc

March 29, 2024

Bobby Ashfour
Best Environmental
339 Stealth Court
Livermore, California 94551
bobby@best-enviro.com

Dear Bobby Ashfour:

I am pleased to inform you that the California Air Resources Board (CARB) has extended your approval, by means of enclosed Executive Order I-24-003, to perform CARB Test Methods 1, 2, 3, 4, 5, 8, 11, 17, 100 (CO, CO₂, NO_x, O₂, SO₂, THC), Visible Emissions Evaluation, and U.S. Environmental Protection Agency Test Methods 15A, 18, 201A, and 202. These approvals are valid through June 30, 2025, during which time a field audit of Best Environmental's testing ability may be performed.

If you have questions or need further assistance, please [contact the Independent Contractor Program](#)¹.

Sincerely,

Walter Ham Digitally signed by Walter Ham
Date: 2024.03.29 12:49:13
-0700

Walter Ham, Ph.D., Chief, Monitoring and Laboratory Division

Attachment

¹ icp@arb.ca.gov.

**State of California
Air Resources Board**

Executive Order I-24-003

**Relating to Independent Contractor Approval under
California Code of Regulations, title 17, section (§) 91200 and following**

Best Environmental

Whereas, the California Air Resources Board (CARB), pursuant to California Health and Safety Code, section 41512, has established the procedures contained in California Code of Regulations, title 17, § 91200 and following, to allow the use of independent testers for compliance tests required by CARB;

Whereas, it has been determined that Best Environmental meets the requirements of CARB for performing CARB Test Methods 1, 2, 3, 4, 5, 8, 11, 17, 100 (CO, CO₂, NO_x, O₂, SO₂, THC), Visible Emissions Evaluation (VEE), and U.S. Environmental Protection Agency (U.S. EPA) Test Methods 15A, 18, 201A, and 202 pursuant to Cal. Code Regs., tit. 17, § 91200 and following, when the following conditions are met:

1. Best Environmental permanently marks or engraves an identification number on the body of each of its pitot tubes in accordance with section 2.1 of CARB Test Method 2;
2. Best Environmental calibrates its differential pressure gauges after each test series in accordance with section 2.2 of CARB Test Method 2, and establishes and maintains a log of the calibrations;
3. Best Environmental calibrates its pitot tubes in accordance with section 4.1 of CARB Test Method 2, and establishes and maintains a log of the calibrations;
4. Best Environmental uses a filter holder and filter support in accordance with section 2.1.5 of CARB Test Method 5;
5. Best Environmental calibrates its metering system in accordance with section 5.3 of CARB Test Method 5, and establishes and maintains a log of the calibrations;
6. The person performing VEE passed MM104: Visible Emissions Evaluation (Online) and MM105: Visible Emissions Evaluation: In Class and is currently certified to conduct VEE. All recertification for VEE, following the passage of CARB's MM104 and MM105, must be from a certifying body recognized by CARB at the time VEE is performed;
7. Best Environmental installs and uses a small surge tank between the pump and rate meter in accordance with section 6.1.6 of U.S. EPA Test Method 15A;
8. Best Environmental locks its sample storage areas or seals its sample containers when they are not being processed; and

Whereas, CARB Executive Officer, pursuant to California Health and Safety Code section 39516, issued Executive Order G-02-008, delegating to the Chief of CARB Monitoring and Laboratory Division (MLD) the authority to approve independent testers in accordance with Cal. Code Regs., tit. 17, § 91200 and following.

Now, therefore, I, Walter Ham, Chief, of MLD, order that Best Environmental is granted approval from the date of execution of this Executive Order through June 30, 2025, to perform the test methods identified above, subject to compliance with Cal. Code Regs., tit. 17, § 91200 and following.

It is further ordered, that during the approved period the Executive Officer or his or her authorized representative may field audit one or more tests performed pursuant to this Executive Order for each test method identified above.



It is further ordered that Executive Order I-23-009 is superseded by this order.

Executed at Sacramento, California this 29th day of March 2024.

Walter Ham

Digitally signed by Walter Ham
Date: 2024.03.29 12:51:23
-07'00'

Walter Ham, Ph.D., Chief
Monitoring and Laboratory Division

	Always check on-line for validity.	Level:	
	SAMPLE RECEIVING/LOGIN PROCEDURES	Standard Operating Procedure	
	Document number: 050-SOP2966		Organisation level: 4-Laboratory Site
	Old Reference: SOP 50 rev. 31		Responsible: 6_AT_OP2QA
Version: 31			
Approved by: UHHA Effective Date: 22-NOV-2023	Document users: 4_EUUSFM_AirToxic_All		

Eurofins Environment Testing Northern California, LLC
STANDARD OPERATING PROCEDURE

SOP #50

The information contained herein is of a highly confidential and proprietary nature. Eurofins Environment Testing Northern California, LLC specifically prohibits the dissemination, copy, disclosure, transfer, or modification of this information without the express written approval of Eurofins Environment Testing Northern California, LLC.

- 1.0) SCOPE AND APPLICATION
- 2.0) RECEIVING PACKAGES
- 3.0) LOGGING IN WORKORDERS (Wos)
- 4.0) LOGIN REVIEW (100% FOR THOSE NOT SIGNED OFF AND DoD WORKORDERS)
- 5.0) SAMPLE DISCREPANCY REPORT (SDR)
- 6.0) TECHNICAL PROCEDURES
- 7.0) SAMPLE STORAGE
- 8.0) HANDLING OF HAZARDOUS SAMPLES
- 9.0) SUBCONTRACTING SAMPLES
- 10.0) ON-HOLD SAMPLES AND CANCELLATION OF WORKORDERS AND SAMPLES
- 11.0) INTERNAL COMMUNICATIONS
- 12.0) THE FLOW OF FOLDERS
- 13.0) THE TRACKING OF FOLDERS
- 14.0) SPECIALIZED WO CREATION
- 15.0) REFERENCES/DEFINITIONS
- 16.0) APPENDICES
- 17.0) SOP REVISION HISTORY

1.0) SCOPE AND APPLICATION

The purpose of this Standard Operating Procedure is to outline the procedures for receiving samples, entering them into the ATLAS database, and logging them into the proper sample storage area. This SOP establishes specific guidelines for sample acceptance, which are generally accepted practices under EPA, DoD-ELAP, DOECAP and NELAP protocols. Refer to *Appendix A* for the Laboratory's Sample Acceptance Policy.

2.0) RECEIVING PACKAGES

2.1 If receiving a group of packages, such as from Fed-Ex or UPS, keep the packages together until the last one is brought in. Count the items, confirm with the driver the number of packages and sign for them. If the count isn't confirmed, have the driver rescan all the packages and verify that all packages are intended for this laboratory. As signing for the packages assumes custody of them, never sign until the count is confirmed.

2.1.1 Sort Packages

2.1.1.1 Line up coolers in area behind receiving counter. Place coolers from the same client (based on company and point of contact) touching, as these samples are probably from the same project.

2.1.1.2 In an appropriate area, line up the boxes. Boxes from the same client (based on company and point of contact) should be touching, as they are probably from the same project.

2.1.2 Triage

2.1.2.1 Open package; locate and fill out COC (Chain of Custody). If there is no COC, notify the PM (Project Manager).

*Laboratory COCs have a place for the items noted below. If receiving a client COC, the following information still needs to be documented and there are stamps on the front counter to aid in this process.

- In the Received section, place signature followed by "EATL" (to denote receipt by lab) and the date/time (in military time) which the samples arrived at EATL.
- Verify and fill in Custody Seal Info.
 - Yes: Custody seals present and intact.
 - No: Custody seals present, not intact.
 - None: Custody seals not present.
- If applicable, measure and record the temperature of sample(s). (See section 6.1.) Repack the ice and close the coolers to maintain temperature. If temperature recording is not applicable, write "NA" for the temperature.

- Verify and fill in condition of sample(s).
 - Good: No obvious damage and proper temperature.
 - If an issue is found, enter SDR (Sample Discrepancy Report) on the COC: Issues include evidence of possible shipping damage, custody seals are not intact, samples were received at an improper temperature or the COC is incomplete (refer to section 5.0).
- Fill in Shipper Name (Ex: Fed-Ex). If shipping documents are loose, then detach them from package to be transferred with the COC into workorder folder. If the shipping documents cannot be detached from the package, write the tracking number on the Air Bill section of the COC (Note: If the airbill can be placed in folder there is no need to fill in the Air Bill#).
- If there is any indication on the COC that the samples are on a TAT of 7 Days or sooner, place a red folder with the sample set and if the indicated TAT is 3 Days or sooner alert other Login Analysts as to the rush status.

2.1.2.2 Do a cursory hold time check, alerting the lab and PM of any samples with sensitive hold time.

2.1.2.3 Samples Designated By Clients To Be Used For Evidentiary Purposes

2.1.2.3.1 Clients may designate that samples will be used for evidentiary purposes either on the COC or in some other documented manner.

2.1.2.3.2 Unless specific instructions are received from the client and are agreed to by the laboratory, samples that are designated for evidentiary purposes will be logged in and maintained identically to samples not identified for this purpose.

2.1.3 Print Project Profile

2.1.3.1 Canisters or barcoded sorbent tubes (i.e. TO-17 TA, 325B, etc.)

2.1.3.1.1 Open ATLAS. In the CATS/CATS tab, check-mark the box next to the "Print Project Profile" and place cursor in Asset Barcode field.

2.1.3.1.2 For each group of samples, scan the barcode on the canister/tube to print the Project Profile.
NO SAMPLES MAY BE LOGGED IN WITHOUT A PROJECT PROFILE.

2.1.3.1.3 Verify if the samples will be on a TAT of 7 Days or sooner (check the COC, Profile TAT and Profile Notes to Receiving). If so, place a red folder with the sample(s) and alert other Login

Analysts to the rush status if the TAT is 3 Days or sooner.

2.1.3.1.4 Based on the expiration date, TAT and if the samples need to be refrigerated, determine the priority for logging in the samples. Communicate with the lab and PM to let them know of any rush analyses (2 Days or sooner) or expiring samples. Communicate priorities to other Login Analysts.

2.1.3.2 Client Canisters or non-barcoded media

2.1.3.2.1 For Tedlar Bags, Client Canisters or media without barcode scanning information, use the information on the COC to locate the correct project profile. See WI 50 for detailed instruction to find project profiles. If unable to positively determine the project profile due to missing client information or project information, it will require project manager's confirmation; if the PM is not available to confirm, the workorder will be placed on hold. When the correct project profile has been identified, the Project Manager will send an email confirmation and notify sample receiving to proceed with the log-in. **Do not send SRC** until profile is confirmed.

Note: To ensure a correct profile is selected, the company name on CoC must match the profile, unless otherwise noted in profile or confirmed by PM. The project name or number should match with profile or previous workorders. If any doubt, confirm with project managers. The SRC should not be sent until profile is confirmed.

2.2 If receiving packages directly from a client or client's courier:

2.2.1 Ensure proper documentation on the COC in regard to custody transfer.

2.2.2 Fill out the COC as in 2.1.2.1 above, writing "HD" as the Shipper Name, this shall indicate the media was Hand Delivered (An Airbill is not necessary for Hand Delivered items).

2.2.3 Do a cursory check to make sure that the COC is filled in properly, the TAT is apparent and the type of analysis requested is consistent with the media that has been submitted. Ask questions, if needed. Give the client a copy of the COC.

2.2.4 If there is any indication on the COC that the samples are on a rush TAT, put a red folder with the documentation and alert other Login Analysts as to the rush status.

2.2.5 Do a cursory hold time check, alerting the lab and PM of any samples with sensitive hold times or turnaround times of 2 Days or sooner.

2.3 If receiving packages directly from an EATL Courier:

2.3.1 Should the laboratory Courier have the COC in hand, they shall sign and date with time the 'Relinquished by' area to ensure proper documentation on the COC in regard to custody transfer.

2.3.2 Fill out the COC as in 2.1.2.1 above, writing "Courier" as the Shipper Name. An Airbill is not necessary for the laboratory Courier delivered items.

2.3.3 Do a cursory check to make sure that the COC is filled in properly, the TAT is apparent and the type of analysis requested is consistent with the media that has been submitted. Contact the PM with any questions, if needed.

2.3.4 If there is any indication on the COC that the samples are on a rush TAT, put a red folder with the documentation and alert other Login Analysts as to the rush status.

2.3.5 Do a cursory hold time check, alerting the lab and PM of any samples with sensitive hold time or turnaround times of 2 Days or sooner.

2.3.6 If the laboratory Courier delivered packages while Login Analysts were away from receiving, the laboratory Courier shall sign and date with time the "Relinquished by" area, while Lab personnel will sign and date with time the "Received by" area.

- 2.3.7 Second Triage: Second triage will be performed daily once FedEx & UPS priority/ground shipments have been delivered. Emphasis for second triage walkthrough is to target any missed due dates, hold times or Tedlar Bags in the initial triage

3.0) LOGGING IN WORKORDERS (WOs)

- 3.1 Find the WO stamp on the front counter, the stamp will automatically increase the number by 1. This will be the WO Number for this set of samples. Stamp the COC(s). See section 6.2 for more details on assigning the WO number.
- 3.2 Set out samples in order, as shown on the COC, verifying the sample tags against the COC. Document discrepancies on a SDR (see Section 5.0).
- 3.2.1 Collection times not present on the COC or consistent with sample tags are not considered to be a discrepancy.
- 3.3 As clients may have more than one project in progress and may pull cans related to a different profile, to ensure the correct profile is used: Compare the project profile against the COC for project name/number, the requested analysis, etc.
- 3.3.1 If a matching profile cannot be found, contact the PM for confirmation of which Profile to use.
- 3.3.2 If it appears that the correct Project Profile does not have the appropriate information, (such as the profile is limited to TO-15 analysis, but the COC requests TO-3), contact the appropriate PM for clarification.
Note: Follow-up with the PM within 24-hours if a response is not provided.
- 3.4 Click New WO Button in ATLAS
- 3.4.1 Enter the Project ID from the profile into the Project ID section and hit enter or click Search.
- 3.4.2 This will populate the project info into the results section, but does not automatically highlight the first record in the results section. Manually highlight the record.
- 3.4.3 Click Create New Workorder button.
- 3.4.4 Type in WO number.
- 3.5 In the Receiving tab in ATLAS
- 3.5.1 Wait for the computer to update the screen.
- 3.5.2 Fill in Receiving Status (check completed which will automatically update the "By" initials to the person logged into ATLAS).
- 3.5.3 If there are any issues found, such as expired samples or improperly filled out COCs, fill out a SDR (see section 5.0). The sections of the SDR will guide whether the samples continue through the process or are held until the Project Manager (PM) contacts the client.
- 3.5.4 Analysis Box
- 3.5.4.1 Reporting List: Click on List Filter or click F5 to refresh the Reporting Lists in the Project Profile and choose correct list. Before choosing a list, ALWAYS make sure that Current Project is clicked, as the WO should only report options from the Project Profile. IF THE LIST NEEDED IS NOT ASSOCIATED WITH THE PROJECT, NOTIFY THE PM TO MAKE APPROPRIATE CHANGES TO THE PROFILE BEFORE CONTINUING.
- 3.5.4.2 Method Type: The system will autofill the Method Type based on the Reporting List. It is typically accurate, but the dropdown can be used to fill in the correct laboratory work list. This field is used to place the WO on the appropriate laboratory worklist. (If ATL Applications do not fill correctly, manually choose Other MS or Other GC as appropriate for the type of analysis. The lab can direct you to the correct entry, if you are not sure for that particular analysis.)

3.5.4.3 Type of Analysis: The system will autofill based on the Reporting List. This field is used to populate the Method on the Login Summary page.

3.5.4.3.1 For 5&20, make appropriate change so that only the correct analysis (TO-14A or TO-15) is present, such as Method TO-15 (5&20 ppbv).

3.5.4.4 Sample Tracking Type of Analysis: The system will autofill based on the Reporting List. It should always be the Reporting list without the word "Modified" and then any add-ons needed. This is the list that shows for the lab in Sample Tracking. "Modified" is removed for easier viewing in the lab.

3.5.4.4.1 If the Project Profile indicates that this is an AFCEE project, add "/AFCEE" to the end.

3.5.4.4.2 If the samples have multiple lists indicate such as "/2Lists" at the end.

3.5.5 Project Information box:

3.5.5.1 Fill in Project Number/Project Name from COC. These items will be typed exactly as they are shown on the COC, including capital letters, spacing, hyphens, etc. If the COC is blank, these fields will be blank, regardless of whether or not they are populated in the Project Profile.

3.5.5.2 Verify dates, turnaround and checkboxes.

3.5.5.3 Verify that the Financial Status is set to "Good". If the Financial Status is not "Good" (the field is red), then note for later action. (See section 6.11.)

3.6 Receive returned items into CATS

3.6.1 Go to CATS, the Reception Editor Tab

3.6.2 For tracked items (those with barcodes such as canisters and flow controllers):

3.6.2.1 Place the cursor in the Asset Barcode field. Scan samples in order then scan all other bar-coded items. Verify by the number of lines that all items were recorded.

3.6.2.2 For samples, in the Items Received box tab to the Fraction ID field. Type in the correct Fraction ID's (01A, 02A...). Verify the canister numbers on the COC against those in the system.

3.6.2.3 For extra media not listed as sample, verify if they are from the same PID or same client.

3.6.2.4 Save.

3.6.3 To return items shipped by quantity (such as gauges, tubes, filters and etc.):

3.6.3.1 After tracked items have been scanned, in the Items Received section highlight the Shipment ID, then click the Find Other button.

3.6.3.2 The Shipment ID will appear in the Search Criteria box of the Find Other tab. (Alternatively, in the Find Other tab, type in the Shipment ID preceded by the PMs initials, such as "KV76741".)

3.6.3.3 Click the Find button. This will populate the Open Shipments portion of the results.

3.6.3.4 Double click on the Open Shipments to pull up the Items.

3.6.3.5 Click on each item received, put in the correct Qty and then click Receive Item(s).

3.6.3.6 This will receive the item with your WO

3.6.3.7 Repeat until all items have been received and then click back into the Reception Editor. The items you received by quantity will now be part of the Items Received list.

3.6.3.8 Save.

3.6.4 Click the "Print Receiving Report" button.

3.7 Check the shipment for additional charges:

3.7.1 Right-mouse click on the shipment ID and choose "Open Selected Shipment" to open the associated shipment.

3.7.2 Check to see if the Shipment has already been pulled (Bidship Pulled shows as "Y"). If the shipment has already been pulled, skip to Section 3.7.6.

3.7.3 Check if shipping needs to be charged or if any items such as fittings, unions or tubing need to be charged for.

3.7.4 If not, click the box to Y for the Bidship Pulled and save.

3.7.5 If charges apply:

3.7.5.1 Note the items, quantity and shipping charges so that they can be charged for in section 3.9.

3.7.5.2 Write comments in the Conditions for Charges section of the bidship showing which WO will be charged and what items (such as shipping or fittings), set the Bidship Pulled Box to Y and save.

3.7.6 Repeat, checking all associated shipments

3.8 Return to the Receiving tab

3.8.1 If the media was scannable (had bar codes), click the auto-fill from CATS button, which will auto-fill the fraction numbers and container info. If the media was not scannable, enter the fraction numbers and container types manually.

3.8.2 Type in the Client Sample ID, exactly as shown on the COC including capital letters, spacing, hyphens, etc.

3.8.2.1 Type in the Date of Collection. (Other countries sometimes write dates as day/month/year instead of the US standard of month/day/year - when in doubt, check with the PM.)

3.8.2.2 Check for expired or soon to expire samples. Notify the lab of quickly expiring samples and fill out an SDR (see Section 6.0) for samples which were received expired.

3.8.2.3 Click Save WO.

3.8.2.4 Check the Sample Tracking Info box. Samples associated this Project Profile ID are tracked and summed. Total Samples therefore reflects the total number of all samples ever received under a given Project profile ID. If the number of samples is the same as the number of samples in this WO, check CSR Review to give the PM the opportunity to review the first WO from the Project Profile.

3.8.2.5 If the Project Profile states 100% duplicates or 1/ANB (1 per analytical batch), set the number of duplicates appropriately.

3.8.2.6 If samples require extraction (PUF/XAD media e.g.), make sure the "Requires Extraction" box is checked.

3.9 In the Login module go to the Login tab

3.9.1 Fill in the Login Status (check completed which will automatically update the "By" initials to the person logged into ATLAS).

3.9.2 Enter the PO Number from the COC, exactly as shown including capital letters, spacing, hyphens, etc. If the PO Number is not on the COC, use the PO Number from the Project Profile. If there is no PO Number on the Project Profile either, leave the field blank.

3.9.3 Verify the Report To and Bill To info versus the Project Profile.

3.9.4 In the Sample Info section:

3.9.4.1 If the samples are canisters, click "Auto-Fill From Rcvg" which fills in the Final Press. Verify the Final Press is correct. If not, manually type in the final pressure associated with the canister type. If samples are not canisters, leave blank.

3.9.4.2 Enter the times of collection from the COC (if times are not present on the COC, keep blank which will fill as "NA" on the report). Only samples are required to have sample times.)

3.9.5 Click the Misc. Charge Auto-Fill from Project button.

3.9.5.1 Using the Shipment and Project Profile, verify that all charges pulled in are correct and that all applicable charges are included (examples include canisters, shipping, fittings, tubing, unions, eCVP and EDD charges).

3.9.5.2 The auto-fill will pull in charges based on Shipment and will put in a comment as to which Shipment the charges are from. Keep this information as it comes over, for billing purposes.

3.9.5.3 If shipping is charged, a 20% handling fee is added for domestic shipping. International shipping is always charged and has a 30% handling fee. The price in "Client Charges" field includes the handling fee.

3.9.6 Save the WO and Print Labels (unless there are multiple fractions).

3.10 Go to the Lab Narrative Tab. (See SOP #45 for further information.)

3.10.1 Choose the correct Narrative template. (See Work Instructions WI50 for a list of common used Lab narratives.)

3.10.2 Click "Refresh samples recvd, header line" button.

3.10.3 Verify the first sentence in the first narrative box, including the number of samples, type of media and date Received.

3.10.4 If there were receiving issues (as narrated in the SDR, see section 6.0), use the Insert Narratives button to choose the correct narrative statement. The wizard can help to insert sample IDs appropriate for the issue. QA is responsible for maintaining these templates. The Receiving analyst is allowed to change the tense and add in the correct sample IDs, but any other changes to the template must be approved by QA.

3.11 Go to the Login FAX Cover tab

3.11.1 If the client is on Financial Hold, choose the appropriate narrative to include in the Login Fax. See Section 7.11 for additional information regarding Financial Status.

3.11.2 If there were receiving issues, click on discrepancies to help create text. This is NOT the same wording as the Lab Narrative, although the issues are narrated in both places. Be sure to include the statement "The following discrepancy has been observed" using the correct vernacular.

3.12 Go to the Remarks tab

3.12.1 Use the list of Remarks to help create the text for any remarks. These will print on the WO Summary Page (Ex: A 100% surcharge was applied for the 24-hour turnaround time). There is sometimes a note in the Project Profile giving a specific remark that needs to be added to all WOs for that project.

3.12.2 In WO comments narrate anything internal to the laboratory. The client will not see these comments (Ex: 3 cans received unused.). Anything out of the ordinary, which required verification, or might be questioned, should be notated in this section.

3.13 Email/Scan COC

3.13.1 Scan the COC as a TIFF file and attach using the Load and Save COC button. **NOTE:** If the project is a DOD or DOE Level IV (eCVP), the shipping documents must be scanned into ATLAS as well. Scan the COC and shipping document(s) as a TIFF file and attach using the Load and Save COC button.

3.13.2 Verify that the WO number on the COC matches the WO number in ATLAS and that all COC pages and shipping documents (if applicable) are present.

3.14 Print the Login Review Report from the Report tab.

3.14.1 Verify each item on the report referencing the COC, Project Profile, Receiving Report and SDR.

3.14.2 Check mark next to each item to show that it was verified.

- For the checkbox section, a check-mark or "NA" must be used for each item (NA is appropriate when an item does not exist. For instance, if there is no SDR then the box for "All SDR items have been narrated." should be "NA"). A line-through all the boxes does not prove that each item was verified and is not appropriate.

3.14.3 If needed, make notes on the report to clarify any unusual circumstances.

3.14.4 For minor changes that need to be made, show the change on the report and date and initial to show that the change was made in the system. For major changes, make the change then reprint the report.

3.14.5 Date and initial the Login Reviewed By line at the end of the report to show that you have approved the information on the report. This report serves as a checklist for items

that need to be verified. If you are signed off and will not be sending the WO through Login Review, also sign the Second Reviewed by line and mark the Reviewed Status as complete with your initials in the Login/Login Screen. See *Appendix B* for Login Review Report example.

3.14.6 All DoD and DOE workorders require Login Review to be completed by a different person that logged in the samples.

3.15 If the sample does not need to be pressurized, print the Login Summary page.

3.16 Print the Reporting List and verify that it is correct.

3.17 Put folder together.

3.17.1 Staple the Project Profile to the inside of the front of the folder.

3.17.2 Put Stamps on folder, as needed.

- QA Review (See Section 7.8.)
- Login Review (100% for Analyst in training)

3.17.3 Put dates on folder, using "NA" where not applicable. The folder should be pre-stamped with the following Due Dates:

- Promise Date
- CVP Date
- EDD Date

3.17.4 The documents should be put in this order.

- Login Summary Page (may be added after pressurization)
- COC
- Project Requirement Table - PRT (If applicable). *The location of the PRT can be found in the Special Field of the QA/QC section of the Project Profile (i.e., O: \Project Requirement Table 20xx\010x-00xQC.doc). The path listed indicates the location of the file on the network.*
- Sample Receiving Report
- Any contacts, emails or other info
- Login Review Report
- Air Bill(s)

3.18 Additional fractions of a WO

3.18.1 If the same samples are used in an additional fraction, use the "Duplicate Current Workorder" button in the New Workorder tab to create a fraction with the next letter. (For example you are in the "A" fraction, clicking this button will create a "B" fraction.)

Please Note:

**If multiple fractions are created, canisters must be scanned and charged in the same fractions, usually the A fraction. Exceptions are when different media were received (i.e. TO17 tube vs canister).

**Creating a Duplicate Workorder will not automatically move the cursor to the Receiving tab; the user must click to the Receiving/Receiving screen to access the new fraction.

3.18.1.1 Update the Method Type, Reporting List, Type of Analysis and Sample Tracking Type of Analysis as shown in 3.5.4.

3.18.1.2 If this fraction uses only some of the samples from the previous fraction, in the Login/Login screen, right-mouse-click on the sample(s) that do not apply and choose the "Delete Row" feature. This will delete the sample from this fraction.

3.18.1.3 Follow steps 3.10-3.17 Note: The COC from the parent fraction will auto-fill. Verify that this is the correct COC. If not, attach the correct COC.

3.18.1.4 When all fractions have been created, click Print Labels. This button will print labels for all fractions in a WO.

3.18.3 If the additional fraction of the WO does not include the same samples and has different media type, login from scratch using steps 3.4-3.15.

3.19 Label Samples

- 3.19.1 The print label feature will print all labels for all fractions of a WO or you may choose to print only specified fractions of the WO.
- 3.19.2 Affix label to the back of the sample tag underneath the pressurization section, and assure that the label is consistent with the sample. Verify barcode (if applicable).

3.20 Send the Sample Confirmation Email

Verify that all fractions of a WO have been logged in and reviewed. After finishing the last fraction, click on the Email Notification button under the Email/Scan COC tab. This will prompt the system to create the Sample Receipt Confirmation. Once created, click on the Send Email button, which will pop-up the email to be sent to the client from the appropriate PM's email address. Verify with the Project Profile that you are emailing the correct person(s), do a sanity check of the pdf to ensure that it created correctly and send the email. Note: During the training process, this step will be performed by an experienced analyst after Login Review.

3.21 If the samples are not canisters, the folders may be transferred directly into the appropriate Lab Pickup Bin in receiving or to Login Review. The samples will be logged into the appropriate Sample Tracking Logbook and placed in the appropriate storage area (See Section 8.0). The update the WO status in ATLAS as appropriate.

3.22 If the samples are canisters, place folder and canisters on a cart for pressurization.

3.22.1 After pressurization the folder will be moved to Receiving for entry of pressures into the ATLAS workorder. (Note: For high pressure cylinders, DO NOT ENTER a pressure into the initial and final pressure columns on the Login Page. Instead, write a remark stating what pressure the cylinders were received at.)

3.22.1.1 Enter the initial pressure into the login screen.

3.22.1.2 Verify the final pressure on the login screen.

3.22.1.3 If there is an SDR for pressure issues, add the QA approved narrative to the Sample Receipt Section of the Lab Narrative tab.

3.22.1.4 Print the Login Summary Page and confirm the pressures on the hardcopy.

3.22.1.5 Put the documents in order as shown in Step 3.17.4.

3.22.1.6 Put the folder into the appropriate Lab Pickup Bin in receiving or Login Review. Be sure to update the WO status in ATLAS.

4.0) LOGIN REVIEW (100% FOR THOSE NOT SIGNED OFF AND DoD WORKORDERS)

The person completing the Login Review reviews the WO for accuracy. If the Login Analyst is not approved to send the Sample Receipt Confirmation email, the Login Reviewer will do so once the login has been approved. All DoD and DOE workorders require Login Review to be completed by a different person that logged in the samples.

4.1 Verify the items on the Login Review Report:

4.1.1 Any changes are indicated and given back to the Login person to correct, giving them the opportunity to learn. (Unless that person is out of the office and will not be able to make the corrections in a timely manner).

4.1.2 By dating and initialing the report at the "Second Review By" line at the end of the report, the reviewer indicates approval of the WO or that they approve the WO with minor changes as notated. For major changes, the Login Reviewer may request the folder to be returned for a second review.

4.2 Verify the Reporting List and pressures (if applicable).

4.3 Once all changes have been made and verified, in the Login/Login screen, check the Review Status box as completed, which will autofill the initials of the person logged into ATLAS.

4.4 Send the Sample Confirmation Email (See Section 3.20).

- 4.5 Put the folder into the appropriate Lab Pickup Bin in receiving or with the canisters for pressurization, being sure to update the WO status appropriately.

5.0) SAMPLE DISCREPANCY REPORT (SDR)

During the course of receiving, logging in and pressurizing the samples, sample discrepancies may be observed and are listed on a Sample Discrepancy Report (see *Appendix C*). Most discrepancies are then noted in the Receiving Notes portion of the Lab Narrative using QA approved templates and/or on the Sample Receipt Confirmation email. Issues requiring immediate notification to the client are given to the PM to contact the client. This client interaction is also narrated on the SDR.

5.1 Possible General Sample Receipt Discrepancies include:

- Absence of a COC
- COC Incomplete
- COC not filled out in ink
- COC relinquished improperly
- Shipping Damage
- Number of samples on COC does not match the number of samples received
- Name of sample on COC does not match Sample Tag (See Work Instructions WI50 for exceptions)
- Sample collection date on COC does not match Sample Tag
- Not properly preserved
- Container type inappropriate for analysis
- Unlabeled samples
- Mislabeled samples
- Expired samples
- Custody Seals broken or improperly placed
- PM10 sample filters received wet

5.2 Possible Canister Sample Receipt Discrepancies include:

- Leaked to ambient at time of pressurization.
- Canister received emitting a strong odor; sample can/cannot be analyzed
- No brass cap or quick connect on canister and canister valve received open
- Flow controller used and canister sample received at ambient or under pressure
- Canister sample received with a vacuum difference >5.0 "Hg between the receipt vacuum and the final vacuum reported on the COC, indicating potential valve leakage.
- Canister sample received at >15 "Hg (not identified as a Trip/Field Blank).

5.3 Sorbent media

- Samples received outside of required temperature range; coolant was/was not present.
- Sample container was received broken; sample was/was not intact.
- Coolant was not properly dispersed throughout the cooler.

5.4 Tedlar Bags

- Tedlar bag appears to be leaking.
- Tedlar bag received flat.
- Tedlar bag received emitting a strong odor sample; can/cannot be analyzed (see Section 8.0).
- Tedlar Bag received with a significant volume of water.

5.5 EPA 325B

- Average Field Temperature not recorded on the COC.
- Loose end caps or missing end caps.
- No custody seal present on pelican case.

6.0) TECHNICAL PROCEDURES

6.1 Measuring Sample Temperatures

The receipt temperature is recorded on the COC for samples that are required to be received chilled per method requirement.

6.1.1 The laboratory ships a temperature blank (VOA vial filled with water) with every shipment of media that has this requirement. The vial is opened and the temperature is measured upon receipt using a NIST traceable thermometer probe. The required temperature should be 4 ± 2 °C.

*Client notification is required for samples received >6 °C using Sample Discrepancy Report (Type 2 SDR).

*Client notification is NOT required for sample received between 0-2°C (Type 1 SDR). No narrative needed.

6.1.2 If a temperature blank is missing, frozen, broken, or otherwise compromised, receipt temperature of the cooler cannot be verified for compliance with the 4 ± 2 °C criterion. The client is notified using the Sample Discrepancy Report (Type 2 SDR) that the temperature blank could not be used to record the sample receipt temperature, noting whether the samples were received chilled with blue ice intact and frozen.

6.2 Assigning Workorder Numbers and Fractions

6.2.1 A unique seven-digit number is assigned as an identifier for each workorder, in the format of YYMMSSS where YY is year, MM is month and SSS a number that increments sequentially for each WO in that month. For example, the first batch of samples received in January 2007 would be identified as 0701001. This workorder number is stamped on the COC. The ATLAS system is programmed to allow a unique workorder number to be assigned only once.

6.2.2 Ending letters assigned to the WO to denote either an additional analysis for the sample set or to break a large sample set into 20 or less samples for each WO. For example, if 2 analyses are requested for the first sample set received in January 2007, the WOs assigned would be 0701001A and 0701001B.

6.2.3 The following guidelines are used when assigning workorder numbers:

- Multiple analyses/same COC(s): Assign an ending letter for each analysis (i.e.: 0701001A, 0701001B, and 0701001C).
- Multiple COCs/same analysis, client, and project and the COCs are labeled as 1 of 2 and 2 of 2: Set up one workorder if there are less than 25 samples. If there are more than 25 samples, either assign a new WO# for each set of 25 or an ending letter for each subsequent set of 25 (i.e. 0701001A, 0701001B...) Some exceptions can be made, and will need to be approved by the PM.
- NOTE: When working with Hi/Lo or VPH WOs, the duplicated fractions will also need to be take into account, and the total per order/fraction shall be 13 each (with Hi/Lo and Dups making a total of 26 reported).
- Multiple COCs/different projects or COCs labeled as 1 of 1: Assign a different workorder number for each COC.

6.2.4 After the workorder number is established, each sample is given a unique fraction number (i.e.: 0701001-01A, 0701001-02A, ...). The fraction number is written next to the sample on the COC in the left hand column, if there is no room to legibly write this by the analyst it is possible to use the right hand margin. At this time, check the client sample identifications on the COC. Client sample IDs must be unique. If client sample IDs are not unique, it is an SDR.

NOTE: The same fraction number should never be re-used, even if there are multiple media types, unless it's required per project. Thus, each sample fraction should relate to a specific sample.

Up to 25 samples can be assigned per WO number or work order fraction. If more than 25 samples are received for one project, assign a WO number and fraction the first twenty samples as 01A-25A. Subsequent samples from the same project will generally be assigned a new WO number every twenty-five samples (i.e. 0701001, 0701002, ...

or 0701001A, 0701001B, ...) Some exceptions can be made if approved by the PM (i.e. an order with 27 samples). Sample fractions will begin with 01A for each new WO number that is created, sample fractions shall continue for each subsequent work order fraction. Example:

A workorder of 45 samples:

- 1) Samples 1 through 25 are assigned as
1108001A-01A through **1108001A-25A** (TO-15) and
1108001B-01A through **1108001B-25A** (ASTM D-1945);
- 2) The next 20 samples will be assigned the next sequential workorder number with the associated letter at the end and the sample numbering starting at 1 again as
1108002A-01A through **1108002A-20A** (TO-15) and
1108002B-01A through **1108002B-20A** (ASTM D-1945)

OR

A workorder of 45 samples:

- 1) Samples 1 through 25 are assigned as
1108001A-01A through **1108001A-25A** (TO-15) and
1108001C-01A through **1108001C-25A** (ASTM D-1945);
- 2) The next 20 samples will be assigned the next sequential workorder number with the associated letter at the end and the sample numbering continuing as
1108001B-26A through **1108001B-45A** (TO-15) and
1108001D-26A through **1108001D-45A** (ASTM D-1945)

6.3 Receiving Client Media

It is possible to receive media that is the property of the client. Refer to other ATLAS modules such as: Project Profiles, Contacts, Sample Tracking and previous workorders to verify the proper project information and verify with the PM if there is any doubt. See SOP 95 for the procedure relating to client canisters.

6.4 Receiving Laboratory Media Into ATLAS.

6.4.1 Laboratory media or equipment will be entered into ATLAS either by scanning its barcode or by quantity. Media without a barcode (i.e.:TO-17 VI tubes, TO-13A cartridges, Passive samplers, filters, etc.) must be matched with the shipment number manually. Refer to other ATLAS modules such as: Project Profiles, Contacts, Sample Tracking and previous workorders to verify the proper project information. A Receiving Report, which lists all media received, is printed and included in the workorder folder. Tracked media(barcoded media) is charged as it is returned. Non-Barcoded media and related equipment will be auto-invoiced at the time the shipment is released. Canister related items which are not expected to be returned, such as fittings or tubing, will be charged on the first WO related to the shipment and notated in the Shipment. Applicable shipping charges are also charged on the first related WO and notated in the Shipment, so that the client is not charged twice.

6.4.2 Clients will often indicate that media is not a sample by writing notes such as 'VOID', 'low vac', 'unused', 'do not analyze' or 'not a sample' on the sample tag or COC.

6.4.2.1 If the notation indicates an issue with the media, a c.Support incident will be created and a pink "Check Equipment" tag filled out and attached to the media. The media is then placed in the Check Equipment area for pick-up by Support Services. (See SOP #89 section 3.1 and Work Instructions WI50). The media is tagged with an Equipment Check tag which indicates PM & project ID, the client indicated issue and the EATL finding upon evaluation

6.4.2.2 If the notation does not indicate an issue with the media, it can be placed on the returns cart for pick-up by Support Services.

6.4.3 For samples not listed on the COC, samples received unmarked and/or not specifically labeled as returns (such as "Bad can", Do not analyze, VOID, etc) the PM will need to determine if they are samples. It is the responsibility of the Receiving Team to email the PM regarding questionable canister and provide the project name/number, bidship number, type of media **and label information (i.e. sample IDs)**. **Only when the PM confirms via written communication with the client that they are returns can the sample tags be marked with the word "VOID" in red marker and safely placed in the Returns area.** If they are determined to be samples, the PM will request a COC and they will be logged in as samples.

6.4.4 For samples received with documented sample IDs without a COC, the PM will need to determine if they are samples to be analyzed. The sample receiving staff sends an email to the appropriate PM with the sample IDs, project information (if available), bidship and type of media. Only when the PM confirms via written communication with the client that they are returns can the sample tags be marked with the word "VOID" in red marker and safely placed in the Returns area. If they are determined to be samples, the PM will request a COC and they will be logged in as samples.

6.5 Entering Project Information into the Workorder

- 6.5.1 Most of the project information is auto-filled from the Project Profile into the newly created workorder. It is imperative to check the Project Profile against the COC to ensure they are consistent. If not, consult the PM regarding the correct Project Profile for the sample set.
- 6.5.2 Hold times are programmed into ATLAS but should be verified (see Work Instructions WI50).
- 6.5.3 Due Customer Dates are programmed into ATLAS assuming PST or PDT (as appropriate) but should be verified. Samples that arrive after 3 pm are considered to be received the following day and the due dates must be manually entered into ATLAS.

6.5.3.1 The standard guidelines for due dates are as follows (see Work Instructions WI50 for detail):

- Date Due Customer: Date the client expects the data
- EDD Due Date: Date client expects EDD
- CVP Due Date: Date client expects CVP/eCVP Package
- Standard TAT: Date Promised and Date Due Customer is 9 business days by 11:59 pm.
- Rush TAT: Date Promised is the same as the Date Due Customer by continental US time (i.e. EST/CST/MST or PST, all international and non-continental US times are PST).

6.5.3.2 "Due Dates" stamp is placed on the outside of all folders indicating the Promised Date, CVP and EDD due dates. The Login Analyst records the appropriate due dates or 'NA' if a due date is not applicable.

6.5.3.3 Samples with a rush TAT (7 business days or less) will have a sticker which indicates the TAT and time due placed on the outside of the folder. Rush TAT workorders are due by 5PM but is adjusted to accommodate the difference in time zones. These WOs are placed in red folders.

6.6 Different colored folders are used to help define the sample set:

- Normal TAT - Yellow
- Quick TAT - Red
- Single Report Delivery - Orange (If a quick TAT is requested, a orange folder is used to alert the lab that special reporting requirements are needed.)
- Special Pressurization requirements – Green (If a quick TAT is requested, a green folder is used to alert the pressurization team that unusual pressurization requirements are needed.)

6.7 QA Review

QA Review is assigned on workorders requesting 100% QA review. A stamp will need to be placed on the outside cover of the workorder folder as well as a checkbox on the Receiving/Receiving screen.

6.8 External Proficiency Testing (PT) or Performance Evaluation (PE) Sample

External audit PT and PE samples are received periodically from either government agencies or consulting firms. Upon receipt, the Login Analyst notifies the QA Department. The QA Department works with a PM to set-up a Project Profile. The Login Analyst logs-in the samples using the Project Profile and under the direction of QA. The turn around time is set up one week earlier than is requested to allow the QA Department to review the data. All the documentation that is received is placed in the folder.

6.9 Labeling Samples

6.9.1 Canisters

- 6.9.1.1 Each sample is labeled with a unique, indelible identification. This label is printed out from ATLAS.
- 6.9.1.2 *Never* affix a label directly on a canister. Attach the sample label to the blue tag which is attached to each canister, being careful not to obstruct existing information.
- 6.9.1.2 The Sample Login Analyst will double-check lab sample IDs and canister barcode numbers when affixing the labels.
- 6.9.1.3 If the sample canister must be pressurized with Helium, attach a purple 'Pressurize with Helium' tag to the canister and ensure a green folder is used for the workorder, indicating special pressurization requirements.
- 6.9.1.4 If the client specifically requests that a sample be held for a period of time, check "Not Release can until:" box in Receiving page, select the date to be released and click save. This will print a date on the label to alert the lab staff before releasing samples. *This action must occur before printing the labels* A small orange tag must be stapled to the blue sample tag for these samples.
- 6.9.1.5 For samples which are marked either on the sample tag or COC as having high concentrations of a known compound, the Sample Login Analyst will place a red 'Danger' tag on the canister. Sometimes the client will provide this information ahead of time so that the Project Profile can reflect this in the 'Receiving Notes' section. Samples that arrive with an obvious odor are handled following Section 9.0 of this SOP.
- 6.9.1.6 If canisters or any laboratory equipments are labeled as faulty, they are tagged with pink Equipment Check tag that are filled with appropriate information then follow the c.Support procedure as outlined in Work Instructions WI50

6.9.2 Tedlar Bags.

- Labels should be affixed directly onto the bag, making sure not to obstruct the bag valve or existing sample information.

6.9.3 Labeling Other Media.

- 6.9.3.1 Labels should never be affixed to the samples themselves unless they are in a container which will not come in contact with the extraction or analysis equipment.
- 6.9.3.2 **Cartridges should not be touched by hand**; therefore the label is attached to the bubble wrap or plastic bag.

6.10 Financial Status

The Financial Status shows on the Receiving and Login screens. A Financial Status of "Good" shows as green and all others are red. If the Financial Status is not "Good" the WO shows on the

finance department worklist. The samples will then proceed into the laboratory for analysis. The procedure varies depending on the status of the clients' account. Samples remain 'On Financial Hold' until there is resolution. Categories are as follows (See Table 1):

Table 1

Financial Status	PM Action	Receiving Action	Lab Action
Blacklisted	No media, no report, no service. Notify client they have been black-listed and the lab will not do business with them.	If work comes in, notify the PM and manager immediately. DO NOT PROCESS SAMPLES!!	If work gets through, DO NOT ANALYZE!!! Notify PM and manager of the issue.
Prepayment	Notify client when they call for media that payment must be received in full before they will receive results.	Work order will automatically be placed on financial hold. "Cash in Advance " narrative is added to the sample receipt confirmation	
Collections	Same as blacklisted	Same as blacklisted	Same as blacklisted
Competitor	Obtain approval from senior manager; if approved, proceed as for any other client.	No action required.	No action.
Credit Card OK	Ask client if they have a current credit card on file that we may use. If not, refer to Client Credit Card Procedure. If client does not wish to use a credit card, inform Angela and client status will be changed to New Client. Send client appropriate T&C forms.	No action required.	Do not send report until there is a signature from Finance and the WO Financial Status field is set to "Good" in ATLAS
Good	No action required.	No action required.	No action required.
Hold	Notify client they will not receive any reports or media until the hold is lifted. Ask them to work with their A/P department to clear up the issue.	Work order will automatically be placed on financial hold. "Financial Hold" narrative is added to the sample receipt confirmation	Do not send report until there is a signature from Finance and the WO Financial Status field is set to "Good" in ATLAS.
New Client	Notify client they will not receive any reports until their credit application is fully executed (both parties have signed agreement).	Work order will automatically be placed on financial hold. "New client status" narrative is added to the sample receipt confirmation	Do not send report until there is a signature from Finance and the WO Financial Status field is set to "Good" in ATLAS.
PO Required	Ask for PO information and notify client that data will not be sent until the PO is confirmed and validated.	Work order will automatically be placed on financial hold. "PO required" narrative is added to the sample receipt confirmation if no PO# present on CoC or in profile.	Do not send report until there is a signature from Finance and the WO Financial Status field is set to "Good" in ATLAS.

6.11 Sample Receipt Confirmation

6.11.1 When a workorder is completed, a Sample Receipt Confirmation (SRC) email is sent to the client to confirm receipt of samples. The SRC consists of 5 sections:

- Section 1: Cover page with discrepancies noted.
- Section 2: Sample Receipt Summary (sample names, collection dates, etc.)
- Section 3: Chain of Custody
- Section 4: Reporting list showing referenced method, target compound list and reporting limits.
- Section 5: Outstanding media (if applicable)

6.11.2 The date that the SRC email was sent is automatically documented by ATLAS in Login Tracking in the "Date Login Fax Sent" field.

6.11.3 If the laboratory is notified of an error with respect to information on the COC (i.e.: sampling date/time incorrect, sample IDs incorrect or switched, etc.), the client will be asked to provide a revised COC. If they are unable to do so, the Project Manager will request written documentation (such as an email or FAX) from the client and document in Contacts. A copy of the written documentation will be given to Sample Receiving to place in the workorder folder or attach to the WO in ATLAS. The laboratory cannot deviate from the information on the COC without this written documentation from the client. **The laboratory will not make corrections to client information on the original COC, as this is a legal document.**

6.11.4 If the laboratory made an error in transcribing an entry from the COC into the workorder (i.e.: a misspelling, entering a "5" instead of an "S", etc.), a Client Contact from ATLAS is sufficient to document a change in our system.

7.0) SAMPLE STORAGE

Samples that do not need to be refrigerated are stored in the Sample Cage in the main laboratory. Samples that must remain chilled are placed in the appropriate refrigerator/freezer. See Table 2 below.

Table 2

Location in Sample Cage		Suggested Contents
Section A-01		Tedlar Bags, Misc Media Types, typically for ATL Applications
Section A-02 to E-04		1L and 6L Summa canisters
Section G to J		Tedlar Bags, 1L Summa cansiter and PAC250s
Section X to Y		Media being held after analysis or ready to release
Location	Refrigerators	Suggested Contents
TO-17 Room	4	TO-17 Samples, Rad145 and all other TD samples
Extraction	12 or 5	TO-13A, Radiello 130, WMS.
Location		Suggested Contents
Extraction - Dessicator		TSP/PM10 filters
EPA 325 Room		EPA 325 samples

7.1 Sample Tracking

7.1.1 It is the Login Analyst's responsibility to record samples into the Sample Tracking logbook in the appropriate area of the laboratory, depending on the type of sample received. Canister, bag and EPA325B samples will be tracked electronically using Sample tracking module in ATLAS; all others will be using logbooks. When entering the samples, the workorder number and specific fractions, number of samples, analysis, location where samples will be stored, analyst name, and date/time (military format) sample custody is being transferred must be included into the first "IN" box of the Sample Tracking Logbook.

7.2 Procedure for samples received and not logged in

by the end of the day:

7.2.1 Canisters

Samples are assigned a workorder number and they remain in the Sample Receiving area overnight.

7.2.2 Coolers

Samples are assigned a workorder number and placed in the appropriate refrigerator, along with a note indicating they have not yet been received into ATLAS. The appropriate Sample Tracking logbook must be filled out. The folder with the COC is placed in Receiving with a note as to where the samples are located, so that they may be logged in the next morning.

7.2.3 The goal is to login all samples within 1 business day of receipt. Exceptions are:

- Samples without a COC
- Samples associated with a Project Profile that has a 'STOP' on it
- Samples where the Project Profile is unknown or non-existent. In these cases, if a project profile exists, samples are entered into ATLAS and the Work Order is placed on hold. If the Project Profile does not exist, a note with the issue and the PM who was asked to resolve it is placed with the samples. The Sample Login Analyst then follows up with the PM until the issue is resolved and the samples can be taken off hold or logged in.

8.0) HANDLING OF HAZARDOUS SAMPLES

Samples may be hazardous to handle. In the following situations, use the procedure listed. Members of the Safety Committee are available to assist with any samples of concern and should be notified of unusual issues. Always err on the side of caution.

8.1 Canisters and Tedlar Bags:

Due to potential health hazards, samples which emit a strong odor are handled in the following manner:

- Samples are immediately placed in a fume hood.
- Samples that do not fit in the fume hood are stored in the Hazardous Waste Shed, to ensure appropriate security of samples.
- The Safety Committee and/or the Lab Manager are contacted to assess the level of hazard associated with the sample(s) and to ensure proper handling.
- The Login Analyst logs the samples into the proper logbook/Sample Tracking module, noting the location where they are temporarily being stored.

8.2 Liquid and Sorbent Media Samples:

- The Sample Login Analyst should always wear protective gloves while unpacking these types of samples.
- If a liquid sample is received in a leaking or broken container, a Safety Committee Member is notified for proper cleanup and handling of the Sample. Note: Clearly marked Temperature Blanks (which are filled with water) can be safely disposed of by the Login Analyst without notifying the Safety Committee.
- A member of the Lab Team or the Safety Committee is consulted if a sorbent sample is received broken, to determine if the sample can be analyzed and ensure proper handling.

9.0) SUBCONTRACTING SAMPLES

When samples arrive which need to be subcontracted to another laboratory (this will be noted in the Project Profile), a workorder is set up with a Method Type of 'Subcontract'. This prevents the workorder from showing up on any of the laboratory's work lists. The sample is labeled, a Chain of Custody is filled out and the PM is notified. The PM will work with the Shipping Dept. to send off the samples to the subcontract laboratory. The workorder folder is placed in the Subcontract bin in the Project Management area until the data is returned (See laboratory SOP #90).

10.0) ON-HOLD SAMPLES AND CANCELLATION OF WORKORDERS AND SAMPLES

10.1 When a subset of samples from the same sampling event are requested (either on the COC or from the PM) to be placed on hold, they will need to be logged in under a different workorder fraction than the active samples. Both workorder status and samples status should be set as "On Hold". The PM will receive a daily report of all the workorders that are on hold. They will then evaluate and update the status of the samples as active or canceled. If the status becomes active, the workorder is placed on the active work list for analysis and the TAT gets updated in ATLAS. The TAT for the samples and workorders on hold starts from the day they become active. If the PM decides to cancel the samples that were on hold, they will then update the status in ATLAS accordingly. The production team can then release the samples from the Canister Module Tracking.

The exception to this procedure is when a client sends duplicate sample (back-up) and requests the duplicate sample to be placed on hold and analyzed if there are any discrepancies with the original sample. In this case, all the active and duplicate "on-hold" samples are logged in under the same workorder fraction. The production team is responsible for updating the "back-up" sample status to "cancelled" or "active" depending on the circumstances. In order to release the duplicate or back-up sample from the canister module tracking, the status needs to be either active and analyzed or canceled.

10.2 Clients will sometimes cancel analyses after the samples have been received. If they have been given a workorder number, then the cancellation must be requested by the PM. See Work Instructions WI50 for the Cancellation Procedure (Please note that the PMs will typically be the ones to cancel samples or WOs in the system).

11.0) INTERNAL COMMUNICATIONS

11.1 Sample Discrepancy Reports (SDR) requiring PM action:

- 11.1.1 Login Issue: The SDR will be sent electronically to the PM. The PM will contact the client on the same day or as soon as is reasonably possible. The PM will document clear instructions on how to proceed in the SDR. The Login Analyst will then continue the login process.
- 11.1.2 Pressurization Issue: The SDR will be sent electronically to the PM. The PM will contact the client on the same day or as soon as reasonably possible. Once the PM establishes how to proceed, they will document the action on the SDR. The updated SDR will be sent to the Login Analyst if immediate action, such as canceling a sample is necessary and the WO will be updated with the necessary adjustments.
- 11.1.3 The Login Analysts will check for SDR e-mail updates throughout the day, taking the action required.

11.2 Profile Clarifications

- 11.2.1 Major Issues (These are issues for which the samples cannot be logged in, such as it is not clear what analysis the samples are for or the list requested does not exist)
 - The COC (with assigned WO#) and Project Profile (when available) are given to the PM, (either physically or through email) and a note placed on the sample set.
 - If client involvement is necessary, the PM will contact the client the same day. The PM will get back to the Login Analyst as quickly as possible with clear instructions on how to proceed. Any documentation such as contacts or emails will be included in the folder or attached to the WO.
 - The Login Analyst will proceed with the login process being sure to include the resolution in the internal "Comments" section of the Remarks tab.
- 11.2.2 Minor Issues (These are issues for which the samples can continue through the process, such as media pricing or full vs. short lists.):

- An email will be sent to the PM regarding the issue and the issue notated in the internal "Comments" section of the Remarks tab. The PM will research the issue. The PM will make appropriate changes to the WO, provide clear instructions for the Login Analyst to make

appropriate changes or decide that no action will be taken. The course of action will be documented in the "Comments" section of the Remarks tab.

NOTE: All notification or confirmation to PM or lab need to have workorder number and/or PID included in the email subject line.

11.2.3 Lab Issues: The Login Analyst will inform the laboratory of any quickly expiring or quick TAT samples. This is done through email. If there is an extreme time-sensitive issue, the Login Analyst will also verbally alert the manager of the department or a team member who works on the analysis.

11.3 PM/Lab Requests

11.3.1 Requests involving additional analyses, or list changes must be provided in writing (i.e. email) to the receiving team and should be addressed immediately. Once the changes have been made the lab/PM is notified via email.

11.3.2 Requests that are not time sensitive or relating to analyses that can't be addressed immediately should be addressed before end of the day.

12.0) THE FLOW OF FOLDERS

12.1 Folders are created during the login process.

12.2 If the samples are canister samples:

12.2.1 The folder is sent to pressurization with the samples.

12.2.2 Once the pressures are entered into the system, updated with the pressurization date and Login Summary page printed. The folder then goes to:

- Login Review (if necessary)
- Lab Pickup Bins (if Login Review is not necessary)

12.3 If the samples are not canister samples the folders will go to:

- Login Review (if necessary)
- Lab Pickup Bins (if Login Review is not necessary)

12.4 After Login Review (if necessary) folders will go to:

12.4.1 Lab Pickup Bins.

13.0) THE TRACKING OF FOLDERS

The Status field in the ATLAS Sample Tracking module will be utilized to track folders.

13.1 When a WO is created, the Status is automatically set to "Log-In".

13.2 After Pressurization, when a WO is placed back into Receiving area, the Status will be updated to "Login Rev".

13.3 When a folder is ready for the lab and is put into the hanging bins in Receiving, the status will be changed to "Lab Pickup Bins".

13.4 If for any reason an analyst needs to hold on to a folder, the status will be updated with their initials.

14.0) SPECIALIZED WO CREATION

For the naming of specialized work orders, see the naming key below. Work Instructions WI50 include the procedure for Setting up Deliverables for a Filed Workorder, Unreturned Media Charges and Unused Media Charges. For instructions on how to Re-issue a workorder, please refer to SOP#68 and see Work Instructions WI50 for detailed instructions.

Specialized WO Naming Key:

- *Returned Media Work Orders: R(6 digits number consist of yymm and two digits sequential number)
(ex. R170901, first return shipment arrived in September 2017)
- Unreturned Media Work Orders: U(bidship for unreturned media) (ex. U98765, media from bidship 98765 not returned)
- Invoiced Non-Returnable Media: I(outgoing bidship number) (ex. I98765, media being shipped to client as bidship 98765)
- *Miscellaneous Charges: M(6 digit number consist of yymm and two digits sequential number that request was received to add charges) (ex. M170901, first request to add misc. charges received in September 2017)
- *Client Media Certification: N(6 digit number that consists yymm and two digits sequential number) (ex. N170901, first request for client media certification in september)
- *Subcontract Charges S(6 digit number consist of yymm and two digit sequential number) (ex. S170901, first request for subcontract charges in September 2017)

* Subsequent WO numbering will continue in sequence for all "R" "M" "N" and "S" designated WOs and starts from 01 for the next month (ex. R170901, M170902, N170903. S170904 etc).

15.0) REFERENCES/DEFINITIONS

Refer to the Eurofins Environment Testing Northern California, LLC Quality Assurance Manual (QAM).
Defintions and Terms, Appendix A.

16.0) APPENDICES

List of Appendices

Appendix A - Eurofins Environment Testing Northern CA, LLC Sample Acceptance Policy

Appendix B - Login Review Report Example

Appendix C - Sample Discrepancy Report Example

Appendix A

Eurofins Environment Testing Northern California, LLC Sample Acceptance Policy

Eurofins Environment Testing Northern California, LLC	Title: Eurofins Environment Testing Northern CA, LLC Sample Acceptance Policy			
	Instruction #: I1.92	Revision #: 2	Revision Date: 05/12/23	Page #: 1 of 2

**EUROFINS ENVIRONMENT TESTING NORTHERN CALIFORNIA, LLC (Folsom)
SAMPLE ACCEPTANCE POLICY**

Samples received by Eurofins Environment Testing Northern California, LLC need to be relinquished following standard EPA/NELAP approved guidelines. These include full and complete Chain-of-Custody documentation indicating:

- Unique sample name**
- Location, date, and time of collection**
- Canister Number/Tube Number** (where applicable)
- Collector's name**
- Sample Type** (verified by matching the requested analysis to the sample(s) submitted by the client)
- Analysis Requested**
- Preservation type** (where applicable)
- Any special remarks**

The Chain-of-Custody form must be filled out in ink and indicate proper use of sample container specified by the method. Each sample should be labeled with unique, durable, and indelible identification and should contain adequate volume for the tests requested. Never affix a label directly on a Summa™ canister. A special tag is attached to each canister for this purpose.

Proper, full, and complete inspection and documentation will be performed during the Receiving/Login process including the following areas:

- Evidence of container's physical damage
- Status of the container's custody seal
- Presence or absence of a chain-of-custody form
- Incomplete or incorrect chain-of-custody form
- Number of samples
- Name of each sample
- Sample collection date/time
- Sample type (canister, XAD, DNPH, etc., verified by matching the requested analysis to the sample(s) submitted by the client)
- Sample tag information complete and matching COC information
- Temperature (when applicable)
- Delivery Method and tracking number information (when applicable)
- Pressure (canisters)
- Presence of unlabeled samples
- Presence of mislabeled samples
- Presence of unused media
- Method required trip blanks, field blanks, equipment blanks, field duplicates, or field spikes

Any sample discrepancies against the above criteria are documented on the Sample Discrepancy Form and communicated to the client via Electronic Sample Receipt Confirmation. The client is contacted by the Project Manager for discrepancies of a more serious nature, e.g.

- Chain of custody was not received with samples
- Analysis method(s) is (are) not specified
- Sample(s) received out of holding time
- Incorrect media for requested analysis
- Sample container (Tube/VOA vial) was received broken, damaged or not enough sample present for the analysis

Eurofins Environment Testing Northern California, LLC	Title: Eurofins Environment Testing Northern CA, LLC Sample Acceptance Policy			
	Instruction #: I1.92	Revision #: 2	Revision Date: 05/12/23	Page #: 2 of 2

- Canister sample received at > 15" Hg (not identified as a Trip/Field Blank)
- Flow controller used in the field but canister sample received at ambient pressure
- Tedlar bag/canister received emitting a strong odor (sample cannot be analyzed)
- Canister sample received at ambient pressure and canister failed leak check or received with valve open.

Appendix B

Login Review Report Example

Login Review for Workorder # AnneSDRTest

Company Name: AAA Bogus
 Project ID: 8101
 Project Name:
 Project Number:
 PO Number:
 Method Type: NA
 Reporting List: Zarch 03/05/2009 Modified TO-15-LL (Before 9/13/06 Changes)
 Analysis Type: Test
 Smp. Trk. Anal. Type: test
 Date Received: 12/11/2008
 Date Promised: 12/24/2008 11:59:00P
 Date Due Customer: 12/29/2008
 Rush: None
 Time Due: 11:59 pm
 CVP Pkg Due: 01/01/1990 N
 EDD Due: 01/01/1990 N
 CSR Review: N Screen N 24 Hr. Clock Y Late Penalty: N QA Review: N
 # Of Duplicates: 0 Total Samples: 0 Total Duplicates: 0
 Financial Status: New Client Proper 'Financial Hold' statement narrated (purple folder).
 Certs Expected: 0 Certs Found: 0
 Smp. Conf. Sent: 1/1/1990 12:00:00AM
 Profile Done: Y

Report To	
First Name: Jane	Last Name: Doe
Company: AAA Bogus	

Bill To	
First Name: Jane	Last Name: Doe
Company: AAA Bogus	

Sample Info								
Frac ID	Client ID	Date of Coll	Time Of Coll	Price	Status	Smp Hold	Ext Hold	Container Type

Misc Charges				
Item	Qty	Price	Media ID	Comments

Lab Narrative:

Narrative Template: Passive SE by Mod EPA TO-17

Receiving Notes:

There were no receiving discrepancies.

Workorder Comments:

Workorder Remarks:

Login Fax Cover Sheet Comments:

- COC Filled out properly (Relinquished/Received, Collection Date, Method, etc.).
- Client requests on COC have been followed.
- 'Notes to Receiving' in the Project Profile read and followed.
- All necessary tags have been attached to samples (DO NOT CLEAN, etc.)
- Bidship verified for additional charges.
- All SDR items have been narrated.
- The COC paperwork has been scanned and properly attached to WO.
- Sample Confirmation email sent.
- SDR, Receiving Report and COC are included in all fractions of the Workorder
- Verify Sample ID's vs COC
- Verify Sample labels against Canister Barcodes
- Notified Lab of Expiring or Quick TAT Samples
- Samples scanned into Canister Tracking

Login Reviewed By: _____

Second Review By: _____

Appendix C

Sample Discrepancy Report Example

Eurofins Air Toxics	Title: Sample Discrepancy Report (SDR)			Release Date: 11/01/18
	Form #: F1.3	Revision #: 7	Revision Date: 11/01/18	Page #: 1 of 2

Sample Discrepancy Report

Identification

Initiated By: _____ Project ID: _____ PM: _____ Date: _____ Discrepancy Type: 1. 2. 3.

Workorder(s) affected: _____ Sample(s) affected: _____

1. Sample Receipt Discrepancies

Narration Not Required:

- 1.1. Sample container (cartridge/tube) was received broken, however sample was intact.
- 1.2. No brass cap on canister.
- 1.3. Date of Collection noted on first sample, but no arrow down to indicate all samples.
- 1.4. Sampling year not documented on COC but noted on sample tag.
- 1.5. Sorbent Sample received outside method required temperature of 2°C to 6°C but less than 6°C.

Notify Lab for further determination:

- 1.6. Tedlar bag received with minimal volume.

Narration Required in Lab Narrative and Sample Confirmation:

- 1.7. COC was not filled out in ink.
- 1.8. COC improperly relinquished / received.
 Signature missing date missing time missing.
- 1.9. Sample ID on tags do not match the COC.
- 1.10. Can numbers do not match the COC.
- 1.11. Sampling date discrepancy.
- 1.12. Custody Seal on the outside of the container was broken / improperly placed (check one).
- 1.13. ID-none on the sample Tag/Blank.
- 1.14. Other (describe below).

Initials: _____ Date: _____

Describe the Discrepancy: _____

2. Sample Receipt/Screening Discrepancies requiring PM notification

Document on Cover Page of Sample Receipt Confirmation and in Receiving Notes of Lab Narrative

If Section II. is filled out PM must be notified within 24 hrs of initiation

- 2.1. COC was not received with samples.
- 2.2. Analysis method(s) is not specified / incorrectly specified (check one) on the COC.
- 2.3. Incorrect sampling media / container for analysis requested.
- 2.4. Number of samples on the COC does not match the number of samples that were received.
- 2.5. Samples were received expired.
- 2.6. Sampling date is not documented for some / any samples (check one).
- 2.7. Sample received with amount of H₂O in the Tedlar Bag.
- 2.8. Sample cannot be analyzed. Container was received broken / leaking / flat / defective.
- 2.9. Tedlar bag / canister received emitting a strong odor; Sample can / cannot (check one) be analyzed.
- 2.10. Sorbent samples -sampling volume was not provided.
- 2.11. Flow controller used – canister samples received at ambient or under pressure.
- 2.12. Canister was at ambient pressure at time of pressurization and (check all that apply):
 Canister valve was open.
 Brass nut was loose/not present.
 Sample can be analyzed.
 Sample cannot be analyzed.
- 2.13. Canister sample received with a vacuum difference >5.0"Hg between the receipt vac. and the final recorded vac. on the COC.
 Canister passed leak check in lab <2psi, no evidence sample was compromised.
 Canister failed lab leak check, canister found to be leaking. Canister sample compromised.
- 2.14. Canister sample received at >15"Hg (not identified as a Trip/Field Blank).
- 2.15. Canister Trip Blank received at low vacuum (<25"Hg).
- 2.16. Sorbent Sample received outside method required temperature of 2°C to 6°C; ice / blue ice (check one) was present. A temp. Blank was / was not present (check one).
- 2.17. Other (describe below).

Initials: _____ Date: _____ Notify Receiving: Notify PM:

Describe the Discrepancy: _____

3. Lab Discrepancies requiring Team Leader/PM notification

Document in Analytical Notes of Lab Narrative

If Section III. is filled out PM must be notified within 24 hrs of initiation

- 3.1. Tedlar Bag found to be leaking at the time of analysis; sample can / cannot (check one) be analyzed.
- 3.2. Tedlar Bag found to be flat/low volume; sample cannot be analyzed.
- 3.3. Samples received with insufficient time to analyze prior to expiration.
- 3.4. Canister found to be leaking at the time of analysis.
- 3.5. Sample loss due to instrument malfunction / broken glassware.
- 3.6. Low/high surrogate recoveries noted in QC/sample(s) for extractable samples.
- 3.7. Reporting Limit was raised.
- 3.8. Post weight > Pre weight in field/lab Blank for PM10/TSP samples.
- 3.9. Sample Trip Blank has a reportable level(s) of target compound(s) present. Re-analysis confirmed the initial result.
- 3.10. Other (describe below).

Initials: _____ Date: _____ Notify Receiving: Notify PM:

Team Lead Initials: _____ Date: _____

Describe the Discrepancy: _____

How Does this Affect Client: _____

Project Manager Use Only

Project Manager Notification

Section 2 Complete

Section 3 Complete

Action:

- It is not necessary to notify the client. Narrate the discrepancy in Receiving Notes/Analytical Notes of Lab Narrative.

PM Initials: _____ Date: _____

- Client notification required. See attached client contact / email, or comments below:

Client Notification:

PM Initials: _____ Person notified: _____ Date: _____

- Waiting for Client Reply

Comments: _____

Notify Lab Name: _____ Date: _____ Notify Receiving:

- Additional notifications attached.

Additional Comments:

17.0) SOP REVISION HISTORY

Revision Date	Revision #	Changes	Reviewer(s)
05/05/20	26		JT

		Sections 2.0, 6.0, 7.0 - Clarified procedures; Section 3.13 - Added procedure for scanning shipping documents and attach to the workorder for DoD CVP projects; Corrected typos throughout.	
12/18/20	27	Updated Table 1- Receiving Action to reflect current procedure for WO with PO Required status. Updated Table 2 to reflect updated locations for different media type Updated Section 6.4 to clarify media charge procedures.	JCW
04/13/22	28	Section 3.3 - Added a 24-hour follow-up with the PM if a response has not been provided; Sections 3.14.6 and 4.0 - Added procedure for DoD workorders; Updated company name (removed LLC) in the cover page; Revised Section 15.0 title to include DEFINITIONS.	ML JT
05/11/23	29	Updated company name in the cover page and throughout; Section 1.0 - Added DOECAP.	JT ML
10/10/23	30	Section 3.17.4: removed reference to printing the reporting list Section 6.1.2: added reference to damaged/frozen temperature blanks; updated revision table to reflect reviewers initials	EJ HH
11/20/23	31	Added section 2.3.7, Updated 6.1.1 and 6.1.2 to remove use of non-contact thermometer (RTC-157), Updated Section 7 table 2 to remove NLU media	EJ HH

End of document

Version history

Version	Approval	Revision information	
29	12.MAY.2023	Updated company name in the cover page and throughout; Section 1.0 - Added DOECAP.	
30	11.OCT.2023	Section 3.17.4: removed reference to printing the reporting list Section 6.1.2: added reference to damaged/frozen temperature blanks	
31	21.NOV.2023	Added section 2.3.7, Updated 6.1.1 and 6.1.2 to remove use of non-contact thermometer (RTC-157), Updated Section 7 table 2 to remove NLU media.	

**Eurofins Environment Testing Northern California, LLC
Folsom, CA
STANDARD OPERATING PROCEDURE**

**ANALYSIS OF NATURAL GASES BY
ASTM METHOD D1945**

SOP #54

The information contained herein is of a highly confidential and proprietary nature. Eurofins Environment Testing Northern California, LLC specifically prohibits the dissemination, copy, disclosure, transfer, or modification of this information without the express written approval of Eurofins Environment Testing Northern California, LLC.

CONFIDENTIAL

1.0 SCOPE AND APPLICATION

This is a procedural guide for the application of ASTM Method D1945-14(2019) for the analysis of Methane and fixed gases in natural gas via GC/FID/Dual TCD. The method has been modified to apply to a wide range of environmental concentrations measured in landfill gas, ambient air, soil vapor and stack gas. A list of target compounds and associated reporting limits can be found in *Appendix A*.

2.0 METHOD SUMMARY

2.1 Description

2.1.1 ASTM Method D1945 describes techniques for the analysis of Methane and fixed gases in natural gas samples by GC/FID/Dual TCD. The approach employs a gas chromatograph (GC) equipped with a flame ionization detector (FID) and dual thermal conductivity detectors (TCD). The GC is also equipped with two 10 port gas sampling valves in conjunction with two 6 port column isolation valves. Samples may be collected in Tedlar bags, Summa™ canisters, or any container that is demonstrated to be clean and leak free.

2.1.2 The samples are directly connected to the sampling loop. An aliquot is withdrawn from the container by vacuum, via a syringe injection. Rigid containers are first filled to positive pressure using UHP Helium or Nitrogen (see Section 4.2).

2.1.3 Under SW-846 Third Edition, second column confirmation would be required for any positive GC determinations. It is not possible to find a second set of columns and valve configuration that would accomplish this for the natural gases. Porous polymer and molecular sieve technology used in this SOP are very specific for the gases detected. A variance to this requirement for second column confirmation is taken in this SOP. A summary of the method QC can be found in *Appendix A*.

2.2 Deviations

2.2.1 Modifications to the ASTM Method D1945-14(2019) used by the laboratory to carry out the analyses of air samples are summarized in Table 1.

Table 1. Summary of Method Modifications

Requirement	ASTM D1945-14	Laboratory Modifications
Sample Injection Volume	0.50 mL to achieve Methane linearity.	1.0 mL.
Calibration	A single point calibration is performed using a reference standard closely matching the composition of the unknown. Standard is analyzed such that 2 consecutive runs meet method repeatability requirements.	A minimum 5-point calibration curve is performed. Quantitation is based on the initial calibration, which may or may not resemble the composition of the associated samples.
Sample Analysis	Equilibrate samples to 20-50° F. above source temperature at field sampling.	No heating of samples is performed.
Sample Calculation	Response factor is calculated using peak height for C5 and lighter compounds.	Peak areas are used for all target analytes to quantitate concentrations.
Normalization	Sum of original values should not differ from 100.0% by more than 1.0%.	Sum of original values may range between 85-115%; normalization of data not performed, unless client requested.

3.0 HEALTH AND SAFETY

- 3.1 Normal laboratory safety precautions must be used when handling samples, preparing standards from neat materials, and analyzing samples. Appropriate eye wear, gloves, and lab coat must be worn when handling any chemical used in this method. All manipulation of standards, solvents, and solutions should be done with the utmost care in the hood. SDS for each chemical should be consulted for specific dangers and precautions.
- 3.2 Personnel must handle high pressure cylinders safely. This includes transport of cylinders fully secured on a cart. During storage, the cylinders must be secured at all times with a chain. When installing a pressure regulator, stand to the side of the cylinder.
- 3.3 Care must also be taken when handling syringes to ensure that a needle stick does not occur. ***All personnel installing or performing maintenance on a capillary column must wear eye protection.***
- 3.4 For information regarding pollution prevention and waste disposal, see Eurofins laboratory SOP #24: Storage and Disposal of Hazardous Wastes.
- 3.5 Samples required for ASTM D1945 analysis may contain high levels of sulfur compounds. If high sulfur is suspected, the bench chemist should notify the safety team

CONFIDENTIAL

and do not proceed with handling and analysis. The team will determine if samples can be handled safely, and assign trained and qualified staff as appropriate.

4.0 SAMPLE PRESERVATION, CONTAINERS, HANDLING, AND STORAGE

4.1 Sample Containers

An air sample is collected in an evacuated stainless steel Summa™ canister or Tedlar bag. Upon receipt, the canisters will be approximately in the range of 2.5 - 10" Hg vacuum. Canister receipt vacuum/pressure is reported on the first page of the data report. If abnormal conditions exist, the project contact is notified by a member of the Sample Receiving Team or a Project Manager. Depending on the nature of the anomaly, the sample may be placed on hold until approval from the client.

4.2 Sample Handling

Prior to analysis, the canisters are pressurized in accordance with Eurofins laboratory SOP #60 (Canister Pressurization) and/or per project specific requirements.

Samples requiring quantified Nitrogen results must be pressurized with Helium.

4.3 Sample Storage

Samples are stored in the main laboratory. Analysis must occur within 30 days for canisters. Some projects may require a 14 day hold for canisters. The project profile must be reviewed prior to analysis to verify holding time requirements.

4.3.1 Holding time in the case of Tedlar bags is limited to a maximum of 3 days* as losses of VOCs are observed specifically for compounds with low vapor pressure. If Nitrogen and Oxygen are not target compounds, holding time may be extended to a maximum of 30 days by transferring the sample from a Tedlar bag to a clean, evacuated Summa™ canister prior to the expiration of the 3 day hold. The transfer must be documented using the Tedlar bag transfer form and documented in the case narrative as per Eurofins laboratory SOP #69.

* The result of spiking studies conducted by the laboratory indicated a reduction in Helium recoveries 24 hours after spiking into the SKC Tedlar bags. When Helium is a requested target compound, every effort must be made to analyze the Tedlar bag samples as soon as they are received due to potential loss of He. If only ASTM D1945 analysis is required, Flex-foil bags are preferable media than Tedlar bags.

5.0 INTERFERENCES AND POTENTIAL PROBLEMS

5.1 Argon co-elutes with Oxygen under this method. If Argon is present in the sample matrix, it will be reported as total with Oxygen. There are no other known compounds having the same retention times as the compounds of interest in the method.

- 5.2 Because of the wide range of concentrations of Carbon Dioxide and Methane typical of samples submitted for analysis by this method, a potential for carryover contamination exists for these two compounds. Therefore, when concentrations of Carbon Dioxide and Methane decrease from one sample to the next by greater than a factor of 1000 and the detection is above the reporting limit, the sample with the lower concentration is re-analyzed to ensure the amount reported is not due to carryover.
- 5.3 Canister samples containing $> 0.01\%$ TNMOC (based on screen results) must be red-tagged by the screening analyst. Additionally, if a bag dilution is needed for sample analysis, the analyst should attach a red tag to the sample canister if it had not previously been tagged. This is to ensure that the canister goes through a special cleaning cycle once the canister is released to the Support Services Department. See laboratory SOP #7.
- 5.4 The analytical system is designed to load sample containers at atmospheric or positive pressure. If a sample container has a residual vacuum (less than atmospheric pressure) at the time of loading, the exhaust vent may be pulled into the sample container thereby compromising the sample. In order to eliminate this possibility, the canister pressure is always checked prior to analysis as outlined in section 11.7. However, upon review of the sample run, if the chromatogram shows any sign of contamination from the exhaust line, the sample pressure and analysis need to be confirmed. If the sample was compromised during sample loading, the analyst who ran the sample needs to tag the canister as “contaminated” if shared with other methods. The analyst should also immediately initiate an SDR for all associated fractions.

6.0 STANDARD PREPARATION, REAGENTS, STANDARDS, AND SUPPLIES

6.1 Stock Standards Purchased

ASTM D1945 vapor phase standards are purchased from Scott Specialty Gas, Airgas VOC blends or another vendor at various concentrations in percent mole in a high-pressure cylinder blend. These primary standards are NIST-traceable with a vendor-supplied certificate of analysis. The standard expires according to the manufacturer’s expiration date. If none is provided, the standard expires one year after the date opened. Details on how to prepare these standards are provided in the QA-controlled Work Instructions at each work station.

6.2 Materials

- Certified Calibration Blends (various concentrations) – These standards have been certified to a $> 95\%$ level of accuracy. Certification reports are attached to each cylinder of stock standard and a hardcopy is maintained on file.
- Individual pure gas or stock standards.
- Two stage regulators, stainless steel high purity (0 to 20 psig).

CONFIDENTIAL

- Syringes of various volumes.

7.0 ***EQUIPMENT/APPARATUS***

7.1 Instrument

- HP 6890 Gas Chromatograph FID/dual TCD
- Column 1: 4.0 cm length, 0.53mm alumina plot column
- Column 2: 50m length, 0.53mm alumina plot column
- Column 3: 6 feet length, 1/8" hayeSep A 80/100 mesh column
- Column 4: 10 feet length, 1/8" molecular sieve 80/100 mesh pack column
- Column 5a: 6 feet length, 1/8" hayeSep A 80/100mesh column
- Column 5b: 7 feet length, 1/8" molecular sieve 80/100 mesh pack column
- Column 6: 2 feet length, 1/8" molecular sieve 80/100 mesh pack column
- Column 7: 2feet length, 1/8" molecular sieve 80/100 mesh pack column
- Column 8: 2 feet length, 1/8" molecular sieve 80/100 mesh pack column

7.2 Operating Parameters

Since analytical equipment varies in configuration and as a function of intended specific target analytes, operating parameters are optimized on an instrument-by-instrument basis. Instrument specific operating parameters are recorded in the respective Instrument Maintenance Logbook and in the QA-controlled Work Instructions at each work station.

Note: Only trained and qualified laboratory staff are authorized to vary the operating parameters under special circumstances. Any time a change is made, it is documented in the instrument maintenance logbook.

8.0 ***CALIBRATION AND QUALITY CONTROL PROCEDURES***

8.1 Initial Calibration Procedures

8.1.1 Initial Calibration is achieved using an external standard technique and is performed at least annually. A response factor is generated for each individual target compound based on the area counts vs. concentration of the calibration standard. A minimum of five levels of each analyte is analyzed to generate the initial calibration. The lowest level must be less than or equal to the reporting limit (Limit of Quantitation). Other levels may be added to the calibration per specific client/project request. The initial calibration points must be analyzed from the lowest concentration point to the highest concentration point. If a low point is analyzed after a higher level, a blank must be analyzed prior to the low point.

8.1.2 Calibration standards are purchased from commercial gas suppliers or prepared

CONFIDENTIAL

as bag blend standards in the laboratory. The purchased commercial standards are certified to > 95% accuracy. Certification reports are attached to each cylinder of stock standard and a hardcopy is maintained on file.

- 8.1.3 The percent relative standard deviation (%RSD) for the Initial Calibration must be less than or equal to 15%. If this cannot be achieved, the Initial Calibration must be repeated.
- 8.1.4 The reporting limit (Limit of Quantitation – LOQ) must be verified quarterly on each instrument that performs the methods the lab is accredited for by DoD/DOE (Refer to DoD and DOE scopes at O:\QA\Certifications). The LOQ is verified by evaluating the point of the initial calibration that corresponds to the LOQ. The concentration recovered is used to calculate the precision and bias of each compound. A minimum of three points is required to perform the calculations. If there are insufficient points, a primary source standard is analyzed at the LOQ. Precision and bias are determined by calculating the % relative standard deviation (% RSD) and the % bias of the mean concentration recovered. The acceptance criterion for the LOQ verification is $\leq 30\%$ RSD and $\leq 50\%$ bias for each compound. If more than 10% of the compound list exceeds the acceptance criteria, the instrument and standard used will be evaluated to determine the source of the error. Quarterly LOQ verifications are evaluated by the QA Department and the values are maintained on a secure network drive.

8.2 Initial Calibration Verification (ICV) and Laboratory Control Sample (LCS)

- 8.2.1 An independently prepared (i.e. same vendor, different lot number or second vendor) standard containing all target compounds is analyzed with each Initial Calibration and with each analytical batch to verify accuracy.
- 8.2.2 Recovery limits for the ICV and LCS are 85-115%. If this criterion is not met, the ICV or LCS standard will be re-analyzed. If the problem persists, corrective action up to and including re-calibration of the instrument will be performed. An LCS is analyzed in duplicate (LCSD) daily. Evaluation and acceptance criteria of the LCSD are equivalent to the LCS. Refer to section 8.5 for the RPD acceptance criteria between the LCS and LCSD. If run at the end of a batch, the LCSD can serve as an end check. Note that in-house control limits may be required for evaluation of the LCS based on project specifications.

8.3 Continuing Calibration Verification (CCV)

- 8.3.1 A Continuing Calibration Verification (CCV) standard is analyzed prior to sample analysis and is repeated after every 20 reportable samples (sample duplicates do not count). This is an analysis of the primary source at a concentration equal to or less than half the highest level of the initial calibration.

CONFIDENTIAL

The response factor for each analyte should be within $\pm 15\%$ compared to the Initial Calibration for the initial CCV.

8.3.2 If any analyte fails to meet the criteria, the system is checked for problems. If the system needs maintenance such as cleaning the FID, column re-conditioning etc., the CCV standard must be analyzed twice with an acceptable recovery. The second passing standard serves as confirmation only. The analysis of a passing LCS may also serve as the confirmation standard. In the event the criteria still cannot be met, the corrective action may include re-calibration of the instrument.

8.3.3 The CCV can be repeated at the end of the analytical batch if an LCS was analyzed earlier in the batch. In this case, the CCV would serve as an end check.

Software Verification: A manual verification of the computer-generated results is performed daily on one randomly chosen target compound, one from the FID and one from a TCD using the LCS standard or a sample and documented in the instrument run log.

8.4 Laboratory Blanks

8.4.1 Laboratory Blanks containing 100% UHP Helium are analyzed prior to the analysis of Samples (for Hydrogen and Helium analysis, 100% UHP Nitrogen will be used as the Lab Blank). The concentration of all analytes in the Laboratory Blank must be less than the reporting limit (Limit of Quantitation). If contamination is present, additional Lab Blanks are analyzed until the instrument is clean or maintenance is performed. Sample analysis may not proceed if the Laboratory Blank fails to meet acceptance criteria.

8.4.2 Some projects require an acceptance criteria for the Method Blank as follows (see Project Requirement Tables):

No analytes detected at $\geq \frac{1}{2}$ the RL. For common laboratory contaminants, no analytes detected \geq the RL.

If an analyte in the laboratory blank fails these criteria the associated samples must be reprocessed in another analytical batch unless the analyte resulted in a non-detect. If no sample volume remains for re-analysis, the results will be reported with the appropriate data qualifying code (B flag).

Note: If the above criteria cannot be met please notify the QA Department.

8.5 Laboratory Duplicates

8.5.1 Every daily analytical batch must include an LCS and an LCSD to evaluate instrument precision. The acceptance criteria for the relative percent difference

CONFIDENTIAL

(RPD) between the LCS and LCSD analyses should meet $\leq 25\%$. Exceedances are narrated in the final report.

8.5.2 A duplicate sample analysis is performed only when specifically required by the Project Profile and/or Project Requirement Table associated with the workorder. The Relative Percent Difference (RPD) between duplicates must be $\leq 25\%$ for detections greater than 5 times the reporting limit, or re-analysis is performed. Failure to meet this criterion results in a third analysis of the sample. If the criterion still is not met, the cause is investigated in order to return the system to working order. If no problem is found on the system, the data is narrated to note the non-conforming event and a Corrective Action Request (CAR) is initiated to ensure all parties are informed of the lack of method reproducibility for the affected set of samples.

8.6 Field QC Samples

8.6.1 ASTM D1945 does not describe field QC sample collection or acceptance criteria. However, clients may collect Field Blanks, Trip Blanks, and Field Duplicates. While there is no acceptance criteria established, analysts must monitor performance and note anomalies. For example, a positive result in the Field or Trip Blank requires closer inspection to ensure the anomaly wasn't incurred during sample handling and loading. Inspection may include verification of the canister analyzed and verification that the analytical system was clean.

8.6.2 Likewise, a field duplicate sample which shows an inconsistent chromatographic pattern as compared to the paired sample or concentrations differing by more than 40%RPD for many of the detections requires further investigation at the time of sample loading. Verification of the canisters identification and load volume and comparison of the FID screens are all appropriate to verify results.

8.6.3 Notate on the data checklist the anomaly and the items verified. If an anomaly was uncovered, then the field QC should be reanalyzed. If there are no findings then an SDR is generated informing the appropriate project manager following a note on the Data Review Checklist indicating the non conformance. Narrate the presence of a detection in the Trip Blank and Field Blank.

9.0 **CALCULATIONS**

9.1 The average response factor (RF) from the Initial Calibration Curve is used to quantitate samples and QC results.

$$RF = \text{Area Counts} / \text{concentration (\%)}$$

CONFIDENTIAL

$$\text{Sample amount (\%)} = \frac{(\text{Area Counts Sample}) \times (\text{Dilution Factor})}{\text{ICALRF}}$$

- 9.2 For canister samples pressurized with Nitrogen, the concentration of Nitrogen is calculated by adding all of the sample components and subtracting from 100%.
- 9.3 Normalization is not typically performed for ASTM D1945 samples. However, if the client requests normalization, it is recommended that Nitrogen not be used to pressurize the samples. Given the large amount of Nitrogen added to the sample, this step introduces possible error in the Nitrogen result. Normalization of the results then propagates this error through to the remaining target concentrations. See *Appendix C* for normalization calculations. If EPA rounding causes normalized results to be 99% or 101%, the Nitrogen concentration will be adjusted by +/- to achieve 100%.
- 9.4 The C6+ Hydrocarbons area is defined as the summation of C8+ peak areas and peak area following elution of Pentane to the end of the analytical run. The sum of this area is divided by the response factor of Hexane and Heptane to calculate the C6+ result.

9.4.1 *Response Factor for C6+ Hydrocarbons:*

$$\text{RF}_{\text{C6+}} = \frac{(\text{Area}_{\text{Hexane}} + \text{Area}_{\text{Heptane}})}{(\text{Concentration}\%_{\text{Hexane}} + \text{Heptane})}$$

- 9.5 Unknown hydrocarbons can be quantified for purposes of reporting BTU. To calculate on-column unknown results, the area of the unknown peak is divided by the response factor of the nearest straight-chain hydrocarbon eluting after the unknown peak. The on-column result is then multiplied by the sample dilution factor to obtain a final concentration. The reporting limit for unknowns is 0.01%.

10.0 CALCULATION OF BTU AND SPECIFIC GRAVITY

BTU and specific gravity calculations are based on the ideal gross heating values and specific gravity constants specific to each compound respectively. The BTU and specific gravity values for each component are summed to give a total BTU and specific gravity value for the sample (see *Appendix B* for BTU and Specific Gravity Calculations).

11.0 SAMPLE ANALYSIS

11.1 Analytical Batch

The analytical batch* is defined as all samples, up to 20, analyzed within 24 hours on one instrument. All QC and samples must be processed with the method associated with

CONFIDENTIAL

the daily analytical batch.

*Samples per batch are reportable analytical runs excluding QC samples, dilutions, duplicate analysis and confirmation analysis.

11.2 Analytical Sequence

Initial 24-hour period:

Initial Calibration
 LCS
 Laboratory Blank
 Up to 20 reportable samples
 CCV or LCSD*

Subsequent 24-hour period:

CCV
 LCS
 Laboratory Blank
 Up to 20 reportable samples
 CCV or LCSD*

* The LCS may be analyzed earlier, and a CCV or LCSD may be analyzed as an end check.

The “Subsequent 24-hour” sequence is followed every twenty-four hour period in which samples are analyzed, until the system fails quality control acceptance limits.

In the event of a daylight savings transition, a time shift may be observed during analysis of samples. If this occurs, data is acceptable and may be used. The occurrence must be documented in the run log and on the Data Review Checklist of any affected work orders.

11.3 Method Detection Limit (MDL)

11.3.1 An annual Method Detection Limit (MDL) study is performed in 40 CFR Pt. 136 App. B (see laboratory SOP #39 for more details). The MDL must be less than the reporting limit. If this is not achieved, corrective action, including raising the reporting limit is taken prior to continuing with sample analysis.

11.3.2 The reporting limit (Limit of Quantitation - LOQ) must be greater than the MDL before sample analysis can occur. In general, the reporting limit (LOQ) is typically up to 10 times greater than the MDL but may be up to 50 times greater. If the reporting limit (LOQ) exceeds this range, the Laboratory Manager and/or the QA Department will evaluate the reporting limit to determine the reason and its approval.

11.3.3 The Limit of Detection (LOD) must be analyzed on a quarterly basis. Refer to SOP #39 for the acceptance criterion.

11.3.4 All current Method Detection Limit (MDL) studies are kept in a

CONFIDENTIAL

folder near the instrument.

11.4 Peak Identification/Retention Time Windows

11.4.1 Retention Time (RT) windows are crucial to the identification of all target compounds. At method set up and after major maintenance (e.g., column change) the elution stability of each analyte is demonstrated by calculating the standard deviation of the mean absolute retention time over a 72-hour period. To proceed with sample analysis, the following condition must be met: SD of 0.01min X 3. A copy of RT windows study is kept by each instrument.

11.4.2 After an Initial Calibration has been evaluated and meets laboratory criteria, the midpoint is copied by adding an extension onto the file identifier, and then it is requantified as a Continuing Calibration Verification. All calibration points are then requantified and Retention Time Windows for each file are compared to that of the midpoint. If %D criterion for the CCV (see Section 8.3.1) is met, analysis of the Initial Calibration Verification Standard may proceed. On days when an Initial Calibration is not performed, the Retention Time Windows in all subsequent samples and QC must meet laboratory criteria (compared to the CCV analyzed at the beginning of the analytical sequence).

11.5 Quantitative Analysis

Quantitation is based on the response factor generated from the initial calibration. If the response for any peak exceeds the initial calibration range of the GC system, the sample is diluted and re-analyzed, with the exception of Oxygen, Nitrogen (see Section 11.8.2) and C6+ Hydrocarbons (see Section 11.8.3). Sample dilutions should result in the analyte with the highest concentration to be within the upper 60% of the Calibration Curve.

11.6 Manual Integrations

At times performing manual integrations on Initial Calibrations standards, QC, Laboratory Blanks and samples may be necessary. Refer to SOP #57 for Manual Integrations by GC for proper manual integration procedures and documentation.

11.7 Analytical Procedures

The sample containers are connected to the sampling loop line. Following the QA-controlled work instructions for the specific system, the sample connection is checked for leaks, and the sample is loaded onto the system.

Just prior to sample analysis, the pressure on the individual canister sample must be checked and documented in the run logbook. In the event that the pressure of a

CONFIDENTIAL

1L canister sample is less than 1psi or 6L canister pressure is below ambient, then the canister must be re-pressurized. This information is then documented in the run logbook before proceeding with sample analysis.

11.8 Sample Dilutions

11.8.1 Dilutions may be necessary in order to obtain analyte concentrations within the upper half of the calibrated range of the detectors and to prevent contamination of the system. Because the sample loop is a fixed volume, the samples are diluted prior to injection by adding a measured aliquot of the sample to a Tedlar bag that has a metered volume of UHP Nitrogen (or Helium) added as the diluent gas (bag dilution) or are diluted by syringe. Details on how to perform sample dilutions are recorded in the QA-controlled work instructions at each work station.

11.8.2 When dilution is performed, the Nitrogen and Oxygen results may be compromised due to the predominance of these two compounds in the atmosphere. Consequently, Nitrogen and Oxygen results are reported from undiluted analyses, even if the results are over the calibrated range.

11.8.3 Since the Response Factor from two individual peaks (Hexane and Heptane) is used to quantify C6+ Hydrocarbons as a sum area, the concept of results exceeding the Initial Calibration Curve is not applicable. Therefore it is not necessary to dilute samples for C6+ Hydrocarbons.

12.0 ***CORRECTIVE ACTION PROCEDURES***

A request for corrective action (CAR) is initiated any time either the laboratory SOPs or client-prescribed QC protocol are not followed, or in any other instance that sample results are adversely affected. The corrective action is documented in the laboratory's Corrective Action Procedures SOP #61.

13.0 ***DATA REVIEW***

13.1 Analytical Data Review

As the analytical sequence is analyzed throughout the day, the data is reviewed by the analyst or scientist using the following steps:

13.1.1 Check for any project-specific requirements.

13.1.2 Verify holding time.

13.1.3 Verify the CCV, LCS, and LCSD

13.1.4 Verify that the Method Blank has no hits above the reporting limit (with the

exceptions outlined in 8.4.1- 8.4.2).

13.1.5 Verify sample results:

- a) Verify the retention time.
- b) Verify that correct amount of sample was analyzed.
- c) Verify the automated peak integration.
- d) Verify that result concentrations are within linear range of Calibration Curve (upper 60% for dilutions.)

13.1.6 Initial and date logbook entry to indicate that the data is acceptable.

13.1.7 Describe unusual events on Data Review Checklist.

Note:

- A secondary review of the analytical runs is required when the bench chemist is not signed off on the analysis.

13.2 Write-up and Final Report Review

The analyst or scientist performing the data write-up and final client report reduces the data by reviewing the Target data files. The peaks in each sample are reviewed for the correct integration and identification. The integration is modified only when necessary following guidance in laboratory SOP #57. The criteria for compound identification are described in section 11.4. The data is evaluated for the project required sublist only.

When the sample Target review is complete, the sample files are transferred to the Atlas database. The client report is compiled in the Atlas workorder editor following laboratory SOP #78. Check the following when compiling the report:

- Prepare and review narrative (laboratory SOP #45), detailing QC non-compliance as needed.
- Evaluate data package from a data user perspective. Does the data make sense?

When complete sign and date the 'Write-up' field on the Data Review Checklist and email the report to the client. Update the Atlas database to reflect the 'date reported'.

13.3 Technical Data Review

The Scientist or designated personnel performs a Technical Data Review on 100% reports if the write-up review analyst or scientist is not signed-off for the method. This review follows all the steps mentioned in the Analytical and Write-Up Data Review (Sections 13.1-13.2).

13.4 Report Review

The Report Review represents a 3rd level of review which is required for DoD/DOE and client specific projects only. Refer to the Data Review Checklist for the specific items

CONFIDENTIAL

requiring review.

13.5 QA Data Review

A thorough QA data review is performed by the QA Department on final data packages requesting 100% review. The QA Review entails verification that project and QC requirements are met. Failure to meet QC and/or project requirements results in a Corrective Action Request (CAR) and documentation. Dilution factors, analyte retention times, peak integration areas, concentration calculations, unit conversions, and Limit of Quantitation (reporting limits) are also checked. Field and Trip Blanks are checked and trends are observed.

14.0 **INSTRUMENT MAINTENANCE**

14.1 A possible leak in the system may be indicated by retention time shifts. Maintenance should be performed by trained and qualified laboratory staff. For more information on problems originating with the Hewlett-Packard 6890 GC, refer to the instrument operation and reference manual. Customized hardware and questions about such hardware should be referred to Wasson–ECE Instrumentation or appropriate vendor.

14.2 The bench analyst will document any routine or major maintenance in the bound instrument Maintenance Logbook assigned to each instrument. The date of the maintenance, what work was performed and analyst initials are included.

15.0 **DELIVERABLES**

Data reporting packages are prepared as described in laboratory SOP #78—Generation of Eurofins Air Toxics Inc. Data Deliverables, Electronic Conversion and Archival.

16.0 **REFERENCES/DEFINITIONS**

ASTM Method D1945-14 (2019)

Standard Method for Analysis of Natural Gas by Gas Chromatography. ASTM Committee D-3 on Gaseous Fuels.

Please refer to the Eurofins Environment Testing Northern California, LLC (Folsom, CA) Quality Assurance Manual (QAM)

Definitions and Terms, Appendix A.

17.0 **APPLICABLE WORK INSTRUCTIONS**

WI-008_054 ASTMD-1945_ASTM D-1946

WI-Dilutions Bag and Can Dilution Procedure

CONFIDENTIAL

WI-Can Leak Canisters with Evidence of Possible Leak Procedure
WI4700 Standard Prep Using Precision Diluter
WI39 MDL Procedure
WI96 ICAL Set-Up In Atlas
WI-ICAL Set-Up in Target

List of Appendices

Appendix A. Summary of Method QC

Table A-1 ASTM Method D1945 Analytes, Reporting Limits and QC Acceptance Criteria

Table A-2 Summary of Calibration and QC Procedures for ASTM Method D1945

Appendix B. BTU and Specific Gravity Constants and Calculations for ASTM Method D- 1945.

Appendix C. Normalization Calculations

Appendix A
Table A-1. ASTM Method D1945

Analyte	RL/LOQ (ppbv) (%)	QC Acceptance Criteria		
		ICAL (%RSD)	CCV/LCS/ICV (%R)	Precision Limits (Max. RPD) ***
Carbon Dioxide	0.01	≤ 15%	± 15%	≤ 25%
Carbon Monoxide	0.01†	≤ 15%	± 15%	≤ 25%
Ethene	0.001	≤ 15%	± 15%	≤ 25%
Ethane	0.001	≤ 15%	± 15%	≤ 25%
Acetylene	0.001	≤ 15%	± 15%	≤ 25%
Isobutane	0.001	≤ 15%	± 15%	≤ 25%
Isopentane	0.001	≤ 15%	± 15%	≤ 25%
Methane	0.0001	≤ 15%	± 15%	≤ 25%
n-Butane	0.001	≤ 15%	± 15%	≤ 25%
Neopentane	0.001	≤ 15%	± 15%	≤ 25%
n-Pentane	0.001	≤ 15%	± 15%	≤ 25%
Nitrogen*	0.10	≤ 15%	± 15%	≤ 25%
NMOC (C6+)	0.01	≤ 15%	± 15%	≤ 25%
Oxygen	0.10	≤ 15%	± 15%	≤ 25%
Propane	0.001	≤ 15%	± 15%	≤ 25%
Hydrogen**	0.01	≤ 15%	± 15%	≤ 25%
Helium	0.05	≤ 15%	± 15%	≤ 25%

* For canisters that have been pressurized with N₂, the amount of N₂ in the sample is determined by subtraction.

** For canisters that have been pressurized with Helium, the Reporting Limit is 1.0%.

† RL is 1.0% when samples contain high methane (approximately 50%) commonly present in Landfill Gas

***For detections at > 5X the Reporting Limit.

Appendix A (continued)
Table A-2. Summary of Calibration and QC Procedures for ASTM Method D1945

QC Check	Minimum Frequency	Acceptance Criteria	Corrective Action
Initial Calibration (ICAL)	Prior to sample analysis and annually.	$\leq 15\%$ RSD.	Correct problem, then repeat Initial Calibration.
Initial Calibration Verification and Laboratory Control Sample (ICV and LCS)	After each initial Calibration/ and once per analytical batch.	85-115 % Recovery. * LCS only: If specified by the project, in-house generated control limits may be used.	Check the system and re-analyze the standard. Re-prepare the standard if necessary. If the primary standard is found to be in error, re-prepare the primary and calibrate the instrument.
Continuing Calibration Verification (CCV)	Daily prior to sample analysis and can be used as an End Check.	± 15 Difference.	Check the system and re-analyze the standard. Re-prepare the standard if necessary. Re-calibrate the instrument if the criteria cannot be met. If the closing CCV fails, the system is checked and the standard is re-analyzed. Re-prepare the standard if necessary. If the second analysis fails, identify and correct the problem, then re-analyze all samples since the last acceptable CCV.
Laboratory Blank	After analysis of standards and prior to sample analysis, or when contamination is present.	Results less than the laboratory Reporting Limit.	Inspect the system and re-analyze the Laboratory Blank.
Laboratory Duplicates- Laboratory Control Sample Duplicate (LCSD)	One per analytical batch.	RPD $\leq 25\%$.	Narrate exceedances. Investigate the cause and perform maintenance as required and re-calibrate as needed.

Appendix B

BTU and Specific Gravity Constants* and Calculations for ASTM D1945

Analyte	Ideal Gross Heating Value (BTU/ft ³)	Ideal Gas Relative Density (Specific Gravity)
Hydrogen	342.2	0.0696
Oxygen	NA	1.1048
Nitrogen	NA	0.9672
Carbon Monoxide	320.5	0.9671
Methane	1010	0.55392
Carbon Dioxide	NA	1.5196
Ethane	1769.7	1.0382
Propane	2516.1	1.5226
Iso-butane	3251.9	2.0068
Butane	3262.3	2.0068
Neo-pentane	3985	2.4912
Iso-pentane	4000.9	2.4912
n-Pentane	4008.9	2.4912
NMOC C6+	4747	2.9755
Acetylene	1474	0.899
Ethylene	1600	0.9686

* ASTM D3588/3589 Properties of Natural Gas Compounds at 60° F and 14.696 psia Standard Practice for Calculating Heat Value Compressibility factor and Relative Density (Specific Gravity of Gaseous Fuels).

Calculations

- $\text{BTU/ft}^3 = \text{Amount (\%)} \times (\text{Ideal Gross Heating Value}) \times (0.01)$
- $\text{Specific Gravity} = \text{Amount (\%)} \times (\text{Ideal Gas Relative Density}) \times (0.01)$

Appendix C

Normalization Calculations

- For samples pressurized with N₂:
N₂ in sample (%) = (100% - (Sum of all other analytes))
- Conversion Factor (CF) = 100/sum of non-normalized Amounts (%)
- Normalized Amount = Non-normalized Amount (%) X CF
- Normalized BTU/ft³ = Non-normalized BTU/ft³ X CF
- Normalized Specific Gravity = Non-normalized Specific Gravity X CF

SOP Revision History

Revision Date	Revision #	Changes	Reviewer(s)
11/02/18	24	No revisions. Updated company name Update sections 11.3.1 and 11.3.3 to remove references to previous MDL procedures.	GH ML HH
11/21/19	24.1	No changes.	LY
03/16/21 04/02/21	25	Section 11.7 - Revised procedure for re-pressurization criteria.	GM LY
4/14/22 4/23/22	26	Updated company name (removed LLC) in the header and cover page; Revised Section 16.0 title to include DEFINITIONS; Table A-1: Added note regarding raised CO RL in the presence of high methane	LY ML HH
4/11/2023	27	Section 4.3 – removed sample cage; Section 4.3.1 removed Flex-foil bags may be used to extend the hold time; Updated company name in header, cover page and throughout; Removed the word ‘Modified’ for referencing ASTM D1945 per NELAP audit 2023; Updated to include DOE in various sections Update ASTM reference to reflect active document	LY ML HH
7/28/2023	28	Table 1—removed references to CCV mid-level concentration requirement; Section 8.3.1—To define concentration used for daily CCV. Added Section 17.0 Applicable Work Instructions Updated Company Header information. Section 8.2.2 added use of control limits for LCS per project specification Table A-2: Specified LCS may use in-house control limits.	LA GH HH

CONFIDENTIAL

Approved by:

Laboratory Management:



Date:08/10/23

Technical Director:



Date: 08/10/23

Quality Assurance:



Date: 08/10/23

UNCONTROLLED DOCUMENT

Eurofins Environment Northern California, LLC
Folsom, CA

STANDARD OPERATING PROCEDURE

**INTERNAL SAMPLE TRACKING, TRANSMITTAL AND
CUSTODY PROCEDURES**

SOP #63

UNCONTROLLED DOCUMENT

The information contained herein is of a highly confidential and proprietary nature. Eurofins Environment Testing Northern California, LLC specifically prohibits the dissemination, copy, disclosure, transfer, or modification of this information without the express written approval of Eurofins Environment Testing Northern California, LLC .

CONFIDENTIAL

Page 1 of 10

1.0 SCOPE AND APPLICATION

The procedures in this SOP describe the manner in which the laboratory tracks samples from the time after they are logged in and pressurized (if required) until analysis is completed and disposal occurs. The purpose of tracking is to maintain chain-of-custody from the time of sample receipt until final disposal.

2.0 PROCEDURE SUMMARY

2.1 Description

The Sample Receiver or Sample Pressurization and Screening personnel log the entire component of the workorder into a sample storage area* following assignment of a workorder number, laboratory identification numbers, and pressurization (if required). To ensure traceability of results, the unique sample number and workorder number assigned is used to identify the sample in all laboratory data documentation, including logbooks, instrument printouts, and final reports.

Please note that the entire building is considered a “secure area” (see Eurofins Air Toxics SOP #30 *Laboratory Security*).

All bar-coded canister and bags must be scanned by the analyst/scientist taking custody of the samples to a designated location. Sample tubes for EPA 325 are also scanned using the tube barcodes to their designated area. All other samples must be logged into the appropriate sample tracking logbook prior to analysis by the lab. Removal of the samples for any reason requires either scanning of the bar-code of the sample to a specific location or documenting the movement in the appropriate logbook. This procedure continues to track all samples’ transfer and locations throughout the laboratory up until disposal.

*Sample storage area consists of the sample custody cage, designated EPA 325 sample tube storage area and designated 325 shelves, designated refrigerators and designated freezers.

2.2 When a canister, 325 tube or a bag sample is scheduled for analysis, the analyst obtains custody of the sample by scanning the canister/sticker/tube bar code as well as the bar coded location destination of each individual sample. The scanned information is electronically transmitted to ATLAS systems to reflect the custody of canister and bag samples at all times. The historical information is maintained in this database from the time of sample receipt until the disposal stage. All other media samples are logged into the Internal Extractable Sample Tracking Logbook and the pertinent storage area.

- 2.3 Movement of samples from one instrument to another for the purpose of screening or multiple analyses requires canister/bag scanning or logbook entry as applicable. All laboratory staff must use their own secure ATLAS connection login and password prior to using the ATLAS scanning module to record identification of the custodian. Users must also log-out of the ATLAS Tracking Module when not in use to prevent unauthorized access.

3.0 HEALTH AND SAFETY

The 6L Summa™ canisters are somewhat heavy and could cause injury if they are dropped. To reduce the possibility of dropping canisters during transport using a cart, canisters must be placed on the cart shelf in a single layer. Canisters must never be stacked on top of each other on a cart. In addition to bruising, a valve could be damaged, which could allow potentially toxic sample constituents to escape. Multiple canisters should be moved individually, or moved on a cart to prevent any incident. Tedlar bags can be punctured, which could cause sample loss and result in potential exposure.

4.0 EQUIPMENT/APPARATUS

List of Equipment

- Computer with ATLAS connection available
- Wireless barcode scanners
- Large RED permanent marker
- When applicable, red stamp: RELEASE TO SHIPPER

For samples without bar codes:

- Black ballpoint pen
- Sample tracking logbooks (Internal Sample Tracking)
- “Released Samples” stamp
- Large RED permanent marker
- Clock

5.0 PROCEDURE

- 5.1 Client samples are received by the Sample Receiver in the Sample Receiving Department. At this time, a workorder number is created for the samples as a group, and individual laboratory identification numbers are assigned to each field sample (see Eurofins Air Toxics SOP #50). Note: All samples must be associated with a workorder number prior to allocation throughout the laboratory.

- 5.2 Requests for multiple analyses will result in fractionation of the workorder into as many separate portions as are needed. Fractionated portions are labeled A, B, C, etc. The workorder is then entered into the laboratory database.
- 5.3 Samples needing subcontracted work or that needs to be sent back to clients should have the sample information tags stamped “RELEASE TO SHIPPER” in red.
- 5.4 Pressurization of the canister media, if required, may take place, and then the Sample Pressurization and Screening personnel move the samples into the sample custody cage. At this time, samples are placed in an assigned and identified storage location until needed for analysis.

If samples are taken directly from the pressurization analyst for analysis prior to being logged into the sample custody cage, it is the responsibility of the laboratory analyst/scientist to ensure proper custody is maintained by either scanning the samples or logging them into the appropriate logbooks.

- 5.5 If pressurization and screening are not required, Sample Receiving personnel log/scan the samples into the appropriate sample storage area. Pre-labeled shelves in the sample storage area or refrigerators are assigned to each sample.
- 5.6 All digital or manual logbooks must include the following tracking information:
- a) Workorder number
 - b) Number of samples
 - c) Analysis(es) requested
 - d) Location
 - e) Date
 - f) Time (military)
 - g) Initials of the person holding custody of the samples currently or previously
 - h) Samples on hold
- 5.7 Unanalyzed canister and Tedlar bag samples are stored in the sample custody cage on shelves A – J. Samples for which analysis has been completed are either disposed immediately (see Section 6), or stored on shelves X and Y (if the project requires sample hold until reporting or has “Do Not Clean” tags). Note: Samples logged back into the cage where analysis is completed must also be recorded into Form F3.21 “Do Not Release Canister Tracking” which is located in the cage area.

- 5.8 Unanalyzed non-barcoded samples stored in the sample custody refrigerators/freezers are placed on shelves labeled as “Not Analyzed”.
- 5.9 Each individual barcoded samples must be scanned into ATLAS tracking system before any further movemnet of the sample/s through the laboratory.
- 5.10 For non-barcoded samples each entry in manual logbooks must be accompanied by the date, time (military), and initials of the person who took or relinquished custody, the instrument and the analysis/es which is/are scheduled to be conducted. Entry errors must be corrected by drawing a single line through the incorrect information accompanied by date and initials.
- 5.11 In order to prevent accidental disposal, a work order that are signed out but has not been analyzed due to unforeseen delays (e.g. instrument failure) must be returned to the assigned location in the sample storage area, and this action must be documented in the sample tracking logbook or scanned into the storage area.

Verified samples from completed workorders must not be stored on the lab floor or the sample storage area and must properly be released for disposal if no further analysis is required.

- 5.12 A workorder that is partially analyzed by the end of a shift may be left in the immediate vicinity of the analytical instrumentation only if they are being handed off to another analyst/scientist.
- 5.13 A workorder that is partially analyzed on one instrument and need to be moved to another instrument must properly be logged back (or scanned) into the cage/ATLAS and back out to the appropriate instrument.
- 5.14 Barcoded samples for which one analysis has been completed and need further analysis, must be scanned back in to the sample storage area and properly log/scan back out to the appropriate instrument/method for further analysis.

6.0 SAMPLE DISPOSAL PROCEDURE

A sample may be released for disposal only when the following criteria are met:

- 6.1 The analyses have been completed and are verified as meeting quality criteria documented in the relevant SOPs in addition to verifying client project requirements have been met.

- 6.2 Runlog(s) are verified for completion of all samples associated with each workorder fraction to ensure all requested methods have been analyzed before final release.
- 6.3 A qualified analyst or scientist has reviewed the sample run as acceptable. (Demonstration of sample loading proficiency and approval by a Laboratory Management are required qualifications for an analyst or scientist to release samples.)
- 6.4 If the sample requires multiple analyses and all fractions have been completed as indicated by the date of analysis and the instrument utilized in the Sample Tracking Module. The date of analysis information is manually entered into the system by the qualified laboratory staff. Verification of this information entry into ATLAS prior to sample disposal is confirmed by the ATLAS Tracking Module.
- 6.5 If the sample canister does not have a “Do Not Clean” tag. If this tag is attached to the canister, the canister can be released five days after sample analysis, per specific project requirement, or sooner, but must be approved by the Project Manager prior to release. Additionally, Form F3.21 “Do Not Release Canister Tracking” must be verified and completed by initialing and dating the sample release date.
- 6.6 Review of the QC and analytical runs is documented by a check mark and initials in the instrument logbook. Once the review is completed, samples can be released. The ATLAS Tracking System will validate that a date of analysis for all samples associated with each fractions of a workorder has been entered and the sample is checked as “Done” in the “show sample” module in sample tracking prior to their release. Before any sample can be checked off as “Done” in ATLAS, the appropriate runlog(s) must be verified. Additionally, second runlog verification must be performed prior to entering the date in the “Date Analyzed” column of the ATLAS Tracking System for each workorder fraction. This step is critical to ensure each sample in the workorder fraction has individually been verified as analyzed.
- 6.7 Before entering a date in the ‘Date Analyzed’ column, verify that all samples are documented as completed in section 2 of the Data Review Checklist (F1.27).

Note 1: New employees in training refer to instruction I 2.17 “New Employee Canister Release Instructions”

- 6.8 Only the designated color-coded carts can be used for canister transfer between methods, instruments, and for sample release (see appendix A for the code key.) When releasing samples, it’s the chemist responsibility to

CONFIDENTIAL

account for all the canisters on the cart. Each canister must individually be scanned and verified in sample tracking prior to moving the samples to Support services.

- 6.9 Before canister samples are transferred to the Support Services Department, an X is marked on the sample tag using a large RED permanent marker along with date and initials of the chemist to indicate to Support Services the canister has been verified and ready for cleaning (see Section 5.1.16). These samples must not be placed back onto the shelves. Released canisters or bags that require additional analysis prior to the disposal step can only be re-activated by designated manager with over-ride privileges. To re-activate a sample, a reason is required to be entered in the correct field for complete documentation. Note that samples needing subcontracted analysis or that needs to be sent back to the client will have a red stamp noting "RELEASE TO SHIPPER" on the sample information tag. These samples should be released to storage rack S-01 in the shipping department. The initials of the releaser and date released should be noted on the sample information tag, but should not be marked with a red "X."
- 6.10 In the event that storage space in the sample's original location within the sample storage area is limited, the samples for which analysis requirements are not yet complete may be located on another shelf. The sample and the new location must be scanned to maintain the chain of custody.
- 6.11 Various samples are categorized as "single use" (PUF/XAD cartridges, charcoal cartridges, etc.). Disposal of the used up media must be documented in the appropriate sample tracking logbook to specifically indicate that the sample will not be returned to secure custody because it no longer exists. The term "Used Up", analyzed, "Extracted", or "Consumed" with a date and initials will be used to document this fact.
- 6.12 In the case of TO-17 tubes, samples are generally re-collected to allow for re-analysis or dilution if needed. Re-collected sample tubes are re-capped with long-term storage fittings and placed in their original storage tins in the assigned sample refrigerator and designated shelf (e.g. Refrigerator 4, Shelf 2). Archived samples can be released when Atlas shows that the workorder has been reported, generally with a status of "Filed". Entries in the sample custody logbook reflect the date/time and initials of the analyst logging re-collecting sample tubes into the refrigerator as well as final release.
- 6.13 Similar to TO-17, EPA 325 samples are re-collected to allow for re-analysis or dilution and are re-capped with long-term storage caps as soon as practical after the completion of the analytical sequence. Samples are

stored at ambient temperature and scanned to their assigned shelf labeled “325” in the designated EPA 325 sample tube storage area. Unless otherwise documented in the project requirements, samples are released when the workorder has been reported. If the customer delays delivering required field parameters to the lab beyond a week after receipt, samples may be released after verifying that all sample runs and QC meet requirements and applicable trigger exceedance evaluation is completed. Release is documented by scanning the barcodes into Atlas and updating the status accordingly.

7.0 LOGBOOK MAINTENANCE FOR NON-BARCODED SCANNING SAMPLES

It is the responsibility of the laboratory staff to ensure that proper sample chain-of-custody is maintained. This includes correction of any errors found in the sample storage area logbook, confirming complete documentation, and an unbroken chain of custody. A sample should not be logged out of any sample storage area which was never properly logged in, and a sample should not be logged back into a sample storage area which was never properly logged out.







8.0 DEFINITIONS

Eurofins Air Toxics Laboratory Quality Assurance Manual (LQAM) Definitions and Terms, Appendix A.

9.0 APPLICABLE WORK INSTRUCTIONS

WI63 Media Tracking System

Cart Color Code Key

<u>Color</u>	<u>Department</u>	
Orange Cart	Transfer	
Brown Cart	To Be Analyzed	
White Cart	Receiving	
Purple Cart	Returned Media	
Yellow Cart	Screening [To be Screened]	
Green Cart	Screening [Ready for Cage]	

UNCONTROLLED DOCUMENT

SOP Revision History

Revision Date	Revision #	Changes	Reviewer(s)
10/17/17	20	Update Section 2.1 and 5.1.18 to update storage location for 325 samples. Updated section 2.2 to include reference to 325 tube. Update section 5.1.17 to reflect current practices Update section 5.1.18 to cover release of samples due to client-delayed reports	[REDACTED]
5/22/18	21	5.1.13 updated to add reference for New Employee Instruction (I 2.17); Update company name throughout.	[REDACTED]
6/27/19	21.1	No changes needed.	[REDACTED]
7/29/19	22	Updated 5.1.12 and 5.1.13 to include runlog(s) review verification.	[REDACTED]
01/03/20	23	Updated sections 5.0, 6.0 and reformatted	[REDACTED]
12/15/20	23.1	No changes.	[REDACTED]
1/24/22	24	Updated section 5.6 and 6.5 to include Form F3.21. Removed redundant information from 5.10 and 5.14, Updated cart quantity under Cart Color Code Key; Updated company name (removed LLC); Renamed Section 8.0 as DEFINITIONS.	[REDACTED]
10/11/2022	24.1	No changes.	[REDACTED]
04/25/2023	25	Added release to shipper stamp in section 4. Sections 5 and 6: Added in procedure for subcontracted samples. Removed quantity of carts in color code key. Updated company name.	[REDACTED]

Document Owner/Laboratory Director:



Date: 07/13/23

Quality Assurance:





Date: 07/13/23

STANDARD OPERATING PROCEDURE

SAMPLE LOGIN USING LABTRACK

APPROVAL

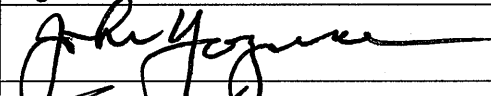Function	Name	Signature	Date
Laboratory Manager	John Yokoyama		3/18/2024
Technical Director	Sucha Parmar, PhD		3/18/2024

PREFACE

This is a Standard Operating Procedure (SOP). The analyst must read, understand, and follow this procedure explicitly.

A copy of this SOP is permanently placed in the laboratory area where the work is performed. The Department Supervisor, Quality Assurance Coordinator, and President/General Manager of Operations each have a copy of this document. Any changes in the SOP need to be approved by the Quality Assurance Coordinator. Each page of such changes will be initialed, dated, and concurrently incorporated into all copies located in the laboratory.

Revision History

Revision #	Date	Author	Change Reference	Reason for Change
01	04/17/2020	Zandra Baja	All Pages	Initial Release
02	3/18/2022	Crystal Moreno	All Pages	Periodic Review
03	3/18/2024	Crystal Moreno	All Pages	Periodic Review

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

1. LABTRACK LOG-IN PROCEDURE

- 1.1. Open Lab Track.
- 1.2. Close the small pop-up screen.
- 1.3. In the upper left hand corner, click on the arrow next to "Sample Login" and select "Batch Login."
- 1.4. Press the "Batch Login" icon.
- 1.5. The "Project No Login" window should pop up.
 - 1.5.1. LabTrack will assign an AAC Project No for the batch of samples. Write this on the COC.
 - 1.5.2. Enter the project name as "Description."
 - 1.5.3. Enter Client.
 - 1.5.4. Enter your name under "Recd By." Use your first initial and last name.
 - 1.5.5. Enter Lab Due Date as mm/dd/yyyy
 - 1.5.5.1. For Normal TAT, the Lab Due Date is 5 work days after the receipt date.
 - 1.5.6. Enter Final Due Date mm/dd/yyyy
 - 1.5.6.1. For Normal TAT, the Final Due Date is 10 work days after the receipt date.
 - 1.5.7. Enter Remarks, if applicable. (# of canisters returned, special comments on the COC, etc.)
 - 1.5.8. Click the Save button.
- 1.6. "Project No Sample Login" window should pop up.
 - 1.6.1. Fill in the Details according the information on the COC.
 - 1.6.2. Analysis Date: Leave blank
 - 1.6.3. TAT Days: Use Normal (10day) turnaround time if it is not specified on the COC.
 - 1.6.4. Sampled Date (and Time, if applicable): mm/dd/yyyy hhmm
 - 1.6.5. Clients ID: Sample IDs as recorded on the COC.
 - 1.6.6. Site: Leave blank
 - 1.6.7. Canister #: As recorded on the COC and canister ID tag(s), or leave blank.
 - 1.6.8. Matrix: Select the sample container
 - 1.6.9. Sampled By: Client
 - 1.6.10. Recvd Date: From COC, mm/dd/yyyy
 - 1.6.11. Recvd Time: From COC, hhmm
 - 1.6.12. Enter Remarks, if applicable. (Specify canister #s for voided or unused cans)
 - 1.6.13. When all fields are filled out, click "Sched Tests"
- 1.7. A window should pop up asking "How Many Samples In This Batch or Set?"
 - 1.7.1. Enter the number of samples listed on the COC and click OK.
- 1.8. A new window should pop up saying "# Samples Saved. Click OK to Continue."
 - 1.8.1. Click OK
- 1.9. A new window "Schedule Tests" should pop up.
 - 1.9.1. Add the appropriate Test Method(s) then click Save.
 - 1.9.2. A new window pops up asking "Save These Tests?" Click Yes.
 - 1.9.3. Another window pops saying "Test(s) Scheduled for New Samples." Click OK.
- 1.10. Once the tests are scheduled, return to the "Project No Sample Login" window and click Cancel.
- 1.11. To get a print out of the Sample Receipt / Log-In Report, press the "AAC Report" icon and enter the project number.
 - 1.11.1. Verify that all the information is correct. If it is, then press Print. If not, go to 2.1.
 - 1.11.2. Write the assigned AAC Sample #s next to each sample on the COC.
 - 1.11.3. Create sample ID stickers for each sample.
- 1.12. If the batch that was logged in included Summa Canisters, press the "Pressure Log" icon and enter

the project number.

1.12.1. Verify that all the information is correct. If it is, then press Print. If not, go to 2.1.

2. TROUBLESHOOTING FOR LABTRACK

- 2.1. To correct Sample ID, Sample date & time, Matrix, Pressure, Canister number, TAT, Unused or Voided Canister #s, etc.:
 - 2.1.1. Click on Microsoft Access and open the database file AAC1.MBD.
S:\Labtrack\Database\AAC1.MBD
 - 2.1.2. Open the Samples table.
 - 2.1.3. Fix the appropriate information.
NOTE: If Unused or Voided Canister #s were not added to the Remarks in 1.6.12, go to the last sample of the batch and enter them in the Remarks column.
 - 2.1.4. Close the Samples table.
- 2.2. To add a Test analysis to an existing batch:
 - 2.2.1. Must be done after completing the login procedure in Section 1.
 - 2.2.2. Go to Samples > Schedule Test [shortcut: Ctrl+T]
 - 2.2.3. Enter the sample number, and click OK.
 - 2.2.4. The "Schedule Tests" window should pop up.
 - 2.2.5. Select a Test to add.
 - 2.2.6. Click Save.
- 2.3. If by accident the cancel button was pressed during sample login:
 - 2.3.1. Switch the Batch Login button to Sample Login then go to 2.1.
 - 2.3.2. When all samples are logged in, go to 2.4.
- 2.4. To delete a Test result:
 - 2.4.1. Must be done after completing the login procedure in Section 1.
 - 2.4.2. Click on Microsoft Access and open the database file AAC1.MBD.
S:\Labtrack\Database\AAC1.MBD
 - 2.4.3. Open the Results table.
 - 2.4.4. Delete the appropriate test (according to sample number).
- 2.5. If samples that were logged in do not show up on the Sample Receipt / Log-In Report:
 - 2.5.1. Click on Microsoft Access and open the database file AAC1.MBD.
S:\Labtrack\Database\AAC1.MBD
 - 2.5.2. Open the Batches table.
 - 2.5.3. Copy the Batch # for the AAC Project No you want the samples to be associated with.
 - 2.5.4. Close the Batches table and open the Samples table.
 - 2.5.5. Paste the Batch number in the Batch column next to each sample that should be associated with that AAC Project No.
 - 2.5.6. Close the Samples table.
 - 2.5.7. The samples should now appear on the Sample Receipt / Log-In Report.

3. REFERENCES



LabTrack Manual "The Original Electronic Lab Notebook – Configuration Guide" Version 1.2

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

STANDARD OPERATING PROCEDURE

SAMPLE RECEIVING, SHIPPING AND DISPOSAL

APPROVAL

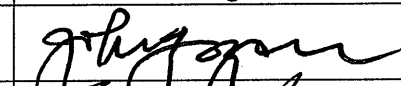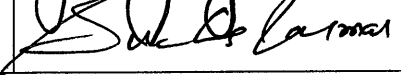Function	Name	Signature	Date
Laboratory Manager	John Yokoyama		3/18/2024
Technical Director	Sucha Parmar, PhD		3/18/2024

PREFACE

This is a Standard Operating Procedure (SOP). The analyst must read, understand, and follow this procedure explicitly.

A copy of this SOP is permanently placed in the laboratory area where the work is performed. The Department Supervisor, Quality Assurance Coordinator, and President/General Manager of Operations each have a copy of this document. Any changes in the SOP need to be approved by the Quality Assurance Coordinator. Each page of such changes will be initialed, dated, and concurrently incorporated into all copies located in the laboratory.

Revision History

Revision #	Date	Author	Change Reference	Reason for Change
07	01/06/2012	Wesley Horn	All Pages	Periodic Review
08	09/14/2016	Marcus Hueppe	All Pages	Periodic Review
09	10/19/2017	Zandra Baja	Update Section 4.1.1. Temp logging procedures & Fig 1	Periodic Review
10	04/17/2020	Zandra Baja Jose Heredia	All Pages. Added shipping procedures.	Periodic Review
11	3/18/2022	Crystal Moreno	All Pages	Periodic Review
12	3/18/2023	Crystal Moreno	All Pages	Periodic Review
13	3/18/2024	Crystal Moreno	All Pages	Periodic Review

1. SCOPE AND APPLICATION

Sample receiving, login, tracking, storage and disposal procedures (Section 7) provide directions on how to handle, login, track, store and dispose of incoming samples in order to maintain the sample's integrity

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

and preserve the client's confidentiality. Shipping procedures (Section 8) provide directions on how to fulfill and ship client's equipment requests.

2. SUMMARY

When AAC receives samples, they are inspected for damage and/or integrity. The samples are assigned a unique laboratory identification number that is predetermined by AAC's LIMS (Lab Track). The identification number is documented on the Chain of Custody (COC), Sample Receipt / Login Report, Sample History Log, each individual sample container, and in the Laboratory Database. The COC is carefully inspected for accuracy and completeness with respect to the samples and the analysis requested. The characteristics of the samples such as temperature are carefully documented. The reception and inspection of the samples is documented in the Sample History Log and the Laboratory Database. The samples are stored in their appropriate conditions until they are ready for analysis. A project folder is constructed and given to the appropriate analyst with all pertinent documents. The samples are disposed of following the laboratories waste disposal procedures.

When AAC receives a request for sampling equipment, the equipment is assembled and verified to be in proper condition. The equipment is appropriately packaged and sent out using the requested shipping method. All shipped equipment is documented in a logbook to track inventory and all records for equipment requests and shipping receipts are retained.

3. TERMS AND DEFINITIONS

COC	Chain of Custody
LIMS	Laboratory Information Management System
NELAC	National Environmental Laboratory Accreditation Conference
mmHgG	millimeters of mercury, gauge
mmHgA	millimeters of mercury, absolute
psiA	pounds per square inch, absolute
SHL	Sample History Log
Pressure, absolute	zero-referenced against a perfect vacuum using an absolute scale; equal to gauge pressure plus atmospheric pressure. Standard atmospheric pressure is equal to 760 mmHgA.
Pressure, gauge	zero-reference against ambient air pressure; equal to absolute pressure minus atmospheric pressure. Standard atmospheric pressure is equal to 0 mmHgG.

4. SAFETY CONCERNS AND WASTE MANAGEMENT

- 4.1. Due to the potential hazardous risks of the samples, liquid samples should be handled with gloves while wearing safety glasses or goggles and lab coats.
- 4.2. Sample preparation should be done in a vented laboratory fume hood due to the potentially hazardous risks.

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

- 4.3. Summa Canisters should not be pressurized beyond 40 psiA, which is the maximum allowable pressure for Summa Canisters.
- 4.4. Safety chains should be used to secure all gas cylinders to laboratory benches or walls without any obstructions.
- 4.5. All solvents and materials used for preparation of standards or sample preparation, as well as all liquid and solid samples, are emptied into the Organic Waste Drum or other appropriate container. An outside contractor, in accord with proper waste disposal procedures, disposes of the Organic Waste Drum contents. Procedures and waste manifest are in possession of the Technical Director.

5. SAMPLE HANDLING AND PRESERVATION

- 5.1. Liquid samples are kept together according to project number in the designated refrigerator at ~4°C, except when a sample aliquot is being removed for analysis.
 - 5.1.1. Each refrigerator's temperature is recorded daily in the AAC Temperature Logbook to verify that they are in proper working condition. Refer to the Sample Fridge SOP for temperature monitoring protocols.
- 5.2. All air samples in Summa Canisters or Tedlar bags are kept at room temperature in the main laboratory.
- 5.3. The security of the samples are maintained by AAC's policy that anyone other than AAC laboratory personnel must register with the Office Administrator before entering the laboratory and must be escorted by AAC personnel at all times.
- 5.4. Refer to Table 1 for specific holding times for liquid samples, Tedlar bag samples, and Summa Canister samples.
 - 5.4.1. Holding times for liquid samples vary by the analysis method.
 - 5.4.2. Tedlar bag samples typically have holding times between 24 hours and 72 hours from the time of sampling, unless otherwise specified by the analysis method.
 - 5.4.3. Summa Canister samples typically have holding times from 7 days to 30 days from the time of sampling, unless specified otherwise by the analysis method.

6. EQUIPMENT AND SUPPLIES

- 6.1. Summa Canisters – the standard size is 6 Liters. Other sizes include 3.2 Liters, 1.4 Liters, 1.0 Liter
- 6.2. Digital pressure gauge (calibrated)
- 6.3. IR Temperature sensor (calibrated)

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

- 6.4. Wrenches – 9/16", 1/2", 7/16", and 5/8"
- 6.5. Logbooks – Equipment Shipping Logbook, Pressure Logbook
- 6.6. UHP Helium
- 6.7. Refrigerators capable of maintaining a temperature of ~4°C
- 6.8. Self-adhesive labels – for sample identification
- 6.9. Indelible pen – Sharpie preferred
- 6.10. Folders
- 6.11. Gloves and goggles

7. SAMPLE RECEIVING PROCEDURES

7.1. Sample Receipt

- 7.1.1. Upon receipt, the samples are checked against the field COC document(s).
 - 7.1.1.1. If any discrepancies are found (including sample type, total number of samples, etc.), management is immediately notified to contact the client. Any communication with the client regarding the discrepancy is documented and retained in the project folder.
- 7.1.2. Per NELAC requirements, samples are inspected to verify that they adhere to the Sample Acceptance Policy (Figure 1). SAP inspection items include, but are not limited to:
 - 7.1.2.1. COC accuracy – Verify that the COC contains all information pertinent to analysis, and indicates all sample transfers with signatures, dates, and times.
 - 7.1.2.2. Container identification – Cross-reference the information on the container with information on the COC and account for all of the received samples.
 - 7.1.2.3. Temperature – Most liquid samples should be ~4°C. Use the IR thermometer to check the temperature. Record the sample temperature and the thermometer ID number on the COC.
 - 7.1.2.4. Appropriate container and preservative – Depends on the analysis to be performed. Zero headspace is required for volatile analysis of liquid samples. Inert or passivated containers are REQUIRED for sulfur samples.
 - 7.1.2.5. Sample and container integrity – Check for any leaks or cracks.

- 7.1.2.6. Holding times - Verify that the samples are received within the holding times in Table 1 for the specified analysis method stated on the COC.
- 7.1.3. If any samples do not meet the SAP requirements, it must be noted on the COC and either the Sample History Log or the Sample Receipt / Login Report.
- 7.1.3.1. Per NELAC requirements, if there is doubt about the suitability of a sample, or if a sample does not conform to the description provided, the Laboratory Manager must be notified immediately to contact the client for further instructions.
- The Laboratory Manager will report back to the Laboratory Technician with directions for handling the problems, preferably within 24 hours of sample receipt so that the samples can be processed in a timely manner. Samples are either 1) rejected as agreed with the client and correspondence and/or records of conversations are retained, or 2) the decision to proceed is documented and agreed upon with the client, the condition is noted on the Chain of Custody form and/or lab receipt documents, and the analysis data are qualified in the report.
- 7.1.4. Verify that all sampling equipment (canisters, flows, manifolds, etc.) is accounted for and in good condition. Note all returned equipment on the COC and the Sample Receipt / Login Report. Any equipment that is missing and/or damaged is also recorded.
- 7.1.5. In the Equipment Shipping Logbook, mark all returned canisters (including voided samples) with a check mark. Unused cans are marked with a check mark and circled.
- 7.1.5.1. Any canister returned unused must be vacuum checked.
- 7.1.6. A Sample History Log (Figure 2) is filled out to record the above information. The SHL is generated using Microsoft Excel and is stapled to the inside of the project folder.

7.2. Sample Log-in

- 7.2.1. The information on the COC is entered into the LIMS system (Lab Track). The LIMS system assigns unique predetermined laboratory identification numbers to each sample. The first two digits are the last number of the year (2019=19), the next four digits are the project number, followed by a dash (-) then a sequential number for each sample.
- 7.2.1.1. For example, 192187-4360 represents year 2019, project number 2187, and sample number 4360.
- 7.2.1.2. If more than one container from the same sample is received, each container is assigned an individual alphabetical character (e.g. 4360A, 4360B, etc.)

- 7.2.2. The project number is written at the top of the COC and the sample numbers are written next to each sample listed on the COC. Samples are organized in the order they are listed on the COC, then self-adhesive labels with the full lab ID numbers (project and sample number) are affixed to each sample container.
- 7.2.3. A Sample Receipt / Login Report is generated through Lab Track (Figure 3) and a project folder is created. The project folder includes: (1) Sample History Log, (2) Sample Receipt / Login Report (from Lab Track), (3) Canister Pressure Log (if applicable, from Lab Track or Microsoft Excel for pre-padded canisters), (4) Original copy of the COC, (5) any other documents pertaining to the project.
- 7.2.3.1. Each folder must have the client name, project number, date received, and Rush (if applicable) written on the folder tab.
- 7.2.3.2. If the project requires the samples to be analyzed by multiple departments of the lab, then additional project folders are created. The first project folder is labeled "1 of x" and contains the original COC. Additional folders are labeled "2 of x" etc. and must contain a copy of the COC.
- 7.2.4. Each project folder is given to the appropriate department(s).

7.3. Canister Pressurization

- 7.3.1. A calibrated digital pressure gauge is used to check the return vacuum/pressure of the canister. The gauge reading is recorded on the canister tag. If necessary, the canister is pressurized with UHP Helium according to the requested analysis and the final gauge reading is recorded on the canister tag. The lab tech initials and the date the gauge readings were taken are recorded on the canister tag.
- 7.3.1.1. For EPA 3C, 18, or 25C analysis and most other GC/FID or GC/TCD methods, canisters are pressurized to ~140 mmHgG (~900 mmHgA).
- 7.3.1.2. For EPA TO-14 or TO-15 analysis, canisters are pressurized to ~254 mmHgG (~1014 mmHgA).
- 7.3.1.3. All smaller Summa Canisters (3.2 L, 1.4L, and 1.0L) are pressurized to ~760 mmHgG (~1520 mmHgA) regardless of the requested analysis.
- NOTE:** For SCAQMD 25.1 and SCAQMD 25.3 sample receipt and pressurization procedures, refer to the corresponding SOP.
- 7.3.2. The initial and final gauge readings are converted to absolute pressure (see 10.1) and recorded in the Pressure Logbook. The pressures are then entered into the LIMS system and a Canister Pressure Log is generated (Figure 4).

7.3.2.1. For canisters that were pre-padded with Helium (see 10.2), the Canister Pressure Log is generated using Excel (Figure 5).

7.4. Tracking, Archival and Disposal

7.4.1. The Laboratory Technician tracks the sample's location throughout the receiving area then distributes the samples to the appropriate department(s). Each department then tracks the sample's location until analysis is completed. After analysis, the sample is moved to an area assigned for archival and disposal.

7.4.2. Liquid samples are stored at ~4°C for a period of at least 90 days after being received in the laboratory. Liquid and solid wastes are disposed of in the Organic Waste Drum located in the rear fume hood room (see 4.5).

7.4.3. Tedlar bag samples are kept for a period of at least 1 week after the client has received the final laboratory report. Tedlar bag samples are emptied using a vacuum pump in the fume hood before being returned to the client or discarded.

7.4.4. Summa Canister samples are kept for a period of at least 1 week after the client has received the final laboratory report. The Laboratory Manager must give approval before any Summa Canister samples are disposed of. Summa Canister samples are disposed of and cleaned according to the Canister Cleaning SOP.

7.4.5. Samples may be stored for a longer period of time at the client's request.

7.5. Subcontract Laboratory Analysis

7.5.1. If any analysis is requested that is not performed by AAC, the work may be subcontracted out to another laboratory. Proper custody and transfer procedures are employed and documented in the same manner as in-house analyses.

7.5.2. The Project Manager provides the name and address for the subcontract laboratory to be used.

7.5.2.1. Any work requiring accreditation must be subcontracted to an accredited laboratory. If there are no labs with the required accreditation with the ability to perform the requested analysis, a non-accredited lab may be used and the discrepancy must be noted in the case narrative. NELAC approved laboratories can be found at: <https://lams.nelac-institute.org/Search>

7.5.3. Any samples sent out to a subcontractor for analysis are properly packaged and shipped. The samples are accompanied by a Subcontract COC filled out by AAC.

8. SHIPPING PROCEDURES

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

8.1. Equipment Preparation

- 8.1.1. Project Managers provide a copy of the email which states the quantity and type of equipment requested as well as the preferred shipping method.
- 8.1.2. Summa Canisters are vacuum checked prior to shipping. Summa Canisters must have an initial vacuum of at least -750.0 mmHgG (10 mmHgA).
 - 8.1.2.1. For clients who request a helium prepad, pre-fill the Summa Canister with Helium to the requested volume (see 10.2)
- 8.1.3. Flow controllers and attachments are leak checked. Flows are verified to be operating at the appropriate speeds. All plugs and attachments are securely fastened and placed into shipping boxes with necessary padding.

NOTE: For SCAQMD 25.1 and SCAQMD 25.3 equipment preparation procedures, refer to the corresponding SOP.
- 8.1.4. For any liquid media or other shipments, the equipment is checked to ensure all requested items have been provided. A cooler is selected and filled with the appropriate amount of padding and refrigeration.
- 8.1.5. All equipment to be shipped (cans, flows, etc.) are recorded in the Equipment Shipping Logbook as well as the Inventory Excel document on Share.

8.2. Shipping

- 8.2.1. The shipping methods used are FedEx, UPS, and OnTrac. For Courier or Pickup, see 8.6.
- 8.2.2. If the client does not provide an account number for shipping, AAC's account is used. All login information for AAC's shipping accounts is securely stored with the Shipping Department.
- 8.2.3. Any shipments using AAC's account require approval from the Technical Director or Laboratory Manager. A Billing Memo must be completed and placed in the Technical Director's mailbox.

8.3. FedEx Shipments

- 8.3.1. Go to www.fedex.com and click on Log In. Enter AAC's username and password.
- 8.3.2. Click on Shipping > Create a Shipment and fill out the appropriate information.
 - 8.3.2.1. If shipping dangerous goods, use the FedEx Ship Manager program on the desktop. Hazmat shipping requires several details. All guidelines must be followed and the finished product must be reviewed and approved by the Laboratory Manager.
 - 8.3.2.2. Same Day pickups must be scheduled before 2:30 pm. Same Day pickup is not

available for Ground shipments.

- 8.3.3. When all information has been entered, click Continue. Print out the shipping label, then click on the shipping history tab to print out a receipt.
- 8.3.4. The receipt is stapled on top of the email request and placed in the FedEx binder.

8.4. UPS Shipments

- 8.4.1. Go to www.ups.com and click on Log In. Enter AAC's username and password.
- 8.4.2. Click on Shipping > Create a Shipment
- 8.4.3. Select from client list or enter a new client
- 8.4.4. Select service type
- 8.4.5. Select Packing: Your packing
- 8.4.6. Check Schedule a pickup (Must be scheduled before 3:30 pm)
- 8.4.7. Click Ship Now button
- 8.4.8. Print out shipping label and shipment receipt.
- 8.4.9. The receipt is stapled on top of the email request and placed in the UPS binder.

8.5. OnTrac Shipments

- 8.5.1. Go to www.ontrac.com and click on WebOnTrac Login. Enter AAC's account number, username, and password.
- 8.5.2. Enter the client's information or select from Address Book
- 8.5.3. When all information has been entered, click Submit & Print
- 8.5.4. Flip the sign attached to the Shipping and Receiving window around so that it reads "Yes ONTRAC Thanks" from the outside.
- 8.5.5. Print the shipping receipt: Click on View/Delete in the top left section under Shipments and enter today's date. Click View and then Print.
- 8.5.6. The receipt is stapled on top of the email request and placed in the California Overnight folder.

8.6. Courier (MYSIS) or Client Pickup

- 8.6.1. For pickup by AAC's courier (MYSIS), fill out the MYSIS form and make a copy. Retain the copy and give the original to the courier with the equipment.
- 8.6.2. If the client is picking up, go to the "Pickup Log" Excel document on Share.
- 8.6.3. Create a new Pick-Up Form: Right click on any existing tab, select Move or Copy..., then click (move to end) and check the box "Create a copy." In the new tab, delete the previous information and fill out today's date, client information, and equipment information.
- 8.6.4. Print two copies of the Pick-Up Form and sign both. Once the client arrives, make sure they sign both copies and give them one.
- 8.6.5. The other copy is stapled to the email request and placed in the Pick Up Log binder.

9. QUALITY CONTROL

- 9.1. It is the responsibility of the technician to perform the procedures according to this SOP and

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

complete the documentation required for review.

- 9.2. It is the responsibility of all personnel who work with samples to note any anomalies or out-of-control events associated with the samples. Any discrepancies must be noted and corrective action taken and documented.

10. CALCULATIONS

- 10.1. Gauge pressure to Absolute pressure – The digital pressure gauge gives a reading relative to atmospheric pressure. For example, at standard atmospheric pressure, a gauge reading of 0 mmHg Gauge is equivalent to 760 mmHg Absolute. Similarly, a gauge reading of -760 mmHg Gauge is equivalent to 0 mmHg Absolute.

To convert from mmHg Gauge (mmHgG) to mmHg Absolute (mmHgA), we assume the lab is at standard atmospheric pressure and add 760 to the gauge reading.

$$(-mmHgG) + 760 = mmHgA$$

- 10.2. Helium prepad – Assume a Summa Canister at full volume has an absolute pressure of 760 mmHgA. Calculate the ratio of the prepad volume to the full volume of the canister then multiply by 760 mmHgA. Finally, subtract 760 to get the gauge reading needed for the requested prepad.

$$mmHgG_p = \left(\frac{V_p}{V_s} \times 760 \text{ mmHgA} \right) - 760 \text{ mmHgA}$$

where:

$mmHgG_p$ = Prepad pressure, mmHgG

V_p = Volume of helium prepad, L

V_s = Volume of Summa Canister

- 10.3. mmHgA to psiA

$$psiA = 0.0193 \times mmHgA$$

- 10.4. psiA to mmHgA

$$mmHgA = 57.7149 \times psiA$$

- 10.5. mmHgA to inHg

$$inHg = 0.0394 \times mmHgA$$

- 10.6. inHg to mmHgA

$$mmHgA = 25.4 \times inHg$$

- 10.7. The desired flow rate of the flow controller is calculated based on the following equation. This is what the flow meter should read when adjusting/measuring the flow controller.

$$\text{Final flow rate} = \frac{mL}{\text{min}} = \frac{(V_T \times 0.8333)}{T_T}$$

where:

V_T = Total volume of the containers/canisters

T_T = Total sampling time in minutes

Note: The canister is not filled to ambient pressure in order to ensure the integrity of the sample upon receipt. When using passive flow controllers the final vacuum of the canister should be less than -5 inHg so that the integrity of the sample is maintained, i.e. if the sample vacuum is allowed to go to ambient (0inHg) there is no way to tell when the sample stopped collecting. Also the negative pressure allows us to determine if there were any leaks from the time of sampling to receipt. Therefore, the flow rate is set to fill the canister to 25/30 or 83.33% of its volume.

11. REFERENCES

[https://en.wikipedia.org/wiki/Pressure_measurement#Absolute, gauge and differential pressures %E2%80%94 zero reference](https://en.wikipedia.org/wiki/Pressure_measurement#Absolute,_gauge_and_differential_pressures_%E2%80%94_zero_reference)

12. TABLES AND FIGURES

Table 1 – Sample Holding Times and Media


ANALYTES/METHODS	MEDIA	PRESERVATION	MAX HOLDING TIME
------------------	-------	--------------	------------------

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

ANALYTES/METHODS	MEDIA	PRESERVATION	MAX HOLDING TIME
Total Reduced Sulfurs (ASTM D5504, SCAQMD 307.91)	Tedlar bag Silonized Canister	No metal, ambient	24 hrs 7 days
VOCs (TO-14, TO-15, TO-12, PAMS)	Tedlar bag Summa Canister	Ambient	72 hrs 30 days
EPA 25C/3C	Tedlar bag Summa Canister	Ambient	72 hrs 30 days
ASTM D-1945/1946	Tedlar bag Summa Canister	Ambient	72 hrs 30 days
RSK-175	Glass Vial	~4°C	7 days if unpreserved 14 days if preserved
SCAQMD 25.1	Trap Summa Canister	Keep on dry ice Ambient	ASAP 30 days
SCAQMD 25.3	Glass Vial Summa Canister	~4°C Ambient	Purge within 24 hrs of sampling Analyze within 10 days of sampling
Polyaromatic Hydrocarbons (TO-13)	PUF Cartridge	~4°C	Extract within 7 days of sampling Analyze within 40 days of extraction
Alcohols (EPA 308)	Glass, silica gel tube	~4°C	ASAP
Aldehydes & Ketones (EPA TO-11A)	DNPH coated cartridge	~4°C, dark	Extract within 14 days of sampling Analyze within 30 days of extraction
Aldehydes & Ketones (EPA 0011)	Glass (amber) DNPH solution	~4°C, dark	Use solution within 5 days of prep Extract within 7 days of sampling Analyze within 30 days of extraction
Aldehydes & Ketones (EPA TO-5)	Glass (amber) DNPH solution	~4°C, dark	Use solution within 48 hours of prep
Aldehydes & Ketones (CARB 430)	Glass (amber) DNPH solution	~4°C, dark	Use solution within 48 hours of prep Extract within 9 days of prep Analyze within 39 days of prep
Formaldehyde (EPA 316, 323)	Glass	~4°C, dark	14 days
NCASI 105.01	Glass	~4°C, dark	Extract BHA solution within 21 days Analyze extract within 35 days of sampling Analyze aqueous within 21 days of sampling
Methanol (NCASI 94.03)	Glass	~4°C, dark	At least 30 days
NCASI 94.02	Glass	~4°C, dark	10-21 days
NCASI 99.02	Impinger Canister	~4°C, dark Ambient	2 weeks 3 weeks
Phenols & Cresols (TO-8)	Glass (amber)	~4°C, dark	48 hours
Organic Acids	Glass	~4°C	7 days
Ammonia (CTM-027)	HDPE	~4°C	14 days
Anions (EPA 26)	P	~4°C	ASAP
Particulates (TSP, PM-10, EPA IO-3.1, etc)	Filter	None	14 days
Condensable & non- Condensable Particulates	G, Filter	Cool, ~4°C	14 days

Figure 1 – Sample Acceptance Policy

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

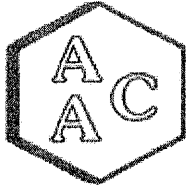

Atmospheric Analysis & Consulting, Inc.

Sample Acceptance Policy

Per NELAC requirements, AAC has established a Sample Acceptance Policy (SAP). All samples submitted to AAC for analysis must be accompanied by a completed Chain of Custody. All submissions will be inspected according to the following SAP criteria.


1. Completeness of Chain of Custody documentation including but not limited to:
 - a. Sample identification
 - b. Location and/or description of sample collection
 - c. Date and time of sample collection
 - d. Collector's name
 - e. Preservation type (if any)
 - f. Sample type
 - g. Any special remarks concerning the sample

2. Sample Labeling
 - a. Uniquely identified samples
 - b. Water resistant labels
 - c. Use of indelible ink

3. Sample Integrity
 - a. Use of appropriate sample containers
 - b. Adherence to specified holding times
 - c. Sufficient sample volume to perform the necessary tests

Any deviations from the SAP will be documented on the final report.

Figure 2 – Sample History Log



1534 Eastman Avenue, Suite A
 Ventura CA, 93003
 (805) 850-1642
 www.aacclab.com

Sample History Log

Client: _____ Lab Number: _____
 Project: _____ Date/Initials: _____ GR

Note: This form is used for all samples received by AAC. The use of this form for custody seals is strictly meant to indicate presence/absence, not compliance or nonconformity.

Yes	No	N/A	
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	1. Did the client supply a COC (chain of custody)?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	2. Is the COC filled out correctly?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	3. Did the client supply all samples identified on COC?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	4. Are samples properly labeled with client sample ID?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	5. Are all samples marked with the appropriate test?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	6. Are samples/sample containers in good condition?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	7. Were the samples received within the suggested holding periods?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	8. Were the Summa Canisters received with valve closed and fittings properly secured?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	9. Client returned any additional equipment sent with samples?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	10. Was a Trip Blank received? (Method 25.3)
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	11. Were the samples received at the adequate temperature?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	12. Were custody seals on outside of cooler/box?
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	13. Do the samples have appropriate preservation according to method/SOP or client specified information?
			14. Sample Receipt / Log-In Report Review

Did the client return all equipment? (Cans, Flows, Etc): _____

Were any of the samples returned damaged or incorrectly assembled? _____

Any other discrepancies? (include lab sample ID numbers): _____

Analyst Checklist

	Initial		Initial
Parameters	_____	Corrective Action form if failed?	_____
Methods	_____	Any Irregularities?	_____
Dilution Factor	_____	Surrogate Recovery	_____
QC Pass/Fail	_____	Date Completed	_____

Final Approval

Check Performed By: _____
 Date: _____

Emailed: _____


Reporting

Hard Copy? <input type="checkbox"/> Yes <input type="checkbox"/> No	Mailed: _____	By: _____
EDD? <input type="checkbox"/> Yes <input type="checkbox"/> No	Date/Time Received: _____	By: _____
	Date/Time Completed: _____	By: _____

AAC SHL Rev 04
Page 1 of 1

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

Figure 3 – Sample Receipt / Login Report



Atmospheric Analysis & Consulting, Inc

SAMPLE RECEIPT / LOG-IN REPORT


Client Name:	Sampled By:	
Project Name:	Received By:	
AAC Project No.:	Turn Around Time:	
	Lab Due Date:	
	Final Due Date:	

<u>Sample Receipt Date Time</u>	<u>Clients ID</u>	<u>Sampling Date/Time</u>	<u>Sample #</u>	<u>Matrix</u>	<u>Analysis Requested</u>
<div style="display: flex; justify-content: space-between;"> <div style="width: 60%;">REMARKS:</div> <div style="width: 35%;">Total Samples:</div> </div>					

1

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.


Figure 4 – Canister Pressure Log

		<u>Atmospheric Analysis & Consulting, Inc.</u>	
CANISTER PRESSURE LOG			
Client:	Project No.:		
Date:			
Canister #	Sample #	Initial Pressure mmHg	Final Pressure mmHg

1

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

Figure 5 – Canister Pressure Log (with Helium Pre-Pad)



Atmospheric Analysis & Consulting, Inc.

CANISTER PRESSURE LOG

Client: _____

Project No.: _____

Date: _____

Canister #	Sample #	Initial Vacuum Check mmHg	(P1) Pre-Pad mmHg	(P2) Return Pressure mmHg	(P3) Final Pressure mmHg	DF

10/31/2019 1:06 PM

This document is confidential and an intellectual property of Atmospheric Analysis and Consulting, Inc. (AAC Lab). Neither this document nor any of the information contained herein may be reproduced or disclosed under any circumstances without the express written permission of AAC Lab. Printed copies are uncontrolled. It is the responsibility of lab employees to verify that the most current revision of this document is in use.

Attachment C
Field Documentation Forms

PM Jeff Fenton
Ft. Ord. GW monitoring 2406
12/14

Team 2
SB/SK
Sounding 36392
Cor. -.06

0746 @ MW-02-04-180 WL - 94.57
SN2 @ 103' Cor. -.06

0757 sampled # 0650L002024F
Dropped 1 @ 2

0808 @ MW-12-05-180 WL - 74.61
SN3 @ 88' Cor. -.06

¹⁸
0820 sampled # 0650L012025F & 026D
Dropped 1 @ 3

0835 @ MW-10-04-180 WL - 259.75
SN2 @ 271' Cor. -.06

0845 sampled # 0650L010027F
Dropped 1 @ 2

0902 @ MW-002-25-A WL - 129.36
SN4 @ 146' Cor. -.06

0910 sampled # 0650L002028F
Dropped 1 @ 4

0919 @ MW-002-53-180 WL - 204.09
SN5 @ 259' Cor. -.06

0927 sampled # 0650002029F
Dropped 1 @ 5

0934 @ MW-002-39-180 WL - 203.99
SN4 @ 244' Cor. -.06

0943 sampled # 0650L002030F
Dropped 1 @ 4

Team 2
SB/SK
12/14/06

0950 @ MW-002-24-180 WL - 187.97
SN3 @ 214 Cor. -.06

1002 sampled # 0650L002031F
Dropped 1 @ 3

1009 @ MW-002-09-180R WL - 156.08
SN2 @ 199' Cor. -.06

¹⁰²²
1024 sampled # 0650L002032F & 033D
Dropped 1 @ 2

1029 @ MW-002-06-A WL - 106.26
SN6 @ 128' Cor. -.06

1039 sampled # 0650L002034F
Dropped 1 @ 6

1046 @ MW-002-06-180R WL - 157.87
SN4 @ 214' Cor. -.06

1053 sampled # 0650L002035F (ms/msd)
Dropped 1 @ 4

1110 @ MW-002-07-180R WL - 182.36
SN3 @ 233' Cor. -.06

1117 sampled # 0650L002036F
Dropped 1 @ 3

1123 @ MW-002-05-180 WL - 155.49
SN4 @ 215' Cor. -.06

1130 sampled # 0650L002037F
Dropped 1 @ 1



Site Safety Tailgate Meeting

Installation/Site Name		Project Number	
Event Name		Safety Representative	
Date		Field Team Leader	
Weather Forecast:			

Participants (attach loose-leaf sheet if additional space is needed)

Printed Name and Initials	Affiliation	Role	Signature

Scope of Today's Work

--

Health and Safety Topics Discussed (✓ applicable topics)

<input type="checkbox"/> Weather Factors	<input type="checkbox"/> Chem. of Concern	<input type="checkbox"/> Lifting Safety	<input type="checkbox"/> Sanitation
<input type="checkbox"/> AHA Review	<input type="checkbox"/> PPE Requirements	<input type="checkbox"/> Recent near miss/injuries/lessons	<input type="checkbox"/> _____
<input type="checkbox"/> Site emergency SOP, rally point, etc.	<input type="checkbox"/> Slip/Trip/Fall Hazards	<input type="checkbox"/> BBS Hazard Triggers ^[1]	<input type="checkbox"/> _____
<input type="checkbox"/> Changed Conditions	<input type="checkbox"/> Site Controls	<input type="checkbox"/> BBS Trigger Controls ^[2]	<input type="checkbox"/> _____
<input type="checkbox"/> Equipment Hazards	<input type="checkbox"/> Biological Hazards	<input type="checkbox"/> Traffic Control	<input type="checkbox"/> _____
<input type="checkbox"/> COVID 19 SOPs			<input type="checkbox"/> _____

[1] Behavior-based Safety Hazard Triggers: Distractions, rushing, short-cuts, frustration, exhaustion, complacency, anger, multi-tasking, not focusing on task
 [2] Behavior-based Safety Trigger Controls: Communicating, accountability, patience, relaxation techniques, healthy lifestyle, and adequate sleep

Comments:

Individual in the Safety Representative role acknowledges that the checked (✓) topics were discussed.

Name (Print) _____ Signature _____ Date _____



9699 Blue Larkspur Lane, Suite 203
 Monterey, CA 93940
 (831) 287-5254

CHAIN OF CUSTODY

Chain of Custody #: _____

Project Information:						Analysis Requested											Lab Sample Receipt	
Project Location: _____		Sampler/s: _____															Laboratory Sample Delivery	
Project Name: _____		Report To: Ahtna Environmental															Group #: _____	
Project Number: _____		E-Mail: _____															Custody Seal: _____	
Sampling Event: _____		Laboratory: Eurofins Air Toxics																
Lab Number	Sample Collection		Matrix	# of Containers	Preservative													
	Date	Time			None	HNO ₃	NaOH	HCL	H ₂ SO ₄	MeOH	NaHSO ₄	Other						
Sample Number/Description	Date	Time	Matrix	# of Containers	None	HNO ₃	NaOH	HCL	H ₂ SO ₄	MeOH	NaHSO ₄	Other						

Turnaround Time: : Standard _____ : 3-5 Day Rush _____ : 48 Hour Rush _____ : 24 Hour Rush _____

Shipment Method: _____ Tracking ID: _____

Comments: _____

Chain of Custody Tracking:

Relinquished By Sampler:	Date/Time:	Received By:	Date/Time:
Relinquished By:	Date/Time:	Received By:	Date/Time:
Relinquished By:	Date/Time:	Received By Laboratory:	Date/Time:



INSTRUMENT CALIBRATION RECORD

Daily Log	Date:			
	No.			
	Sheet	1 Of		1

PROJECT NAME: FORT ORD, CA Project Number: 05055.02.15

FIELD ACTIVITY SUBJECT: Calibration of Landtec GEM 2000

DESCRIPTION OF DAILY ACTIVITIES AND EVENTS

Landtec Calibration Gas (high-level) Lot# _____, Expiration Date: _____

Compound	Initial Reading	Calibrated to	Comments
CH4		50%	
CO2		35%	

Landtec Calibration Gas (Oxygen) Lot# _____, Expiration Date: _____

Compound	Initial Reading	Calibrated to	Comments
O2		4%	

VISITORS ON SITE:	CHANGES FROM PLANS AND SPECIFICATIONS, AND OTHER SPECIAL ORDERS AND IMPORTANT DECISIONS:

WEATHER CONDITIONS:	IMPORTANT TELEPHONE CALLS:

PERSONNEL ON SITE:

SIGNATURE: DATE:

Attachment D

Three Phase Quality Control Process and Documentation



Preparatory Inspections

Project Number		Field Team Leader	
Installation/Site		QC Lead	
Event Name		Project Lead	
Date		Safety Representative	

Meeting Attendees *(list additional attendees on second page)*

Name and Initials	Event Role/Position	Organization

Preparatory Steps

Planning Documents/Submittals Completed with Approvals	
Item	Comments
Planning Documents/Submittals Reviewed by Field Team (Ahtna and Subcontractors)	
Item	Comments
Preliminary Work Completed in Accordance with Plans	
Item	Comments



Preparatory Inspections

DFOW/Tasks Discussed, and Field Team to Implement Work According to Plans	
Item	Comments

Equipment/Supplies/Materials Procured, Available, in Working Order, and Conforming to Standards (list)	
Item	Comments

Action Items

--

Additional Meeting Attendees

Name and Initials	Event Role/Position	Organization

Approved By

Initial _____	Signature _____	Date _____
---------------	-----------------	------------



Initial/Follow-Up QC Inspections

Project Number		Field Team Leader	
Installation/Site		QC Lead	
Event Name		Project Lead	

List of Applicable Inspection Items

Item	Inspection	Spec. Document and/or Section	QC Category & Frequency ^[1]
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			

[1] (W) Workmanship; (S) Safety; (M/E) Materials and Equipment; (P) Plan Compliance. Depending on the item, list one or more categories (W, S, M/E, or P) and specify the frequency of follow-up inspections.

Project Lead Approval

Initial _____	Signature _____	Date _____
---------------	-----------------	------------



Initial/Follow-Up QC Inspections

Project Number					
Installation/Site		QC Representative			
Event Name		Date of Inspection(s)			

Item Number and Inspection	Phase (I/F) ^[1]	Inspect. Type ^[2]				Basis ^[3] E/N/P/O	Variance (Y/N) ^[4]	Deficient (Y/N) ^[5]	Inspector Initial/Time
		W	S	M/E	P				

Details:

--	--	--	--	--	--	--	--	--	--

Details:

--	--	--	--	--	--	--	--	--	--

Details:

--	--	--	--	--	--	--	--	--	--

Details:

--	--	--	--	--	--	--	--	--	--

Details:

--	--	--	--	--	--	--	--	--	--

Details:

Notes:

- [1] **Phase:** Initial (I); Follow-up (F)
- [2] **Inspection Type:** (W) Workmanship; (S) Safety; (M/E) Materials/Equipment; (P) Plan Compliance
- [3] **Basis:** (E) Existing DFOW or task; (N) New DFOW or task; (P) New personnel; (O) Other (specify) _____
- [4] **Variance:** Contact FTL/PL for variance approval, document resolution. Complete field form SWE-FFRM-004, "Work Variance" as directed by FTL..
- [5] **Deficiency:** Contact FTL/PL before proceeding with work, note resolution. Complete field form SWE-FFRM-102, "Corrective Action" as directed.

Approved By

Initial _____	Signature _____	Date _____
---------------	-----------------	------------

Attachment E

Laboratory Data Consultants
Automated Data Review
Electronic Data Deliverable File Specifications

ADR Electronic Data Deliverable (EDD) File Specifications

The ADR EDD consists of three separate, comma-delimited ASCII text files or Excel CSV files (two, if instrument calibration information is not required by the project). Each file corresponds to a table in the ADR application. These tables are identified as the Analytical Results Table (A1), Laboratory Instrument Table (A2), and Sample Analysis Table (A3). Each file follows the naming convention of using the Laboratory Reporting Batch ID (SDG Number or some other identifier for the EDD) followed by the table identifier (A1, A2, or A3), and then a ".txt" or ".csv" extension. For example, the EDD file names for a laboratory reporting batch identified as SDG001 that includes instrument calibration data would be as follows.

SDG001A1.txt or SDG001A1.csv
SDG001A2.txt or SDG001A2.csv (A2 file is optional)
SDG001A3.txt or SDG001A3.csv

Analytical Results Table (A1 File)

The Analytical Results table contains analytical results and related information on an analyte level for field samples and associated laboratory quality control samples (excluding calibrations and tunes). Field QC blanks and laboratory method blanks must report a result record for each analyte reported within a method. The method target analyte list is matrix dependent and specified in the project library. Laboratory control samples (LCS and LCSD) and matrix spike samples (MS and MSD) must report a result record for every analyte specified as a spiked analyte in the project library. The project library is a reference table ADR uses for both EDD error checking and automated data review. The project library is populated with information from the project QAPP. Refer to the User Manual for detailed information on project libraries. Table 1 in this document lists all field names and their descriptions for the Analytical Results Table (A1).

Laboratory Instrument Table (A2 File)

The Laboratory Instrument table contains results and related information on an analyte level for instrument initial calibration standards, initial calibration verification standards, continuing calibration standards, and GC/MS tunes. A record must exist for each target analyte reported in a method (specified in the project library), for every calibration type (the field named QCType) associated to samples reported in the EDD. Initial calibrations, initial calibration verifications, and associated samples are linked to each other using a unique Run Batch ID for every distinct initial calibration within a method. Continuing calibrations and associated samples are linked to each other using a unique Analysis Batch ID for every distinct continuing calibration within a method. GC/MS tunes are linked to initial and continuing calibrations (and hence samples) using the Run Batch and Analysis Batch IDs respectively. The Laboratory Instrument Table (A2) is optional. Depending on the level of validation required by the data user, the Laboratory Instrument table may not be requested in the deliverable. Table 2 in this document lists field names and descriptions for the Laboratory Instrument Table (A2).

Sample Analysis Table (A3 File)

The Sample Analysis table contains information on a sample level for field samples and laboratory quality control analyses (excluding calibrations and tunes). A sample record exists for each sample/method/matrix/analysis type combination. Table 3 in this document lists field names and descriptions for the Sample Analysis Table (A3).

EDD Field Properties

Tables 1, 2, and 3 in this document specify the EDD field properties for each file. These include the field name and sequence, field name description, data type and length for each field, and whether or not a particular field requires a standard field. Field elements in the EDD must be sequenced according to the order they appear in Tables 1, 2, and 3. For example, in the Analytical Result table (the A1 file), the field “ClientSampleID” will always be the first piece of information to start a new line of data (or database record), followed by the fields “LabAnalysisRefMethodID”, “AnalysisType”, and so on.

Table 4 in this document lists standard values for those fields that hold standard values. Required field constraints depend on the combination of sample, matrix, method, analyte type, and calibration or QC type information reported in a record. Tables 5 through 9 in this document indicate required fields for each EDD file (table) according to the method category, matrix, analyte type, sample, and QC or calibration type reported in a record.

When creating an EDD as a text file, use the ASCII character set in a file of lines terminated by a carriage return and line feed. No characters are allowed after the carriage return and line feed. Enclose each data set in double quotes (") and separate each field by a comma (comma delimited). Data fields with no information (null) may be represented by two consecutive commas. For example, in the Sample Analysis table, since the “Collected”, “ShippingBatchID”, and “Temperature” fields do not apply to laboratory generated QA/QC samples, the record for a Laboratory Control Sample by Method 8270C would be entered as follows. Note that the first two fields (“ProjectNumber” and “ProjectName”) are omitted in this example.

...“LCSW100598”,,”AQ”,”LCSW100598”,”LCS”,,”8270C”,... (and so on)

Do not pad fields with leading or trailing spaces if a field is populated with less than the maximum allowed number of characters. In the above example, although the “MatrixID” field can accommodate up to 10 characters, only 2 characters were entered in this field.

The EDD can be constructed within Excel and saved as .csv file for import into the application. Be sure to format all cells as text beforehand, otherwise Excel will reformat entered values in some cases.

Table 1
Field Descriptions for the Analytical Results Table (A1 file)

Contains laboratory test results and related information for field and QC samples (excluding instrument calibrations) on an analyte level for environmental chemistry including radiochemistry

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
ClientSampleID	<p>Client or contractor's identifier for a field sample as reported on the chain-of-custody</p> <p>If a sample is analyzed as a laboratory duplicate, matrix spike, or matrix spike duplicate, append suffixes DUP, MS and MSD respectively to the Client Sample ID with no intervening spaces or hyphens (i.e. MW01DUP, MW01MS, and MW01MSD). For Method Blanks, LCS, and LCSD enter the unique LaboratorySampleID into this field</p> <p>Do not append suffixes to the ClientSampleID for dilutions, reanalyses, or re-extracts (the AnalysisType field is used for this distinction). For example, MW01<u>DL</u> and MW01<u>RE</u> are not allowed</p> <p>Parent sample records must exist for each MS and MSD. If an MS/MSD is shared between two EDDs, records for the MS/MSD and its parent sample must exist in the Analytical Results table for both EDDs.</p>	Text	25	NO
LabAnalysisRefMethodID	Laboratory reference method ID. The method ID may be an EPA Method number or a Lab Identifier for a method such as a SOP Number, however; method ID is specified by the project. The method ID must be entered into the standard list.	Text	25	YES (specified in project plan)
AnalysisType	Defines the analysis type (i.e., Dilution, Reanalysis, etc.). This field provides distinction for sample result records when multiple analyses are submitted for the same sample, method, and matrix; for example dilutions, re-analyses, and re-extracts.	Text	10	YES (See Table 4)
LabSampleID	<p>Laboratory tracking number for field samples and lab generated QC samples such as method blank, LCS, and LCSD. There are no restrictions for the LabSampleID except for field length and that the LabSampleID must be distinct for a given field sample or lab QC sample and method.</p> <p>Suffixes may be applied to the LabSampleID to designate dilutions, reanalysis, etc.</p>	Text	25	NO
LabID	Identification of the laboratory performing the analyses.	Text	7	NO
ClientAnalyteID	<p>CAS Number or unique client identifier for an analyte or isotope.</p> <p>If a CAS Number is not available, use a unique identifier provided by the client or contractor. The ClientAnalyteID for a particular target analyte or isotope should be specified by the project and must exist in the standard value tables for Analytes.</p> <p>For the LCS, LCSD, MS, and MSD, it is only necessary to report the compounds designated as spikes in the library (and surrogates for organic methods.)</p> <p>For TICs from GC/MS analyses, enter the retention time in decimal minutes as the Client Analyte ID.</p>	Text	12	YES (specified by project)

Table 1

Field Descriptions for the Analytical Results Table (A1 file)

Contains laboratory test results and related information for field and QC samples (excluding instrument calibrations) on an analyte level for environmental chemistry including radiochemistry

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
AnalyteName	Chemical name for the analyte or isotope. The project specifies how an analyte or isotope is named. The analyte name must be associated to a ClientAnalyteID in the standard values table for Analytes (excluding compounds designated as TIC's).	Numeric	60	YES (specified by project)
Result	Result value for the analyte or isotope. Entries must be numeric. For non-detects of target analytes or isotopes and spikes, do not enter "ND" or leave this field blank. If an analyte or spike was not detected, enter the reporting limit value corrected for dilution and percent moisture as applicable. Do not enter "0"	Text	10	NO
ResultUnits	The units defining how the values in the Result, DetectionLimit, and ReportingLimit fields are expressed. For radiochemistry this also includes how the value in the Error field is expressed.	Text	10	YES (specified by project in the library)
LabQualifiers	A string of single letter result qualifiers assigned by the lab based on client-defined rules and values. <u>The "U" Lab Qualifier must be entered for all non-detects.</u> Other pertinent lab qualifiers may be entered with the "U" qualifier. Order is insignificant. Lab qualifiers other than those listed in the standard values table may be used. If so, these must be added to the standard value table in the application.	Text	7	YES (See Table 4)
DetectionLimit	For radiochemistry methods, the minimum detectable activity for the isotope being measured. For all other methods: The minimum detection limit value for the analyte being measured. For DoD QSM enter the Limit of Detection (LOD)	Numeric	10	NO
DetectionLimitType	Specifies the type of detection limit (i.e., MDA, MDL, IDL, etc.).	Text	10	YES (See Table 4)
RetentionTime or Error	<u>For radiochemistry methods only</u> , enter the 2 Sigma Counting Error. The units for error are entered in the ResultUnits field. <u>For GC/MS methods only</u> , enter the time expressed in decimal minutes between injection and detection for <u>GC/MS TICs only</u> <u>For target analytes in all other methods</u> , leave this field blank. Note: GC retention times are not evaluated at this time.	Text	5	NO
AnalyteType	Defines the type of result, such as tracer, surrogate, spike, or target compound.	Text	7	YES (See Table 4)

Table 1

Field Descriptions for the Analytical Results Table (A1 file)

Contains laboratory test results and related information for field and QC samples (excluding instrument calibrations) on an analyte level for environmental chemistry including radiochemistry

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
PercentRecovery	<p>For radiochemistry methods: The tracer yield, if applicable.</p> <p>For all other analytical methods: The percent recovery value of a spiked compound or surrogate.</p> <p>If the spike or surrogate was not recovered because of dilution, enter "DIL". If a spike or surrogate was not recovered because of matrix interference, enter "INT". If a spike or surrogate was not recovered because it was not added to the sample, enter "NS".</p>	Numeric	5	NO
RelativePercentDifference	<p>The relative percent difference (RPD) of two QC results, such as MS/MSD, LCS/LCSD, and Laboratory Duplicates. Report RPD in Laboratory Duplicate, LCSD, and MSD records only.</p> <p>If the RPD is not calculable, enter "NC".</p>	Numeric	5	NO
ReportingLimit	<p>Reporting limit value for the measured analyte or isotope Factor in the dilution factor and percent moisture correction, if applicable. The Reporting Limit for each analyte and matrix in a given method is specified in the project library or QAPP.</p> <p>For DoD QSM enter the Limit of Quantitation (LOQ)</p>	Numeric	10	NO
ReportingLimitType	<p>Specifies the type of reporting limit (i.e., CRQL, PQL, SQL, RDL, etc). The Reporting Limit Type for each method and matrix is specified in the project library or QAPP.</p>	Text	10	YES (specified by the project)

Table 1

Field Descriptions for the Analytical Results Table (A1 file)

Contains laboratory test results and related information for field and QC samples (excluding instrument calibrations) on an analyte level for environmental chemistry including radiochemistry

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
ReportableResult	<p>This field indicates whether or not the laboratory chooses an individual analyte or isotope result as reportable. Enter "YES" if the result is reportable. Enter "NO" if the result is not reportable. This field applies to target analytes only.</p> <p>If only one analysis is submitted for a particular sample and method, enter "YES" for all target compounds (where Analyte Type = TRG). For GC/MS methods enter yes for tentatively identified compounds (where Analyte Type = TIC).</p> <p>If two or more analyses are submitted for a particular sample and method (i.e. initial analysis, reanalysis and/or dilutions), enter "YES" from only <u>one</u> of the analyses for each target compound. For example: a sample was run a second time at dilution because benzene exceeded the calibration range in the initial, undiluted analysis. All target analytes are reported in each analysis. For the initial analysis, (Analysis Type = RES), enter "NO" for benzene and enter "YES" for all other compounds. For the diluted analysis (Analysis Type = DL), enter "YES" for benzene and enter "NO" for all other compounds.</p> <p>For TICs (Analyte Type = TIC), if more than one analysis is submitted for a particular sample and method, choose only one of the analyses where Reportable Result = YES for <u>all</u> TICs. For example, a sample was run a second time because one or more target compounds exceeded the calibration range in the undiluted analysis. Choose a particular analysis and enter "YES" for all TICs. In the other analysis enter "NO" for all TICs.</p> <p>Note that it is not necessary to report the full target analyte list for the initial result, dilution, re-analysis, or re-extraction. However, each target analyte must be reported YES once and once only in the case of multiple analyses for a given sample, method, and matrix. In the case of organics, all surrogates must be reported for all analyses submitted for a given sample, method, and, matrix.</p>	Text	3	YES (See Table 4)
MDL_DoD	<p>This field is not part of the standard ADR EDD format.</p> <p>For DoD QSM enter the MDL, otherwise leave blank. (ADR does not perform error checks on this field)</p>	Numeric	10	NO

Table 2**Field Descriptions for the Laboratory Instrument Table (A2 file)**

Contains related to laboratory instrument calibration on an analyte level and GC/MS Tune information. This table is optional depending on project requirements. Do not report Table A2 for radiochemistry methods.

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
InstrumentID	Laboratory instrument identification.	Text	15	NO
QCType	Type of instrument QC (i.e., Instrument_Performance_Check or type of calibration standard).	Text	10	YES (See Table 4)
Analyzed	Analysis date/time for BFB, DFTPP, initial calibration verification standards, calibration verification standards, and continuing calibration standards. For the <u>initial calibration</u> , enter date and time of the <u>last</u> standard analyzed. Also, see comments about initial calibrations in the Alternate_Lab_Analysis_ID field name description.	Date/Time	*	NO
AlternateLab_AnalysisID	Common laboratory identification used for standards (i.e., VOA STD50, CCAL100, BFB50, etc). For initial calibration, enter ICAL. Information from the initial calibration is entered as one record for each analyte that summarizes the results of the initial calibration (i.e. %RSD, correlation coefficient, and avg RF). Records are <u>not</u> entered for each individual standard within the initial calibration.	Text	12	NO
LabAnalysisID	Unique identification of the raw data electronic file associated with the calibration standard or tune (i.e., 9812101MS.DV). Leave this field blank for the initial calibration. See comments about initial calibrations in the Alternate_Lab_Analysis_ID field description. This field is only applicable where an electronic instrument file is created as part of the analysis.	Text	15	NO
LabAnalysisRefMethodID	Laboratory reference method ID (i.e., 8260B, 8270C, 6010B, etc.). The method ID is specified by the project. The LabAnalysisRefMethodID must be in the standard value list for Method IDs.	Text	25	YES (specified by the project)
ClientAnalyteID	CAS number or unique client identifier for an analyte. If a CAS number is not available, use a unique identifier provided by the client. The unique identifier for a particular analyte should be specified by the project and must exist in the standard value list for ClientAnalyteID. Records for each calibration must report the full target analyte list including surrogates as applicable. The target analyte list is specified for each method and matrix in the project	Text	12	YES (specified by the project)
AnalyteName	The chemical name for the analyte. The project specifies how an analyte is named. The AnalyteName must be associated to a ClientAnalyteID in the standard values.	Text	60	YES (specified by the project)

Table 2**Field Descriptions for the Laboratory Instrument Table (A2 file)**

Contains related to laboratory instrument calibration on an analyte level and GC/MS Tune information. This table is optional depending on project requirements. **Do not report Table A2 for radiochemistry methods.**

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
RunBatch	Unique identifier for a batch of analyses performed on one instrument under the control of one initial calibration and initial calibration verification. The Run Batch ID links both the initial calibration and initial calibration verification to subsequently analyzed and associated continuing calibrations, field samples, and QC analyses. For GC/MS methods, the Run_Batch ID also links a BFB or DFTPP tune and the initial calibration and initial calibration verification standards to associated samples and method QC analyses. A new and unique Run Batch ID must be used with every new initial calibration.	Text	12	NO
AnalysisBatch	Unique laboratory identifier for a batch of analyses performed on one instrument and under the control of a continuing calibration or continuing calibration verification. The Analysis Batch ID links the continuing calibration or calibration verification to subsequently analyzed and associated field sample and QC analyses. For GC/MS methods, the Analysis Batch ID also links the BFB or DFTPP tune. A new and unique Analysis Batch ID must be used with every new continuing calibration or continuing calibration verification. For GC methods, only report opening standards, do not include closing standards (unless the closing standard functions as the opening standard for a subsequent set of analyses, in which case a new and unique Analysis Batch ID is assigned). When dual or confirmation columns/detectors are used, enter results from the primary column/detector only (this is similar to CLP Pesticide reporting).	Text	12	NO
LabReportingBatch	Unique laboratory identifier for a batch of samples including associated calibrations and method QC, reported as a group by the lab (i.e., lab work order #, log-in #, or SDG). Links all instrument calibrations, samples, and method QC reported as a group or SDG.	Text	12	NO
PercentRelativeStandard Deviation	The standard deviation relative to the mean used to evaluate initial calibration linearity. Organic methods may use either %RSD or Correlation Coefficient. If applicable, enter the %RSD. Leave this field blank if the Correlation Coefficient is used.	Numeric	5	NO
CorrelationCoefficient	The correlation coefficient resulting from linear regression of the initial calibration. For metals by ICAP, enter '1.0' if a two-point initial calibration was analyzed. Organic methods may use either %RSD or Correlation Coefficient. If applicable, enter the Correlation Coefficient. Leave this field blank if the %RSD is used	Numeric	5	NO
RelativeResponseFactor	This field applies to GC/MS only. For continuing calibration enter the relative response factor. For initial calibration enter the <u>average</u> relative response factor. Refer to comments about initial calibration records in the field description for Alternate_Lab_Analysis_ID.	Numeric	5	NO

Table 2**Field Descriptions for the Laboratory Instrument Table (A2 file)**

Contains related to laboratory instrument calibration on an analyte level and GC/MS Tune information. This table is optional depending on project requirements. **Do not report Table A2 for radiochemistry methods.**

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
Percent_Difference (or Percent Recovery)	<p>For <u>organic methods</u>, this field is the difference between 2 measured values expressed as a percentage.</p> <p>If %RSD is reported, enter the % difference between the average response factor of the initial calibration (IC) and the response factor of the initial calibration verification (ICV) or continuing calibration (CCV).</p> <p>If correlation coefficient is used, enter the % difference between the true value and the measured value.</p> <p>The Percent_Difference is expressed as a negative or positive value. Do not express Percent_Difference as an absolute value. Use a negative value if the CCV or ICV response factor is less than the IC average response factor or, in the case of correlation coefficient, the CCV or ICV measured value is less than the true value. Use a positive value if the CCV or ICV response factor is greater than the IC average response factor, or in the case of correlation coefficient, the CCV or ICV measured value is greater than the true value.</p> <p>For <u>inorganic methods</u>, this field is the recovery of an analyte expressed relative to the true amount (i.e., %R for a metal in the continuing calibration or initial calibration verification by Method 6010B).</p>	Numeric	5	NO
PeakID01	Identifies individual m/z ions for GC/MS tuning compounds. For BFB enter 50, for DFTPP enter 51.	Numeric	10	NO
PercentRatio01	<p>For BFB enter the relative percent abundance of m/z 50 measured relative to the raw abundance of m/z 95.</p> <p>For DFTPP enter the relative percent abundance of m/z 51 measured relative to the raw abundance of m/z 198.</p>	Numeric	10	NO
PeakID02	Identifies individual m/z ions for GC/MS tuning compounds. For BFB enter 75, for DFTPP enter 68.	Numeric	10	NO
PercentRatio02	<p>For BFB enter the relative percent abundance of m/z 75 measured relative to the raw abundance of m/z 95.</p> <p>For DFTPP enter the relative percent abundance of m/z 68 measured relative to the raw abundance of m/z 69.</p>	Numeric	10	NO
PeakID03	Identifies individual m/z ions for GC/MS tuning compounds. For BFB enter 95, for DFTPP enter 69.	Numeric	10	NO
PercentRatio03	<p>For BFB enter the ion abundance of m/z 95 as 100 percent.</p> <p>For DFTPP enter the relative percent abundance of m/z 69 measured relative to the raw abundance of m/z 198.</p>	Numeric	10	NO
PeakID04	Identifies individual m/z ions for GC/MS tuning compounds. For BFB enter 96, for DFTPP enter 70.	Numeric	10	NO

Table 2**Field Descriptions for the Laboratory Instrument Table (A2 file)**

Contains related to laboratory instrument calibration on an analyte level and GC/MS Tune information. This table is optional depending on project requirements. **Do not report Table A2 for radiochemistry methods.**

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
PercentRatio04	For BFB enter the relative percent abundance of m/z 96 measured relative to the raw abundance of m/z 95. For DFTPP enter the relative percent abundance of m/z 70 measured relative to the raw abundance of m/z 69	Numeric	10	NO
PeakID05	Identifies individual m/z ions for GC/MS tuning compounds. For BFB enter 173, for DFTPP enter 127.	Numeric	10	NO
PercentRatio05	For BFB enter the relative percent abundance of m/z 173 measured relative to the raw abundance of m/z 174. For DFTPP enter the relative percent abundance of m/z 127 measured relative to the raw abundance of m/z 198	Numeric	10	NO
PeakID06	Identifies individual m/z ions for GC/MS tuning compounds. For BFB enter 174, for DFTPP enter 197.	Numeric	10	NO
PercentRatio06	For BFB enter the relative percent abundance of m/z 174 measured relative to the raw abundance of m/z 95. For DFTPP enter the relative percent abundance of m/z 197 measured relative to the raw abundance of m/z 198.	Numeric	10	NO
PeakID07	Identifies individual m/z ions for GC/MS tuning compounds. For BFB enter 175, for DFTPP enter 198.	Numeric	10	NO
PercentRatio07	For BFB enter the relative percent abundance of m/z 175 measured relative to the raw abundance of m/z 174. For DFTPP enter the ion abundance of m/z 198 as 100 percent.	Numeric	10	NO
PeakID08	Identifies individual m/z ions for GC/MS tuning compounds. For BFB enter 176, for DFTPP enter 199.	Numeric	10	NO
PercentRatio08	For BFB enter the relative percent abundance of m/z 176 measured relative to the raw abundance of m/z 174. For DFTPP enter the relative percent abundance of m/z 199 measured relative to the raw abundance of m/z 198.	Numeric	10	NO
PeakID09	Identifies individual m/z ions for GC/MS tuning compounds. For BFB enter 177, for DFTPP enter 275.	Numeric	10	NO
PercentRatio09	For BFB enter the relative percent abundance of m/z 177 measured relative to the raw abundance of m/z 176. For DFTPP enter the relative percent abundance of m/z 275 measured relative to the raw abundance of m/z 198.	Numeric	10	NO
PeakID10	Identifies individual m/z ions for GC/MS tuning compounds. For BFB leave blank, for DFTPP enter 365.	Numeric	10	NO

Table 2

Field Descriptions for the Laboratory Instrument Table (A2 file)

Contains related to laboratory instrument calibration on an analyte level and GC/MS Tune information. This table is optional depending on project requirements. **Do not report Table A2 for radiochemistry methods.**

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
PercentRatio10	For BFB leave blank. For DFTPP enter the relative percent abundance of m/z 365 measured relative to the raw abundance of m/z 198.	Numeric	10	NO
PeakID11	Identifies individual m/z ions for GC/MS tuning compounds. For BFB leave blank, for DFTPP enter 441.	Numeric	10	NO
PercentRatio11	For BFB leave blank. For DFTPP the percent abundance of m/z 441 measured relative to the raw abundance of m/z 443	Numeric	10	NO
PeakID12	Identifies individual m/z ions for GC/MS tuning compounds. For BFB leave blank, for DFTPP enter 442.	Numeric	10	NO
PercentRatio12	For BFB leave blank. For DFTPP enter the relative percent abundance of m/z 442 measured relative to the raw abundance of m/z 198.	Numeric	10	NO
PeakID13	Identifies individual m/z ions for GC/MS tuning compounds. For BFB leave blank, for DFTPP enter 443.	Numeric	10	NO
PercentRatio13	For BFB leave blank. For DFTPP enter the relative percent abundance of m/z 443 measured relative to the raw abundance of m/z 442.	Numeric	10	NO

* Date/time format is: MM/DD/YYYY hh:mm where MM = month, DD = day, YYYY = four digits of the year, hh = hour in 24 hour format, and mm = minutes.

Table 3
Field Description for the Sample Analysis (A3 file)

This table contains information related to analyses of field samples and laboratory QC samples (excluding calibrations and tunes) on a sample level for environmental chemical analyses including radiochemistry

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
ProjectNumber	Project number assigned by the client.	Text	30	YES (specified by project)
ProjectName	Project name assigned by the client.	Text	90	YES (specified by project)
ClientSampleID	<p>Client or contractor's identifier for a field sample</p> <p>If a sample is analyzed as a laboratory duplicate, matrix spike, or matrix spike duplicate, append suffixes DUP, MS and MSD respectively to the Client Sample ID with no intervening spaces or hyphens (i.e. MW01DUP, MW01MS, and MW01MSD). For Method Blanks, LCS, and LCSD enter the unique LaboratorySampleID into this field</p> <p>Do not append suffixes to the ClientSampleID for dilutions, reanalyses, or re-extracts (the Analysis_Type field is used for this distinction). For example, MW01DL and MW01RE are not allowed</p> <p>Parent sample records must exist for each MS and MSD. If an MS/MSD is shared between two EDDs, records for the MS/MSD and its parent sample must exist in the Sample Analysis table for both EDDs.</p>	Text	25	NO
Collected	<p><u>For radiochemistry methods</u> the Date of sample collection. Refer to the date format for radiochemistry methods at the end of this table.</p> <p><u>For all other methods</u> the Date and Time of sample collection. Refer to the date/time format at the end of this table.</p> <p>Leave this field blank for Method Blank, LCS, and LCSD</p>	Date/Time	16*	NO
MatrixID	Sample matrix (i.e., AQ, SO, etc.)	Text	10	YES (See Table 4)
LabSampleID	<p>Laboratory tracking number for field samples and lab generated QC samples such as method blank, LCS, and LCSD.</p> <p>There are no restrictions for the LabSampleID except field length and that the LabSampleID must be unique for a given field sample or lab QC sample and method.</p>	Text	25	NO
QCType	This record identifies the type of quality control sample QC (i.e., Duplicate, LCS, Method Blank, MS, or MSD). <u>For regular samples, leave this field blank.</u>	Text	10	YES (See Table 4)
ShippingBatchID	Unique identifier assigned to a cooler or shipping container used to transport client or field samples. Links all samples to a cooler or shipping container. No entry for method blanks, LCS, and LCSD. This field is optional.	Text	25	NO
Temperature	<p>Temperature (in centigrade degrees) of the sample as received.</p> <p><u>This field is not required for radiochemistry methods.</u></p>	Numeric	10	NO

Table 3
Field Description for the Sample Analysis (A3 file)

This table contains information related to analyses of field samples and laboratory QC samples (excluding calibrations and tunes) on a sample level for environmental chemical analyses including radiochemistry

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
LabAnalysisRefMethodID	Laboratory reference method ID. The method ID may be an EPA Method number or laboratory identifier for a method such as a SOP number, however; values used for Laboratory Method IDs are specified by the project and must be contained in the standard value list for method IDs.	Text	25	YES (Specified by the project)
PreparationType	Preparation Method Number (i.e., 3010A, 3510C, 3550C, 5030B, etc.) For analytical procedures that do not have a specific preparation method number, use "Gen Prep".	Text	25	YES (See Table 4)
AnalysisType	Defines the type of analysis such as initial analysis, dilution, re-analysis, etc. This field provides distinction for sample records when multiple analyses are submitted for the same sample, method, and matrix, for example: dilutions, re-analyses, and re-extracts.	Text	10	YES (See Table 4)
Prepared	<u>For radiochemistry leave this field blank.</u> For all other methods enter the date and time of sample preparation or extraction. Refer to the date/time format at the end of this table.	Date/Time	16*	NO
Analyzed	<u>For radiochemistry methods</u> the date of sample analysis. Refer to the date format for radiochemistry methods at the end of this table. <u>For all other methods</u> the date and time of sample analysis. Refer to the date and time format at the end of this table.	Date/Time	*	NO
LabID	Identification of the laboratory performing the analysis.	Text	7	NO
QCLevel	The level of laboratory QC associated with the analysis reported in the EDD. If only the Analytical Results Table (A1) and the Sample Analysis Table (A3) information are submitted for the sample, enter "COA". If the Laboratory Instrument Table (A2) information is also submitted for the sample, enter "COCAL"	Text	6	YES (See Table 4)
ResultBasis	Indicates whether results associated with this sample record are reported as wet or percent moisture corrected. This field is only required for soils and sediments. Enter "WET" if results are not corrected for percent moisture. Enter "DRY" if percent moisture correction is applied to results.	Text	3	YES (See Table 4)
TotalOrDissolved	This field indicates if the results related to this sample record are reported as a total or dissolved fraction. This field is only required for metal methods. For all other methods leave this field blank.	Text	3	YES (See Table 4)
Dilution	Dilution of the sample aliquot. Enter "1" for method blanks, LCS, and LCSD, or if the field samples was analyzed without dilution.	Numeric	10	NO
HandlingType	Indicates the type of leaching procedure, if applicable (i.e., SPLP, TCLP, WET). Leave this field blank if the sample analysis was <u>not</u> performed on a leachate.	Text	10	YES (See Table 4)

Table 3
Field Description for the Sample Analysis (A3 file)

This table contains information related to analyses of field samples and laboratory QC samples (excluding calibrations and tunes) on a sample level for environmental chemical analyses including radiochemistry

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
HandlingBatch	<p>Unique laboratory identifier for a batch of samples prepared together in a leaching procedure (i.e., SPLP, TCLP, or WET preparation). The HandlingBatch links samples with leaching blanks.</p> <p>Leave this field blank if the sample analysis was <u>not</u> performed on a leachate</p>	Text	12	NO
LeachateDate	<p>Date and time of leaching procedure (i.e., date for SPLP, TCLP, or WET preparation). Refer to the date and time format at the end of this table.</p> <p>Leave this field blank if the sample analysis was <u>not</u> performed on a leachate</p>	Date /Time	16*	NO
Percent_Moisture	Percent of sample composed of water. Enter for soil and sediment samples only.	Numeric	10	NO
MethodBatch	<p>Unique laboratory identifier for a batch of samples of similar matrices analyzed by one method and treated as a group for matrix spike, matrix spike duplicate, or laboratory duplicate association</p> <p>The method batch links the matrix spike and/or matrix spike duplicate or laboratory duplicates to associated samples. Note, the MethodBatch association may coincide with the PreparationBatch association. The MethodBatch is specifically used to link the MS/MSD and/or DUP to associated samples.</p>	Text	12	NO
PreparationBatch	<p>Unique laboratory identifier for a batch of samples prepared together for analysis by one method and treated as a group for method blank, LCS and LCSD association.</p> <p>The PreparationBatch links method blanks and laboratory control samples (blank spikes) to associated samples. Note, the PreparationBatch association may coincide with the MethodBatch association but the PreparationBatch specifically links the Method Blank and LCS to associated samples.</p>	Text	12	NO
RunBatch	<p><u>For radiochemistry methods leave this field blank.</u></p> <p><u>For all other methods</u> the RunBatch is the unique identifier for a batch of analyses performed on one instrument under the control of one initial calibration and initial calibration verification. The RunBatch links both the initial calibration and initial calibration verification to subsequently analyzed and associated continuing calibrations, field samples, and QC analyses. For GC/MS methods, the RunBatch also links a BFB or DFTPP tune. A distinct RunBatch must used with every new initial calibration within a method</p> <p>The value entered in this field links a particular sample/method/analysis type record to a set of associated initial calibration and initial calibration verification records from Table A2.</p> <p>This field is only required if the A2 table is included with the EDD.</p>	Text	12	NO

Table 3

Field Description for the Sample Analysis (A3 file)

This table contains information related to analyses of field samples and laboratory QC samples (excluding calibrations and tunes) on a sample level for environmental chemical analyses including radiochemistry

Field Name	Field Name Description	Field Type	Field Length	Standard Value List
AnalysisBatch	<p>For radiochemistry methods leave this field blank.</p> <p>For all other methods the AnalysisBatch is the unique identifier for a batch of analyses performed on one instrument and under the control of a continuing calibration or continuing calibration verification. The AnalysisBatch links the continuing calibration or calibration verification to subsequently analyzed and associated field sample and QC analyses. For GC/MS methods, the AnalysisBatch also links the BFB or DFTPP tune. A distinct AnalysisBatch must be used with every new continuing calibration or continuing calibration verification within a method</p> <p>The value entered in this field links a particular sample/method/analysis type record to a set of associated continuing calibration records in the Laboratory Instrument table.</p> <p>This field is only required if the A2 table is included with the EDD.</p>	Text	12	NO
LabReportingBatch	Unique laboratory identifier for the EDD. This is equivalent to the sample delivery group, lab work number, login ID, etc. The LabReportingBatch links all records in the EDD reported as one group. The value entered in this field must be the same in all records.	Text	12	NO
LabReceipt	Date and time the sample was received in the lab. A time value of 00:00 may be entered. Refer to the date/time format at the end of this table.	Date/Time	16*	
LabReported	Date and time hard copy reported delivered by the lab. A time value of 00:00 may be entered. Refer to the date/time format at the end of this table.	Date/Time	16*	

* For radiochemistry methods format Date as MM/DD/YYYY (where MM = two digit month, DD = two digit day, and YYYY = four digit year)

For all other methods format Date and Time as MM/DD/YYYY hh:mm YYYY (where MM = two digit month, DD = two digit day, and YYYY = four digit year, hh = hour in 24 hour format, and mm = minutes)

Table 4
Standard Value List

Field Name	Standard Value	Standard Value Description
Analysis_Type	DL	Dilution of the original sample
	DL2	Second dilution of the original sample
	DL3	Third dilution of the original sample
	DL4	Fourth dilution of the original sample
	RE	Reanalysis/re-extraction of sample
	RE2	Second reanalysis/re-extraction of sample
	RE3	Third reanalysis/re-extraction of sample
	RE4	Fourth reanalysis/re-extraction of the original sample
	RES	The initial or original sample.
Analyte_Name	Refer to QAPP and Project Library	Analyte names are specified by the project and entered into the library for each method and matrix. Analyte Names used in project libraries must first exist in the standard value table. The same holds true for the ClientAnalyteID
Analyte_Type	IS	Internal standard as defined per CLP usage
	SPK	Spiked analyte
	SURR	Surrogate as defined as per CLP usage
	TIC	Tentatively identified compound for GC/MS analysis
	TRG	Target compound
Detection_Limit_Type ¹	CRDL	Contract required detection limit
	IDL	Instrument detection limit
	MDA	Minimum detectable activity
	MDL	Method detection limit
Handling_Type ²	WET	Wet leaching procedure
	SPLP	Synthetic Precipitation Leaching Procedure
	TCLP	Toxicity Characteristic Leaching Procedure
Lab_Analysis_Ref_Method_ID	Refer to QAPP and Project Library	Method IDs are specified by the project and entered into the library. Methods used in project libraries must first exist in the standard value table
Lab_Qualifiers ³	*	INORG: Duplicate analysis was not within control limits
	*	ORG: Surrogate values outside of contract required QC limits
	+	INORG: Correlation coefficient for the method of standard additions (MSA) was less than 0.995
	A	ORG: Tentatively identified compound (TIC) was a suspected aldol-condensation product
	B	INORG: Value less than contract required detection limit but greater than or equal to instrument detection limit
	B	ORG: Compound is found in the associated blank as well as in the sample
	C	ORG: Analyte presence confirmed by GC/MS
	D	Result from an analysis at a secondary dilution factor
	E	INORG: Reported value was estimated because of the presence of interference
	E	ORG: Concentrations exceed the calibration range of the instrument
	H	Analysis performed outside method or client-specified holding time requirement
	J	Estimated value
	M	INORG: Duplicate injection precision was not met
	N	INORG: Spiked sample recovery was not within control limits
	N	ORG: Presumptive evidence of a compound
	P	ORG: Difference between results from two GC columns unacceptable (>25% Difference)
	S	Reported value was determined by the method of standard additions (MSA)
	U	Compound was analyzed for but not detected. Analyte result was below the Reporting Limit.
	W	INORG: Post digestion spike was out of control limits
X	Reserved for a lab-defined data qualifier	
Y	Reserved for a lab-defined data qualifier	
Z	Reserved for a lab-defined data qualifier	
Matrix_ID	AIR	Air
	AQ	Water
	ASH	Ash

Table 4
Standard Value List

Field Name	Standard Value	Standard Value Description
Matrix_ID (continued)	BIOTA	Biological matter
	FILTER	Filter
	LIQUID	Non-aqueous liquid
	OIL	Oil
	SED	Sediment
	SLUDGE	Sludge
	SO	Soil
	SOLID	Non-soil/sediment solid
	TISSUE	Tissue
	WASTE	Waste
	WIPE	Wipe
Preparation_Type ⁴	3005A	Acid Digestion of Waters for Total Recoverable or Dissolved Metals by FLAA or ICP
	3010A	Acid of Aqueous Samples and Extracts for Total Metals by FLAA or ICP
	3015	Microwave Assisted Acid Digestion of Aqueous Samples and Extracts
	3020A	Acid Digestion of Aqueous Samples and Extracts for Total Metals by GFAA
	3031	Acid Digestion of Oils for Metals Analysis by AA or ICP
	3050B	Acid Digestion of Sediments, Sludges, and Soils
	3051	Microwave Assisted Acid Digestion of Sediments, Sludges, Soils and Oils
	3052	Microwave Assisted Acid Digestion of Siliceous and Organically Based Matrices
	3060A	Alkaline Digestion for Hexavalent Chromium
	3510C	Separatory Funnel Liquid-Liquid Extraction
	3520C	Continuous Liquid-Liquid Extraction
	3535	Solid Phase Extraction
	3540C	Soxhlet Extraction
	3541	Automated Soxhlet Extraction
	3545	Pressurized Fluid Extraction
	3550B	Ultrasonic Extraction
	3560	Supercritical Fluid Extraction of Total Recoverable Petroleum Hydrocarbons
	5030B	Purge and Trap for Aqueous Samples
	5035	Closed-System Purge-and-Trap and Extraction for Volatile Organics in Soil and Waste Samples
	7470A	Acid digestion of waters for Mercury analysis
	7471A	Acid digestion of soils and solids for Mercury analysis
	Gen Prep	Generic preparation type when a preparation method ID does not exist (used mostly for general chemistry methods)
QC_Level	COA	Certificate of Analysis (accuracy and precision, no calibration)
	COACAL	Certificate of Analysis (accuracy and precision including calibration)
QC_Type	MB	Analytical control consisting of all reagents and standards that is carried through the entire procedure (Method Blank)
	CV	(Calibration Verification) Analytical standard run at a specified frequency to verify the calibration of the analytical system
	CCV	(Continuing Calibration Verification) Analytical standard run every 12 hours to verify the calibration of the GC/MS system
	DUP	A second aliquot of a sample that is treated the same as the original aliquot to determine the precision of the method
	IC	(Initial Calibration) Analysis of analytical standards for a series of different specified concentrations
	ICV	(Initial Calibration Verification) Analytical standard run at a specified frequency to verify the accuracy of the initial calibration of the analytical system
	IPC	(Instrument Performance Check) Analysis of DFTPP or BFB to evaluate the performance of the GC/MS system
	LCS	(Laboratory Control Sample) A control sample of known composition
	LCSD	(Laboratory Control Sample Duplicate) A duplicate control sample of known composition
	MS	(Matrix Spike) Aliquot of a matrix spiked with known quantities and subjected to the entire analytical procedure to measure recovery
	MSD	(Matrix Spike Duplicate) A second aliquot of the same matrix as the matrix spike that is spiked in order to determine the precision of the method
Reporting_Limit_Type ¹	CRDL	Contract required detection limit
	CRQL	Contract required quantitation limit

Table 4
Standard Value List

Field Name	Standard Value	Standard Value Description
Reporting_Limit_Type (continued)	PQL	Practical quantitation limit
	SQL	Sample quantitation limit
	RDL	Reportable detection limit
Result_Basis	DRY	Result was calculated on a dry weight basis
	WET	Result was calculated on a wet weight basis
Result_Units ⁵	ug/L	Micrograms per liter
	mg/L	Milligrams per liter
	ug/Kg	Micrograms per kilogram
	mg/Kg	Milligrams per kilogram
	pg/L	Picograms per liter
	ng/Kg	Nanograms per kilogram
Total_Or_Dissolved	DIS	Dissolved
	TOT	Total

- 1 Additional Detection Limit Types and Reporting Limit Types may be used. These must be added to the application standard values.
- 2 Additional Handling Types (leachate procedures) may be used. These must be added to the application standard values
- 3 Additional Lab Qualifiers may be used, or listed Lab Qualifiers may be used in a different manner than described in this table. New lab qualifiers must be added to the application standard value tables. NOTE: The “U” Lab Qualifier must be used for all non-detects.
- 4 Additional Preparation Types may be used. These must be added to the application standard value tables.
- 5 Additional Result Units may be used. The project library specifies the reporting limit used for each method and matrix

Note: If new standard values are used then these standard values must be entered in the software standard values for both the lab and contractor. The application will automatically update the standard values tables if an importing library contains standard values (method, client analyte ID, and analyte name) that do not exist in the software importing the new library.

Table 5

Required Fields in the Analytical Results Table for GC/MS, GC, and HPLC Methods

Field	GC/MS Methods			GC and HPLC Methods		
	Regular Sample*	MS/MSD	Method Blank, LCS/LCSD	Regular Sample*	MS/MSD	Method Blank, LCS/LCSD
Client_Sample_ID	X	X	X	X	X	X
Lab_Analysis_Ref_Method_ID	X	X	X	X	X	X
Analysis_Type	X	X	X	X	X	X
Lab_Sample_ID	X	X	X	X	X	X
Lab_ID	X	X	X	X	X	X
Client_Analyte_ID	X	X	X	X	X	X
Analyte_Name	X	X	X	X	X	X
Result	X	X	X	X	X	X
Result_Units	X	X	X	X	X	X
Lab_Qualifiers	Q	Q	Q	Q	Q	Q
Detection Limit	X	X	X	X	X	X
Detection_Limit_Type	X	X	X	X	X	X
Retention_Time	T		T			
Analyte_Type	X	X	X	X	X	X
Percent_Recovery	S	R	R	S	R	R
Relative_Percent_Difference		D	D		D	D
Reporting_Limit	X	X	X	X	X	X
Reporting_Limit_Type	X	X	X	X	X	X
Reportable_Result	X	X	X	X	X	X

Key

- X Required Field
- D Required field for spiked compounds in the LCSD and MSD only
- Q Required field if laboratory has qualified result. The "U" qualifier MUST be entered if the result is non-detect.
- R Required field if Analyte_Type = "SPK" or "SURR"
- S Required field for surrogate compounds only
- T Required field for tentatively identified compounds by GC/MS only
- * Also includes Equipment Blanks, Field Blanks, and Trip Blanks

Table 6
Required Fields in the Analytical Results Table for ICAP, AA, and IC Methods

Field	ICAP and AA Methods			IC and Wet Chemistry Methods		
	Regular Sample*	Sample Duplicate, MS/MSD	Method Blank, LCS/LCSD	Regular Sample*	Sample Duplicate MS/MSD	Method Blank, LCS/LCSD
Client_Sample_ID	X	X	X	X	X	X
Lab_Analysis_Ref_Method_ID	X	X	X	X	X	X
Analysis_Type	X	X	X	X	X	X
Lab_Sample_ID	X	X	X	X	X	X
Lab_ID	X	X	X	X	X	X
Client_Analyte_ID	X	X	X	X	X	X
Analyte_Name	X	X	X	X	X	X
Result	X	X	X	X	X	X
Result_Units	X	X	X	X	X	X
Lab_Qualifiers	Q	Q	Q	Q	Q	Q
Detection Limit	X	X	X	X	X	X
Detection_Limit_Type	X	X	X	X	X	X
Retention_Time						
Analyte_Type	X	X	X	X	X	X
Percent_Recovery		S	S		S	S
Relative_Percent_Difference		R	R		R	R
Reporting_Limit	X	X	X	X	X	X
Reporting_Limit_Type	X	X	X	X	X	X
Reportable_Result	X	X	X	X	X	X

Key

- X Required field
- Q Required field if laboratory has qualified result. The “U” qualifier MUST be entered if the result is non-detect
- R Required field for spiked compounds in LCSD or MSD, or target compounds in the Sample Duplicate only
- S Required field if Analyte_Type = “SPK”
- * Also includes Trip Blanks, Equipment Blanks, and Field Blanks

Table 7
Required Fields in the Laboratory Instrument Table

Field	GC/MS Tunes		Initial Calibration				Initial Calibration Verification				Calibration Verification, Continuing Calibration
	VOA	SVOA	GC/MS	GC HPLC	ICP/AA	IC*	GC/MS	GC HPLC	ICP/AA	IC*	ALL METHODS
Instrument_ID	X	X	X	X	X	X	X	X	X	X	X
QC_Type	X	X	X	X	X	X	X	X	X	X	X
Analyzed	X	X	X	X	X	X	X	X	X	X	X
Alternate_Lab_Analysis_ID	X	X	X	X	X	X	X	X	X	X	X
Lab_Analysis_ID	X	X					X	X	X	X	X
Lab_Analysis_Ref_Method_ID	X	X	X	X	X	X	X	X	X	X	X
Client_Analyte_ID	X	X	X	X	X	X	X	X	X	X	X
Analyte_Name	X	X	X	X	X	X	X	X	X	X	X
Run_Batch	X	X	X	X	X	X	X	X	X	X	X
Analysis_Batch	C	C									X
Lab_Reporting_Batch	X	X	X	X	X	X	X	X	X	X	X
Percent_Relative_Standard_Deviation			X	X							
Correlation_Coefficient			B	B	X	X					
Relative_Response_Factor			X				X				M
Percent_Difference							X	X	X	X	X
Peak_ID_01	X	X									
Percent_Ratio_01	X	X									
Peak_ID_02	X	X									
Percent_Ratio_02	X	X									
Peak_ID_03	X	X									
Percent_Ratio_03	X	X									
Peak_ID_04	X	X									
Percent_Ratio_04	X	X									
Peak_ID_05	X	X									
Percent_Ratio_05	X	X									
Peak_ID_06	X	X									
Percent_Ratio_06	X	X									
Peak_ID_07	X	X									
Percent_Ratio_07	X	X									
Peak_ID_08	X	X									
Percent_Ratio_08	X	X									
Peak_ID_09	X	X									
Percent_Ratio_09	X	X									
Peak_ID_10		X									
Percent_Ratio_10		X									
Peak_ID_11		X									
Percent_Ratio_11		X									
Peak_ID_12		X									
Percent_Ratio_12		X									
Peak_ID_13		X									
Percent_Ratio_13		X									

Key

- X Required field (some fields are not applicable to some General (Wet) Chemistry tests)
- B Required field if reporting best fit
- C Required field if BFB or DFTPP associated with a continuing calibration only
- M Required field for GC/MS continuing calibration only

*IC Includes Ion Chromatography and Classical or Wet Chemistry methods. Methods such as pH, Conductivity, and others do not use traditional calibration procedures; therefore some fields marked as a required field under the "IC" column do not apply for these methods.

Table 8
Required Fields in the Sample Analysis Table

Field	GC, GC/MS, HPLC Methods		ICAP and AA Methods		IC and Wet Chemistry Methods	
	Method Blanks, LCS/LCSD	Regular Samples*, Sample Duplicate, MS/MSD	Method Blanks, LCS/LCSD	Regular Samples*, Sample Duplicate, MS/MSD	Method Blanks, LCS/LCSD	Regular Samples*, Sample Duplicate, MS/MSD
Client_Sample_ID	X	X	X	X	X	X
Collected		X		X		X
Matrix_ID	X	X	X	X	X	X
Lab_Sample_ID	X	X	X	X	X	X
QC_Type	X	Q	X	Q	X	X
Shipping_Batch_ID		X		X		X
Temperature		X				X
Lab_Analysis_Ref_Method_ID	X	X	X	X	X	X
Preparation_Type	X	X	X	X	X	X
Analysis_Type	X	X	X	X	X	X
Prepared	A	A	X	X	N	N
Analyzed	X	X	X	X	X	X
Lab_ID	X	X	X	X	X	X
QC_Level	X	X	X	X	X	X
Results_Basis		S		S		S
Total_Or_Dissolved			W	W		
Dilution	X	X	X	X	X	X
Handling_Type	L	L	L	L	L	L
Handling_Batch	L	L	L	L	L	L
Leachate_Date	L	L	L	L	L	L
Percent Moisture		S		S		S
Method_Batch	X	X	X	X	X	X
Preparation_Batch	X	X	X	X	X	X
Run_Batch	C	C	C	C	C	C
Analysis_Batch	C	C	C	C	C	C
Lab_Reporting_Batch	X	X	X	X	X	X
Lab_Receipt		X		X		X
Lab_Reported	X	X	X	X	X	X

Key

- X Required field
- A Required field for samples prepared by methanol extraction
- C Required field if Instrument Calibration Table (A2) is included in EDD
- L Required field if analysis performed on SPLP, TCLP, or WET extracts
- N Required field only for samples that require preparation before analysis
- Q Required field for Sample Duplicate, MS, and MSD only
- S Required field if "Matrix_ID" = "SO" or "SED"
- W Required field for aqueous samples only
- * Includes Trip Blanks, Equipment Blanks, and Field Blanks

Reviewed EDD Export File Specifications - Analytical Results (A1) Comma Delimited Text File

Order	Field Name*	Field Description
1	RecordID	Record number.
2	ClientSampleID	Client field sample identifier.
3	LabAnalysisRefMethodID	Laboratory reference method (i.e. 8260B, 6010B, etc.).
4	AnalysisType	Defines type of analysis (i.e. dilution, reanalysis, etc.).
5	LabSampleID	Internal laboratory sample tracking number for samples and lab generated QC.
6	LabID	Identifier of laboratory performing the analysis.
7	ClientAnalyteID	CAS number or unique analyte identifier.
8	AnalyteName	Chemical name for analyte.
9	Result	Reportable result for the analyte.
10	ResultUnits	Units of measure for the result (i.e. mg/Kg, ug/L, etc.).
11	LabQualifiers	A string of letter or symbol qualifiers assigned by the lab based on contractor defined rules and values.
12	DetectionLimit	Detection limit for the analyte being measured.
13	DetectionLimitType	Specifies the type of detection limit (i.e. MDL, IDL, etc.).
14	RetentionTime	The time expressed in decimal minutes between injection and detection for GC/MS TICs only.
15	AnalyteType	Defines the type of result such as surrogate, spike, or target analyte.
16	PercentRecovery	The percent recovery of a spiked QC compound such as a matrix spike, LCS spike, or surrogate.
17	RelativePercentDifference	RPD between to QC results such as MS/MSD.
18	ReportingLimit	Analyte reporting limit.
19	ReportingLimitType	Defines the type of reporting limit (PQL, CRQL, etc.).
20	ReportableResult	(YES or NO) Indicates which result is the useable result when results from two or more analyses for the same sample and method (ie dilutions, reanalyses, etc) are reported in the EDD.
21	Filename	File name of the EDD. The same as the LabReportingBatch in the Sample Analysis table (A3).
22	DVModifiedConcentration	ADR modified analyte result due to blank contamination.
23	DVQualTemperature	Data review qualifier for temperature outlier.
24	DVQualPreservation	Data review qualifier for preservation anomaly.
25	DVQualHTSamplingToAnalysis	Data review qualifier for holding time violation from sampling time to analysis time.
26	DVQualHTSamplingToExtraction	Data review qualifier for holding time violation from sampling time to extraction.
27	DVQualHTExtractionToAnalysis	Data review qualifier for holding time violation from extraction time to analysis time.
28	DVQualHoldingTime	Overall data review qualifier for holding time violation.
29	DVQualMethodBlanks	Data review qualifier for contamination in an associated method blank.
30	DVQualSurrogateRecovery	Data review qualifier for surrogate recovery outlier.
31	DVQualMS	Overall data review qualifier for associated MS and MSD recovery and/or RPD outlier.
32	DVQualMSRecovery	Data review qualifier for MS and/or MSD recovery outlier.
33	DVQualMSRPD	Data review qualifier for MS/MSD RPD outlier.
34	DVQualLCS	Overall data review qualifier for LCS and LCS recovery and/or RPD outlier.
35	DVQualLCSRecovery	Data review qualifier for associated LCS and/or LCSD recovery outlier.
36	DVQualLCSRPD	Data review qualifier for LCS/LCSD RPD outlier.
37	DVQualRepLimits	Data review qualifier for result reported below the reporting limit.
38	DVQualReportingLimits	Data review comment ("OutX") when reporting limit exceeds the project reporting limit.
39	DVQualFieldQC	Overall data review qualifier for Field QC.
40	DVQualFieldBlank	Data review qualifier for contamination in an associated Field Blank.
41	DVQualEquipmentBlank	Data review qualifier for contamination in an associated Equipment Rinsate or Equipment Blank.
42	DVQualTripBlank	Data review qualifier for contamination in an associated Trip Blank.
43	DVQualFieldDuplicate	Data review qualifier for an associated Field Duplicate RPD outlier.
44	DVQualIC	Overall data review qualifier for associated initial calibration outliers.
45	DVQualInitialCalibrationRRF	Data review qualifier for an associated initial calibration relative response

Order	Field Name*	Field Description
		factor outlier.
46	DVQualInitialCalibrationRSD	Data review qualifier for an associated initial calibration relative percent difference outlier.
47	DVQualInitialCalibrationCC	Data review qualifier for an associated initial calibration correlation coefficient outlier.
48	DVQualICV	Overall data review qualifier for an associated initial calibration verification.
49	DVQualInitialCalibration VerificationRRF	Data review qualifier for an associated initial calibration verification relative response factor outlier.
50	DVQualInitialCalibration VerificationPD	Data review qualifier for an associated initial calibration verification percent difference outlier.
51	DVQualCCV	Overall data review qualifier for associated continuing calibration outliers.
52	DVQualContinuingCalibration VerificationRRF	Data review qualifier for an associated continuing calibration relative response factor outlier.
53	DVQualContinuingCalibration VerificationPD	Data review qualifier for an associated continuing calibration percent difference outlier.
54	DVQualOverall	Overall data review qualifier for all QC and calibration qualifiers.
55	TagLabSampleID (see comment)	Temporary placeholder.
56	TagDetQual01 (see comment)	Temporary placeholder.
57	TagNonDetQual01 (see comment)	Temporary placeholder.
58	TagDetQual02 (see comment)	Temporary placeholder.
59	TagNonDetQual02 (see comment)	Temporary placeholder.
60	surDVQualDet (see comment)	Temporary placeholder.
61	surDVQualNonDet (see comment)	Temporary placeholder.
62	DVQualInstrumentPerformance CheckRunBatch	Data review qualifier for GC/MS Tune outlier related to initial calibration.
63	DVQualInstrumentPerformance CheckAnaBatch	Data review qualifier for GC/MS Tune outlier related to continuing calibration.
64	DVQualIPC	Overall data review qualifier for GC/MS tune outliers.
65	DVQualLabDup	Data review qualifier for RPD outlier in laboratory duplicate.
66	DVQualCode	User-defined Reason Code
67	FieldDupRPD	RPD calculated from Field duplicate and parent sample
68	DVQualMergedQualifier	Merged lab and data review qualifiers
69	DVQualMergedResult	Final result (modified concentration if applicable)
70	DVQualPercMoi¹	Data review qualifier for percent moisture
71	DVQualLabDupNR¹	Data review qualifier for laboratory duplicate not reported
72	DVQualLcsNR¹	Data review qualifier for laboratory control sample(s) not reported
73	DVQualDissTotDiff¹	Data review qualifier for dissolved and total fraction differing by more than 10%
74	Error	Radiochemistry error
75	DVQualSampleDupCount¹	Data review qualifier for sample count being >20 in a duplicate batch
76	DVQualMsSampleCount¹	Data review qualifier for sample count being >20 in a matrix spike batch
77	DVQualLcsCount¹	Data review qualifier for sample count being >20 in a laboratory control sample batch
78	DVQualMbMissing¹	Data review for missing method blank
79	DVQualPercMoiDissTotDiff¹	Combined data review qualifier for percent moisture and total vs dissolved difference outliers
80	DVQualInternalStandard²	Data review qualifier for internal standard outlier
81	DVQualCalibrationBlank²	Data review qualifier for calibration blank contamination
82	DVQualRcm²	Data review qualifier for resolution check mixture problem
83	DVQualPem²	Data review qualifier for performance evaluation mixture problem
84	DVQualProfessionalJudgement²	Data review qualifier for any reason deemed necessary by data-review chemist
85	DOD_MDL	Method detection limit for QSM 5.4

Comment: Fields that contain temporary placeholders hold information contributed during the review process that is used in generating reports. This information is kept with the output file so that if the file is ever imported back into the application, reports can be generated without having to rerun the review module.

* Field Names in bold font are added to the EDD during review and included in the exported reviewed EDD file

¹ Data review qualifiers in these cases are added for EPA Region II assessment. ADR.Net does not currently perform EPA Region II assessment.

² Data review qualifiers in these cases are added manually by the user and not assessed by automated data review.

Reviewed EDD Export File Specifications - Sample Analysis (A3) Comma Delimited Text File

Order	Field Name*	Field Description
1	RecordID	Record number.
2	ProjectNumber	Project Number assigned by client.
3	ProjectName	Project Name assigned by client.
4	ClientSampleID	Client field sample identifier.
5	Collected	Date and time sample was collected.
6	MatrixID	Sample matrix.
7	LabSampleID	Internal laboratory sample tracking number for samples and lab generated QC.
8	QCType	Identifies the type of quality control sample, regular field samples are null.
9	ShippingBatchID	Unique identifier assigned to a cooler or shipping container used to transport field samples.
10	Temperature	Temperature in degrees C of the samples as received in the lab.
11	LabAnalysisRefMethodID	Laboratory reference method (i.e. 8260B, 6010B, etc.).
12	PreparationType	Preparation method number (i.e. 3010A, 3510C, etc.).
13	AnalysisType	Defines type of analysis (i.e. dilution, reanalysis, etc.).
14	Prepared	Date and time of sample preparation/extraction.
15	Analyzed	Date and time of sample analysis.
16	LabID	Identifier of laboratory performing analysis.
17	QCLevel	Level of analytical QC associated with analysis (i.e. Level III, etc.).
18	ResultBasis	Indicates if a result is expressed as wet or dry.
19	TotalorDissolved	Indicates if a result is expressed as total or dissolved (for metals only).
20	Dilution	Sample dilution during analysis.
21	HandlingType	Type of leaching procedure, if applicable (i.e. SPLP, TCLP, etc.).
22	HandlingBatch	Unique laboratory identifier for a batch of samples prepared together for a leaching procedure.
23	LeachateDate	Date and time of leaching procedure.
24	PercentMoisture	Percent moisture of sample.
25	MethodBatch	Unique laboratory identifier for a batch of samples with similar matrix and analyzed together by one method. Links samples to matrix spikes and duplicates.
26	PreparationBatch	Unique laboratory identifier for a batch of samples prepared together for analysis by one method. Links samples with method blanks and laboratory control samples.
27	RunBatch	Unique laboratory identifier for a batch of analyses performed on one instrument under the control of on an initial calibration. Links the initial calibration to associated samples.
28	AnalysisBatch	Unique laboratory identifier for a batch of analyses performed on one instrument under the control of a continuing calibration. Links continuing calibrations to associated samples.
29	LabReportingBatch	Unique laboratory identifier for a batch of samples, QC, and calibration standards reported as a group by the lab (i.e. order number, SDG #, etc.).
30	LabReceipt	Date samples received in laboratory.
31	LabReported	Date laboratory hardcopy submitted.
32	DataReviewCompany**	Company running the automated review software.
33	DataReviewDate	Date and time EDD was validated.
34	ValidatedBy**	Person running the automated review.
35	ValidationDate**	Date and time when automated data review qualifiers were reviewed
36	ApprovedBy**	Person performing secondary review of data review flags.
37	ApprovalDate**	Date and time of secondary review by "ApprovedBy".
38	FileName	File name of EDD (same as LabReportingBatch).
39	TagLabSampleID (see comment)	Temporary place holder.
40	TagDetQual (see comment)	Temporary place holder.
41	TagNonDetQual (see comment)	Temporary place holder.
42	TempFlag (see comment)	Temporary place holder.
43	LabMethodCategory	The category of the method, used by EDMS

Comment: Fields that contain temporary placeholders hold values created during the validation process. These values are used in generating reports. This information is kept with the output file so that if the file is ever imported back into the application, reports can be generated without having to rerun the validation module.

* Field Names in bold font are added to the EDD during automated data review and included in the exported data-reviewed EDD file

**Automated data review does not update these fields with any information but these fields are still part of the exported data-reviewed file. These fields may be populated manually by the user from various forms in the application prior to exporting.

*** Date/Time format: MM/DD/YYYY hh:mm